



# Canon PowerShot SD700 E18 Error Replacement

This guide will show you how to clean the lens of the Canon Powershot SD700 IS if you experience the E18 error.

Written By: Aaron Lee



This document was generated on 2019-09-22 01:06:55 PM (MST).

## INTRODUCTION

If you experience the E18 error, go to this site and try their solutions.

<http://www.e18error.com/repair.html>

If you still experience the error, you can follow this guide to disassemble the camera and manually clean the inside of the camera and the lens.

---

### **TOOLS:**

- [Soft Brush \(1\)](#)
- [Tweezers \(1\)](#)

---

## Step 1 — Outside Case



- Turn off camera by pressing power button above the LCD screen.
- Remove the battery and memory card.

## Step 2



- Remove the screws on the bottom of the camera using a 00 Philip's head screw driver

## Step 3



- Remove the screws on the right side of the camera.

## Step 4



- Remove the screws on the left of the camera underneath the "A/V out Digital" cover flap.

## Step 5



- Remove the screws on the bottom of the camera near the battery and the memory card slots.
- This screw is longer than the rest of the screws.

## Step 6



- Remove the front back and side casings from the camera.

## Step 7 — E18 Error



- Once you have removed the front case, clean the lens and area surrounding the lens with a brush. Tweezers can be helpful when removing sand.
- Once clean, reassemble the camera and if the E18 error persists, further disassembly of the camera may be required.
- If you still experience E18 error, follow the lens disassembly guide.

To reassemble your device, follow these instructions in reverse order.