



Canon PowerShot SD700 Outside Case Replacement

Disassembling outside case of Canon PowerShot SD700

Written By: Emilio Rossi



INTRODUCTION

Follow the step-by-step instructions to remove the outside case of your Canon PowerShot SD700

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Outside Case



- Turn off camera by pressing power button above the LCD screen.
- Remove the battery and memory card.

Step 2



- Remove the screws on the bottom of the camera using a 00 Philip's head screw driver

Step 3



- Remove the screws on the right side of the camera.

Step 4



- Remove the screws on the left of the camera underneath the "A/V out Digital" cover flap.

Step 5



- Remove the screws on the bottom of the camera near the battery and the memory card slots.
- This screw is longer than the rest of the screws.

Step 6



- Remove the front back and side casings from the camera.

To reassemble your device, follow these instructions in reverse order.