



Canon PowerShot SD800 IS LCD Assembly Replacement

Remove the LCD and back light.

Written By: Jeremy Rabaino



INTRODUCTION

Remove the back cover before removing LCD.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Back Cover



- Remove one 2.25mm screw on the bottom.

Step 2



- Remove two 2.25mm screws on the right side looking from the front.

Step 3



- Remove one 4.7mm screw on the side with the AV output.


Step 4



- Pull off the back cover.


i The back cover tends to stick in the top corner (near the mode dial) due to a metal clip. Jiggle the cover side to side as you pull it out.

Step 5 — LCD Assembly

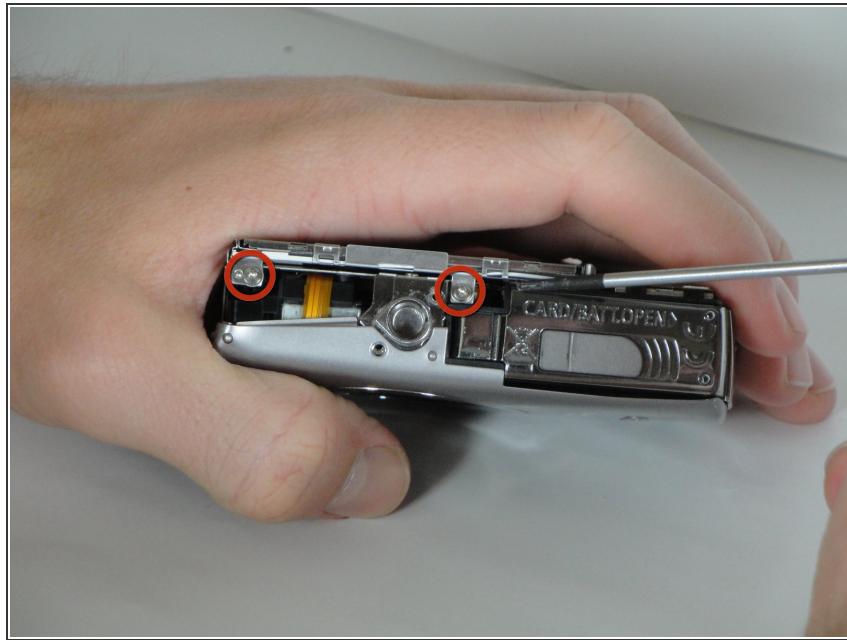

- Remove 2 2.4mm screws on bottom.


Step 6

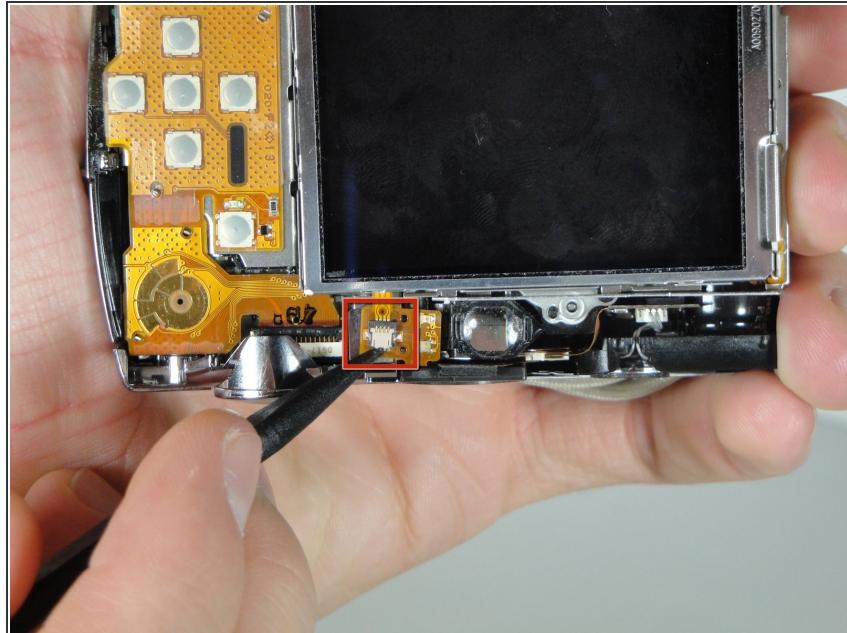

- Follow the small data cable to where it connects to the camera.
- Lift the back white portion to unlock the cable.
- The cable should easily slide out.


⚠ The connector is very fragile. Use caution when lifting the lock.

Step 7

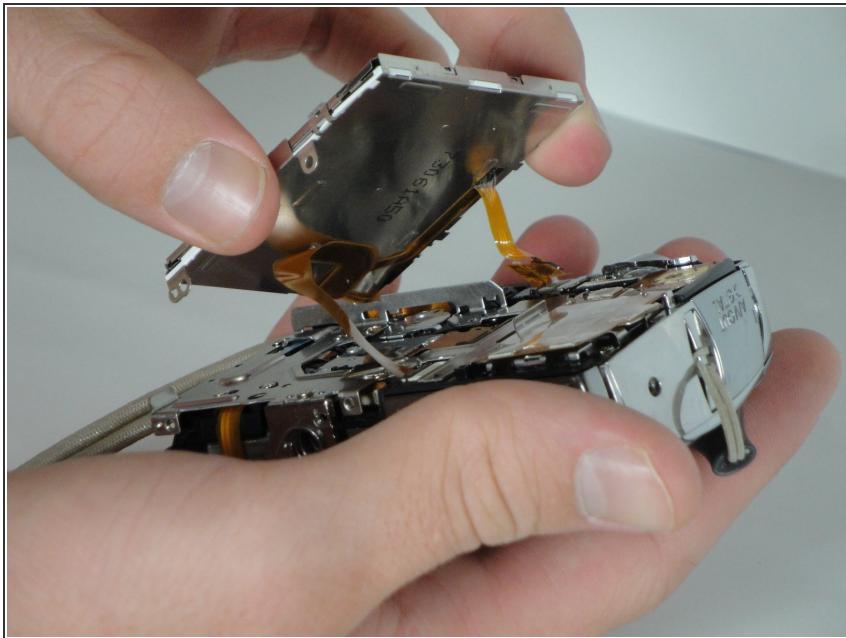

- Gently lift LCD display off.
- ⚠** There will be two data cables still attached to the camera. Do not break them.
- ⓘ** There may be a loose strip of metal along the inner side of the LCD display for a secure fit.

Step 8

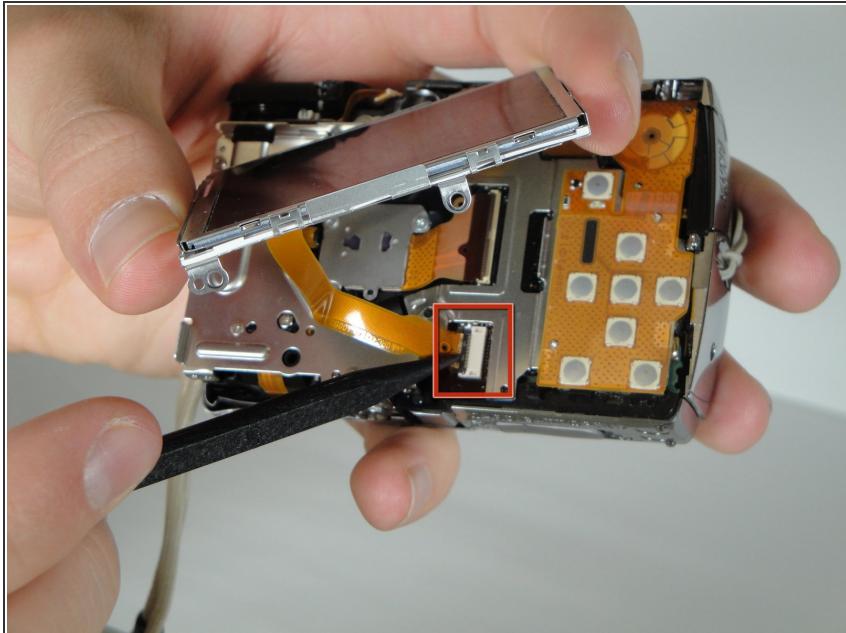

- Follow the larger cable to where it connects to the camera.
- Lift the front black portion of the connector to unlock the data cable.
- The cable should easily slide out.
- ⚠** The connector is very fragile. Use caution when lifting the lock.

To reassemble your device, follow these instructions in reverse order.