




# Canon PowerShot SD850 IS Function Set Button Replacement

Written By: iDeleted

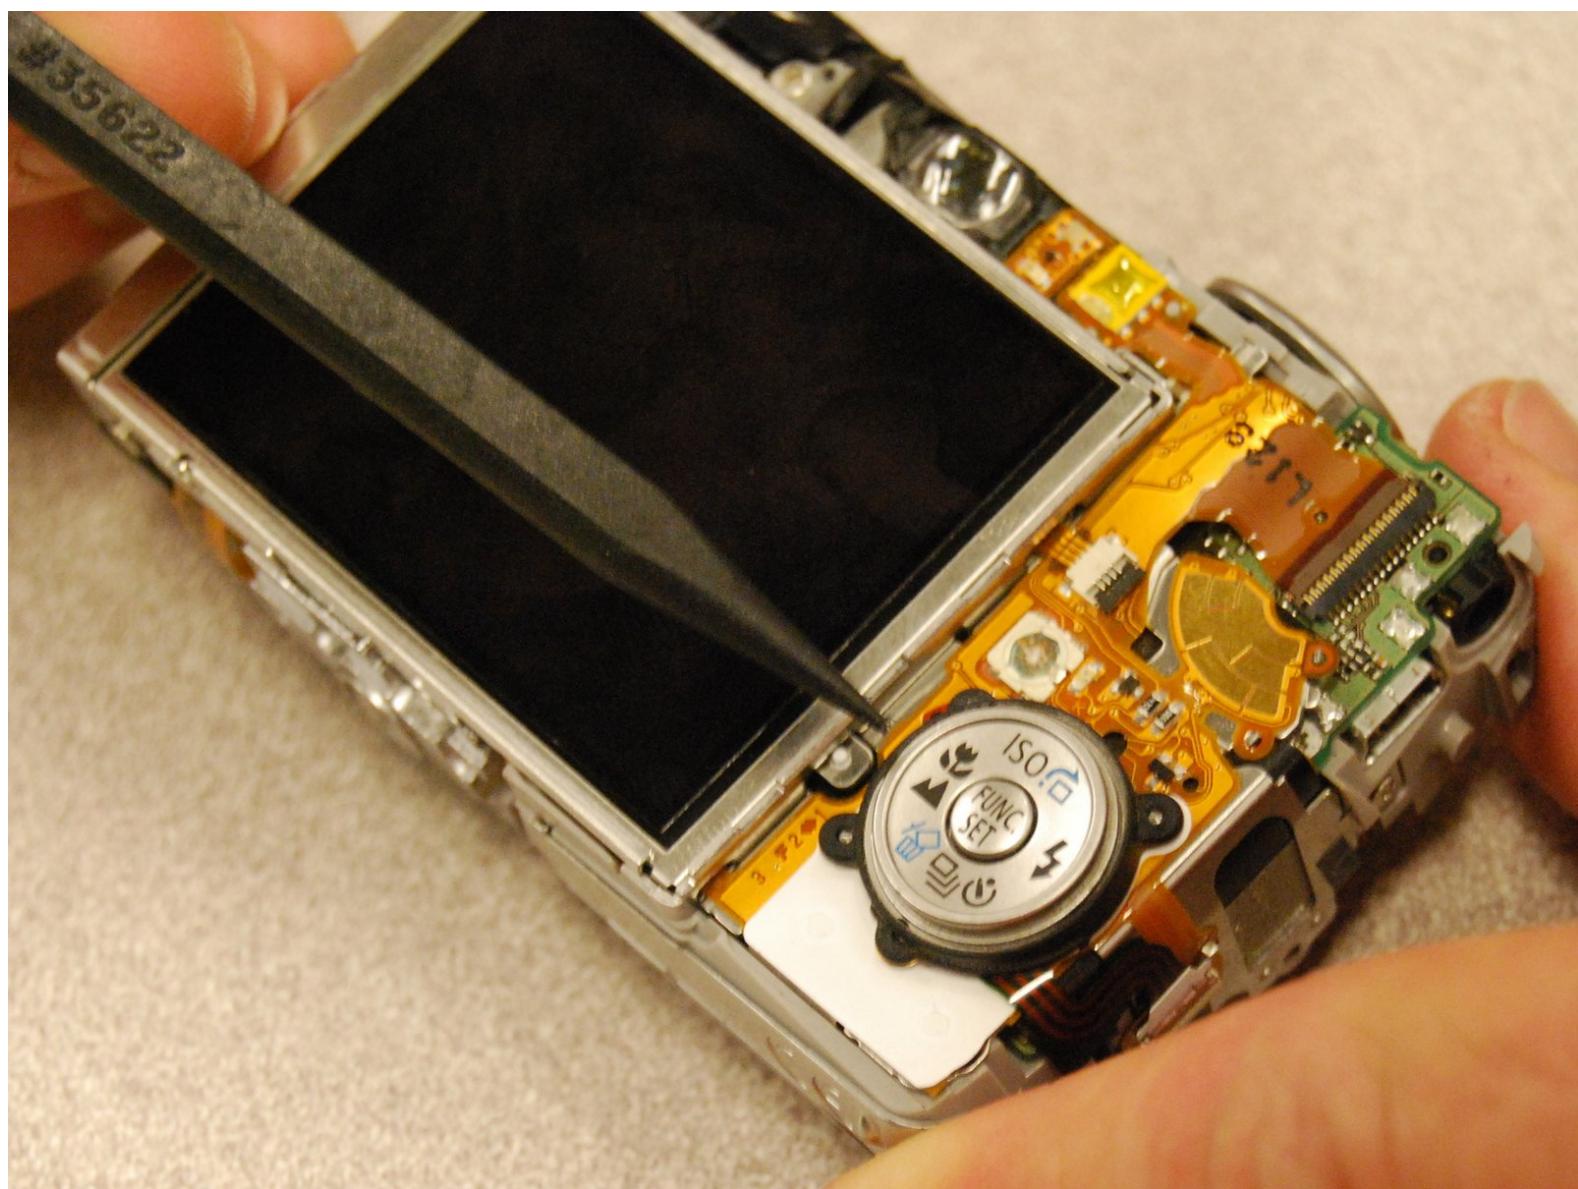

## INTRODUCTION

This manual is for replacing the function/set button located on the back of the camera.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Battery



- Using your fingernail, slide the light gray tab towards edge of camera.
- Slide the light gray door and pull up to open the door.
- *(i)* In the camera shown in the photos, there is not a Memory Card or Battery.
- Both Battery and Memory Card slots should be visible.


## Step 2



- Use your fingernail and slide the small brown tab towards the edge of the camera.
- The battery will pop up.
- Pull battery straight out of battery holder.

 When putting the battery back in, make sure it the battery is oriented so the terminals connect.

## Step 3 — Case

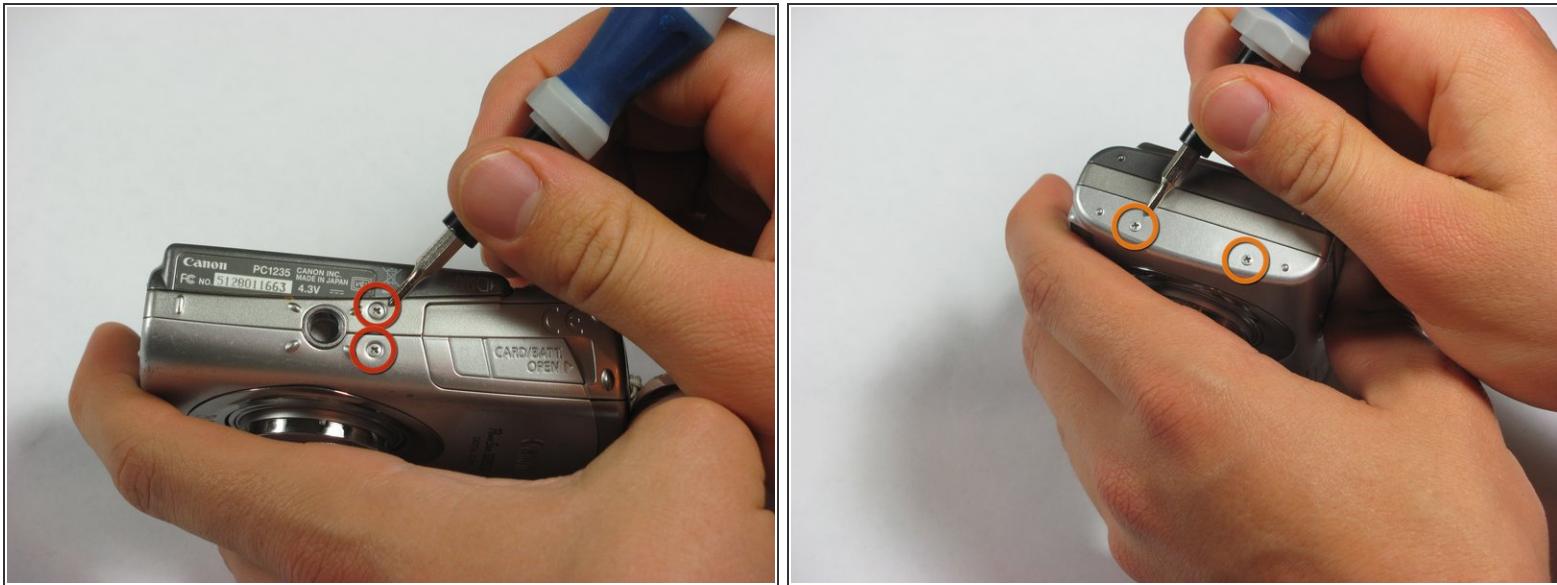


- Remove the following 4 screws:
  - Two 2.8 mm Phillips #00 at the bottom of the camera.
  - Two 2.75 mm Phillips #00 on the opposite side of the wrist strap.

## Step 4




- Open the A/V OUT DIGITAL flap on the side of the wrist strap.
- Remove the 2.75 mm Phillips #00 under the A/V OUT DIGITAL flap on the side of the wrist strap.

## Step 5

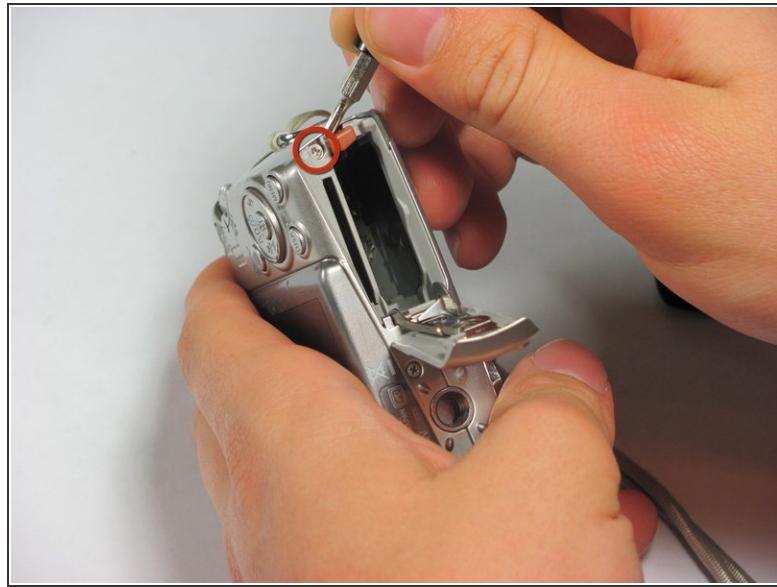


- On the bottom of the camera, use your fingernail to slide the light gray tab towards the edge of the camera.
- Slide light gray door and pull up to open the door.
- Remove the 8.35 mm Phillips #00 next to the brown tab that holds the battery.

## Step 6

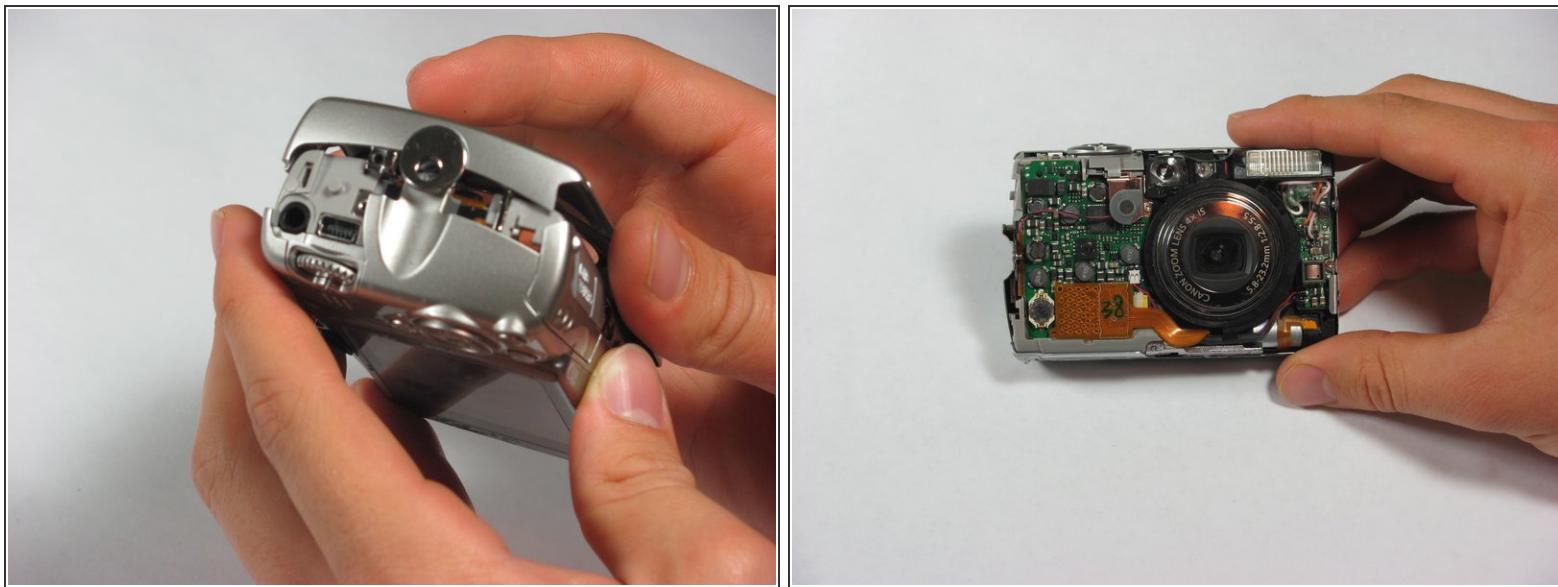


- Gently pull the front cover straight out from the camera. This will expose the wiring on the front of the camera.

## Step 7

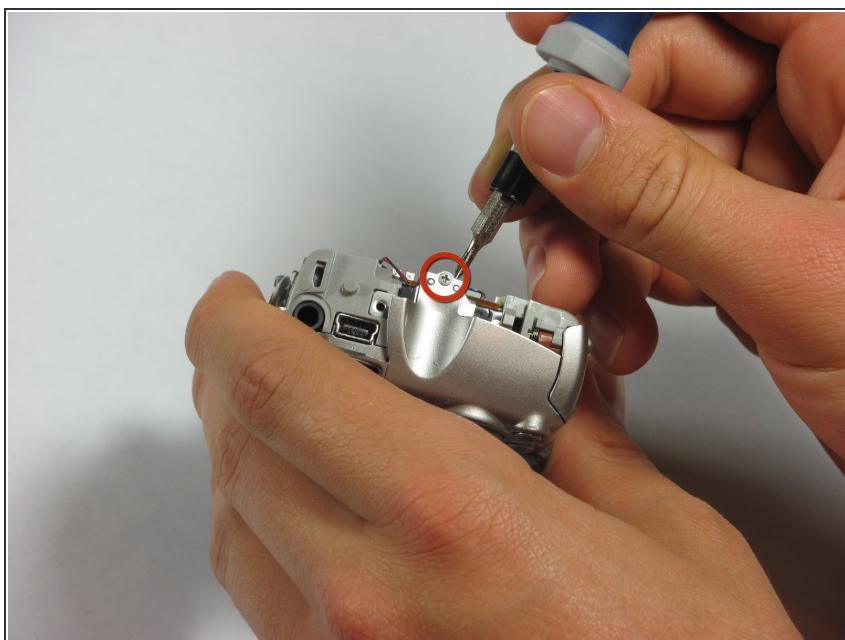


- Remove the 2.75 mm Phillips #00 next to A/V OUT DIGITAL.

## Step 8

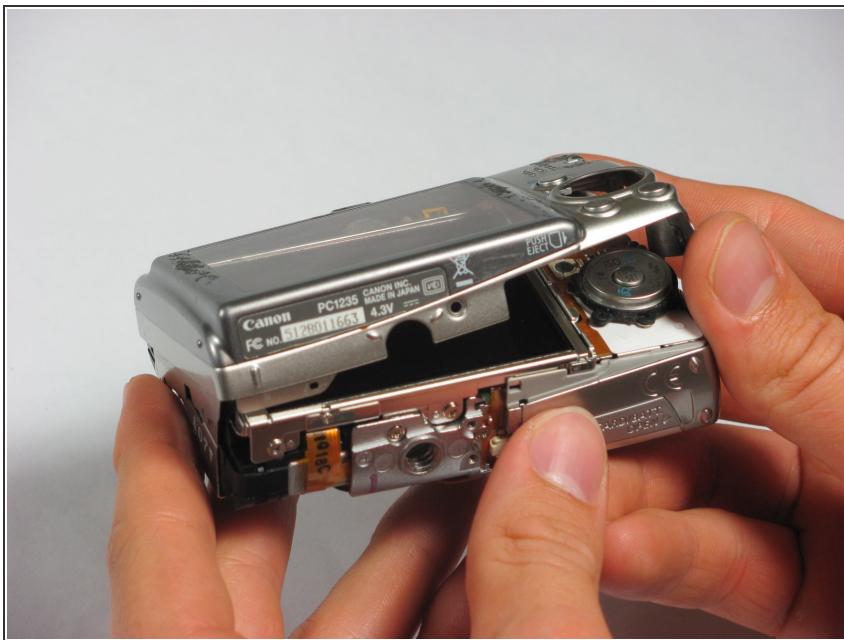

- Slide the back casing (with the screen protector) off to reveal the LCD and back wiring.

## Step 9 — Function Set Button

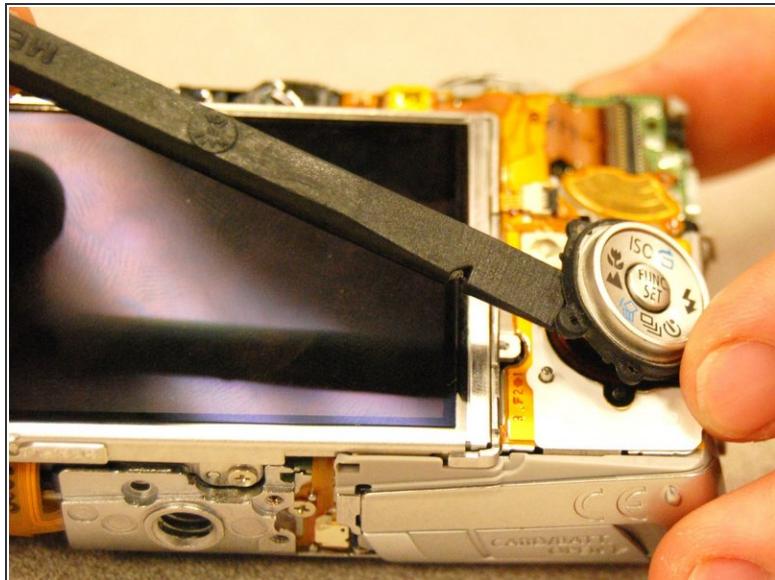


- Identify and remove the plastic function set button. Do this by gently prying up as indicated in the photo.

## Step 10



- Lift the function set button ribbon cable from the two guide pins.

## Step 11

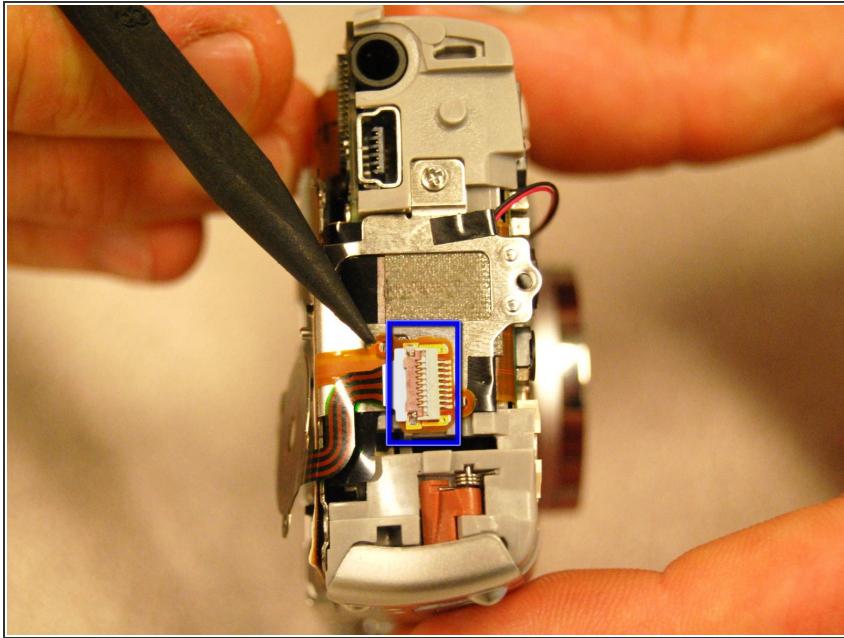

- Remove the ribbon cable by lifting on the flat tab and pulling the ribbon cable from the connection.

To reassemble your device, follow these instructions in reverse order.