



Canon PowerShot SD960 IS Battery Replacement

This guide will teach you how to remove the battery in your camera in order to replace it or to access other components of your device.

Written By: D'Anne Gil



This document was generated on 2019-09-28 07:20:50 PM (MST).

INTRODUCTION

If your camera battery does not charge correctly, replacing the battery in your device may be the solution to your problem.

Step 1 — Battery



- Turn the camera over so that the bottom of the camera is facing up.

Step 2



- Apply slight pressure to the battery door and slide your finger over the release button in the direction of the arrows to open the battery door.
- The battery door will open, allowing you to access the battery.

Step 3



- Push the the orange battery lock back to release the battery.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.