



Canon PowerShot SX150 IS Battery Removal

How to remove the batteries on a Canon PowerShot SX150 IS.

Written By: Sam Blanton



Step 1 — Canon PowerShot SX150 IS Battery Removal



- Locate the battery cover on the bottom of the camera.
- Slide the battery compartment cover the direction the arrow is pointing to open the compartment.
- Remove batteries.

To reassemble your device, follow these instructions in reverse order.