



Canon PowerShot SX150 IS Screen Replacement

Replace the screen of your Canon PowerShot SX150 IS.

Written By: Madison King



INTRODUCTION

This guide will describe how to remove and replace the screen on your Canon PowerShot SX150 IS. This guide can be used to fix a cracked screen, or dead pixels in the screen.

TOOLS:

- [Tweezers \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

PARTS:


- [Screen Replacement \(1\)](#)

Step 1 — Screen




- Remove the 2 outer 5mm screws using the size J000 screwdriver.
- Remove the one 5mm screw on the left and the two 4mm screws on the bottom.
- Remove the two 2mm screws located above the screen on the back of the camera.

Step 2

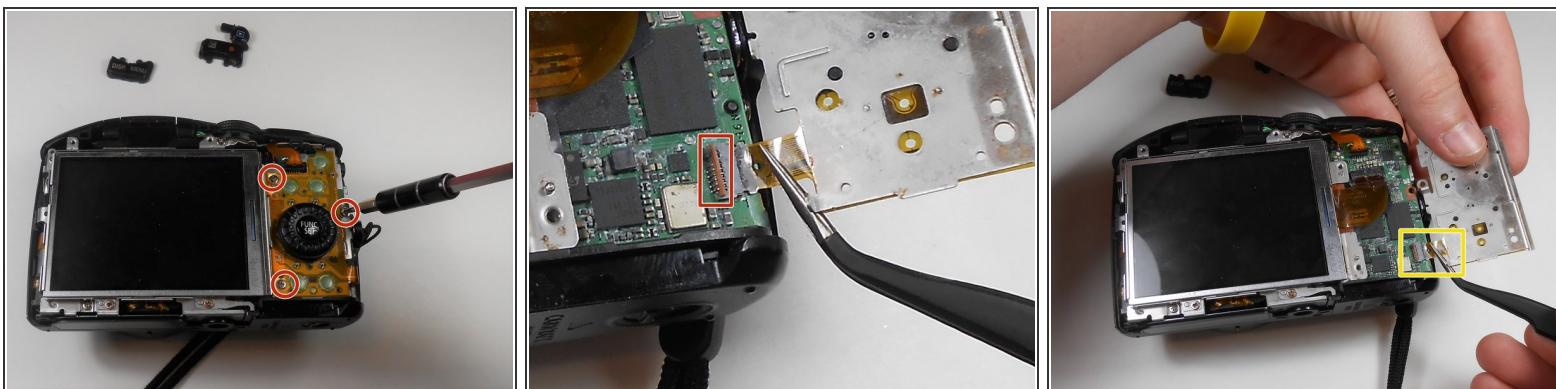


- Remove the plastic panel surrounding the screen. (it should pop off easily)
- Remove the one 5mm screws on the right using the size J000 screw driver from the button plate. Remove the two 4mm screws on the left, then move the button plate out of the way.
- carefully unlatch and then detach the button plat's flex ribbon from the motherboard.

Step 3

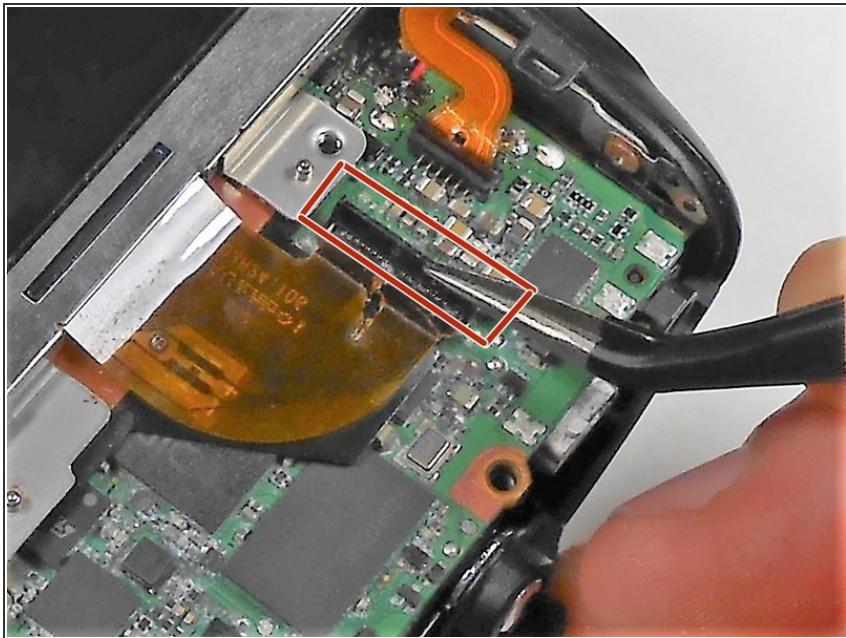

- Lift the flex ribbon lock gently with your finger.


Step 4

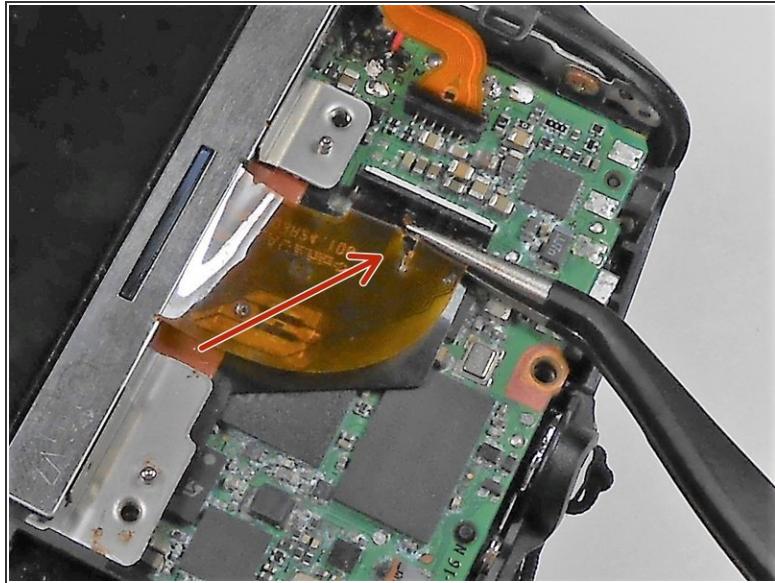

- Use the tweezers to carefully detach the screen's flex ribbon from the circuit board.


⚠ Any small tear could ruin the flex ribbon. Be very gentle while removing it.

Step 5

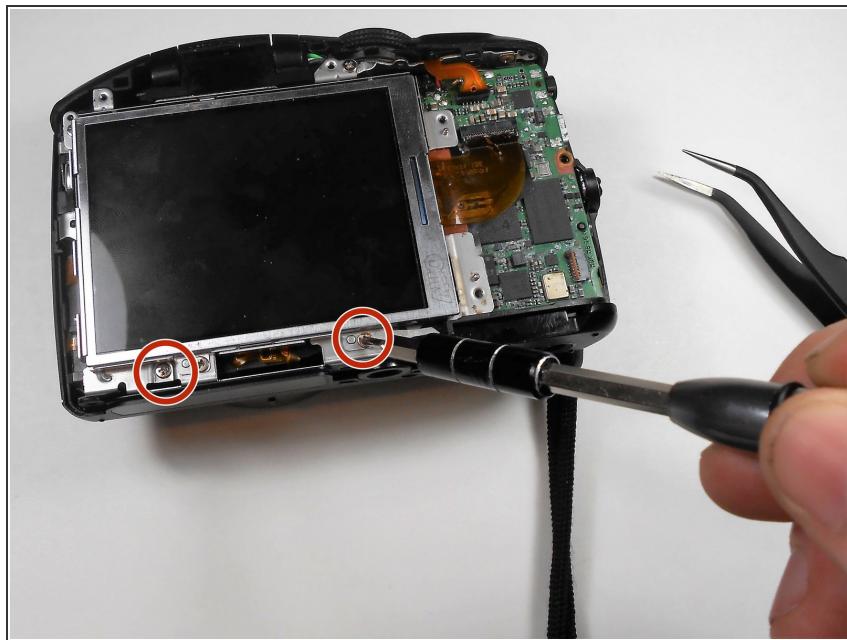

- Remove the two 2mm screws from the bottom of the screen with the size J000 screw driver.

Step 6

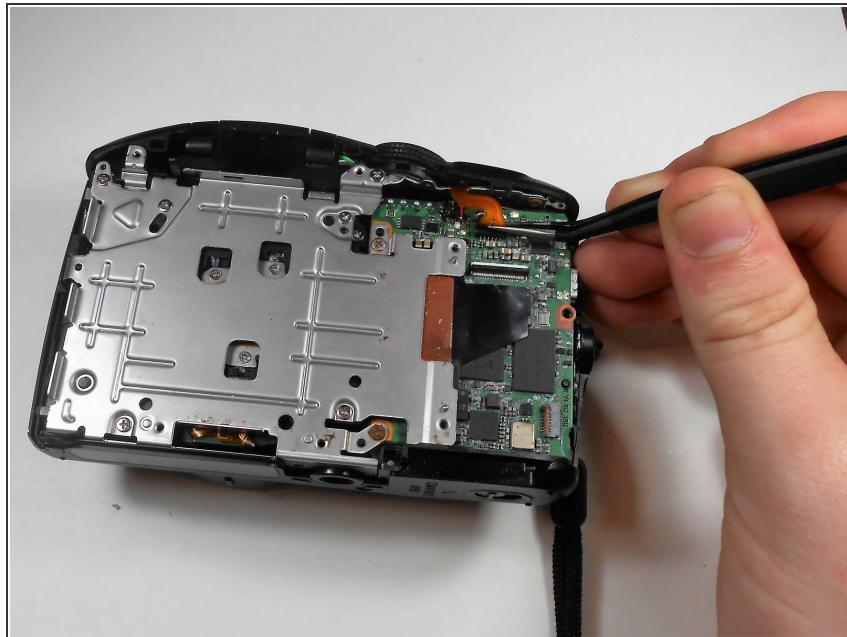

- Lift the screen out.

To reassemble your device, follow these instructions in reverse order.