



# Canon PowerShot SX230 HS LCD Screen Replacement

This guide will show you how to replace the camera's LCD screen effectively.

Written By: KeShayla Thomas



## INTRODUCTION

Having trouble with your LCD screen? Use this guide to replace the camera's screen. No background information is necessary.

### TOOLS:

- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — LCD Screen



- Remove the two 2.5 mm screws located on the right side of the camera using the Phillips #000 Screwdriver
- Unscrew the two 2.5 mm screws located on the side of the camera. Then, remove the two black 2.5 mm screw located on the bottom of the camera.

## Step 2




- Pull off the back casing and carefully pull the ribbon cable that connects the mode dial and the motherboard using your fingers.

## Step 3




- On the inside of the camera, there will be a pink and silver screw. Unscrew the silver 2.5 mm screw only.
- Remove the screw located right above the LCD screen.

## Step 4

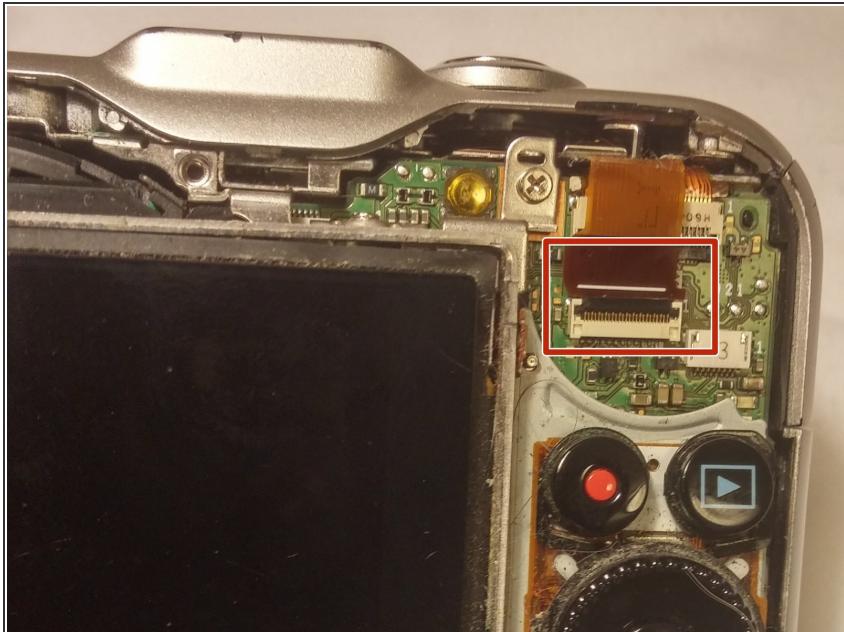

- Using your fingers, carefully remove the ribbon cable located at the top right of the camera. Then pull off the camera's front casing.
-  Make sure the battery/SD Card panel is open.

## Step 5

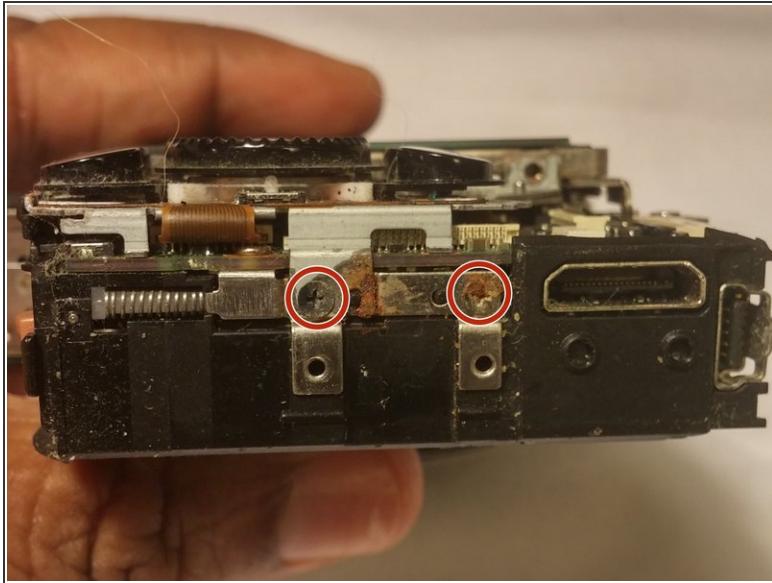

- Remove the two 2.5 mm screws that secures the camera buttons to the camera located on the right side of the camera. Then, remove the screw located on the side of the screen. Now, locate the screw under the LCD screen and remove it.

To reassemble your device, follow these instructions in reverse order.