



Canon PowerShot SX260 HS Battery Replacement

During this how to guide we will be showing users how to replace the battery in their Canon PowerShot SX260_HS

Written By: Tyler Kelch



This document was generated on 2019-09-26 03:05:00 PM (MST).

Step 1 — Battery




- With the device fully assembled, hold the camera with both hands with the bottom of the camera facing toward you.

Step 2



- Place your right thumb on the sliding panel that is marked Card/Battery
- Slide the panel to your right and you will hear a slight click. This is normal and you did not damage the device.

Step 3

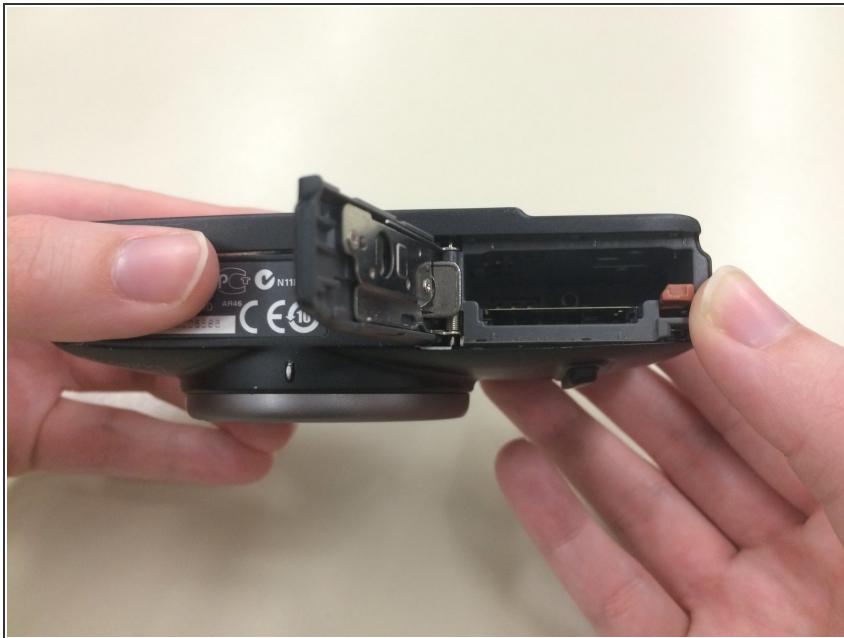

- Remove your thumb from the Card/Battery panel and lift the panel 90 degrees.
- The battery will eject slightly by the force of a spring.
- Remove the battery and replace.

To reassemble your device, follow these instructions in reverse order.