



# Canon PowerShot SX50 HS Battery Replacement

This is a necessary step before continuing to disassemble your camera any further. The guide will tell you how to remove the battery pack.

Written By: Megan Rund



This document was generated on 2019-09-26 03:25:18 PM (MST).

## INTRODUCTION

Remove the battery of the Canon PowerShot SX50 HS.

## Step 1 — Battery



- Locate the battery compartment on the bottom of the camera.
- Push the latch on the outside of the battery door to the right to get to the battery pack inside.

## Step 2



- Pull the brown latch on the inside of the battery door towards your palm (to the left). The battery pack should pop out (battery not pictured).
- Now remove the battery pack from the camera with your fingers.

To reassemble your device, follow these instructions in reverse order.