



# Canon PowerShot SX520 HS Battery Replacement

Below are steps to removing the battery.

Written By: Kyle Crowley



## INTRODUCTION

If your camera is not powering on, your battery may be dead. This page is a step-by-step guide on how to remove and replace the battery.

## Step 1 — Battery



- Using your fingers, slide the battery compartment door to the right until it unlocks.

## Step 2



- Rotate the door along hinges to open.
- Take out the battery with your fingers.

To reassemble your device, follow these instructions in reverse order.