




# Canon Powershot A70 Front Exterior Panel Disassembly

Written By: Brian

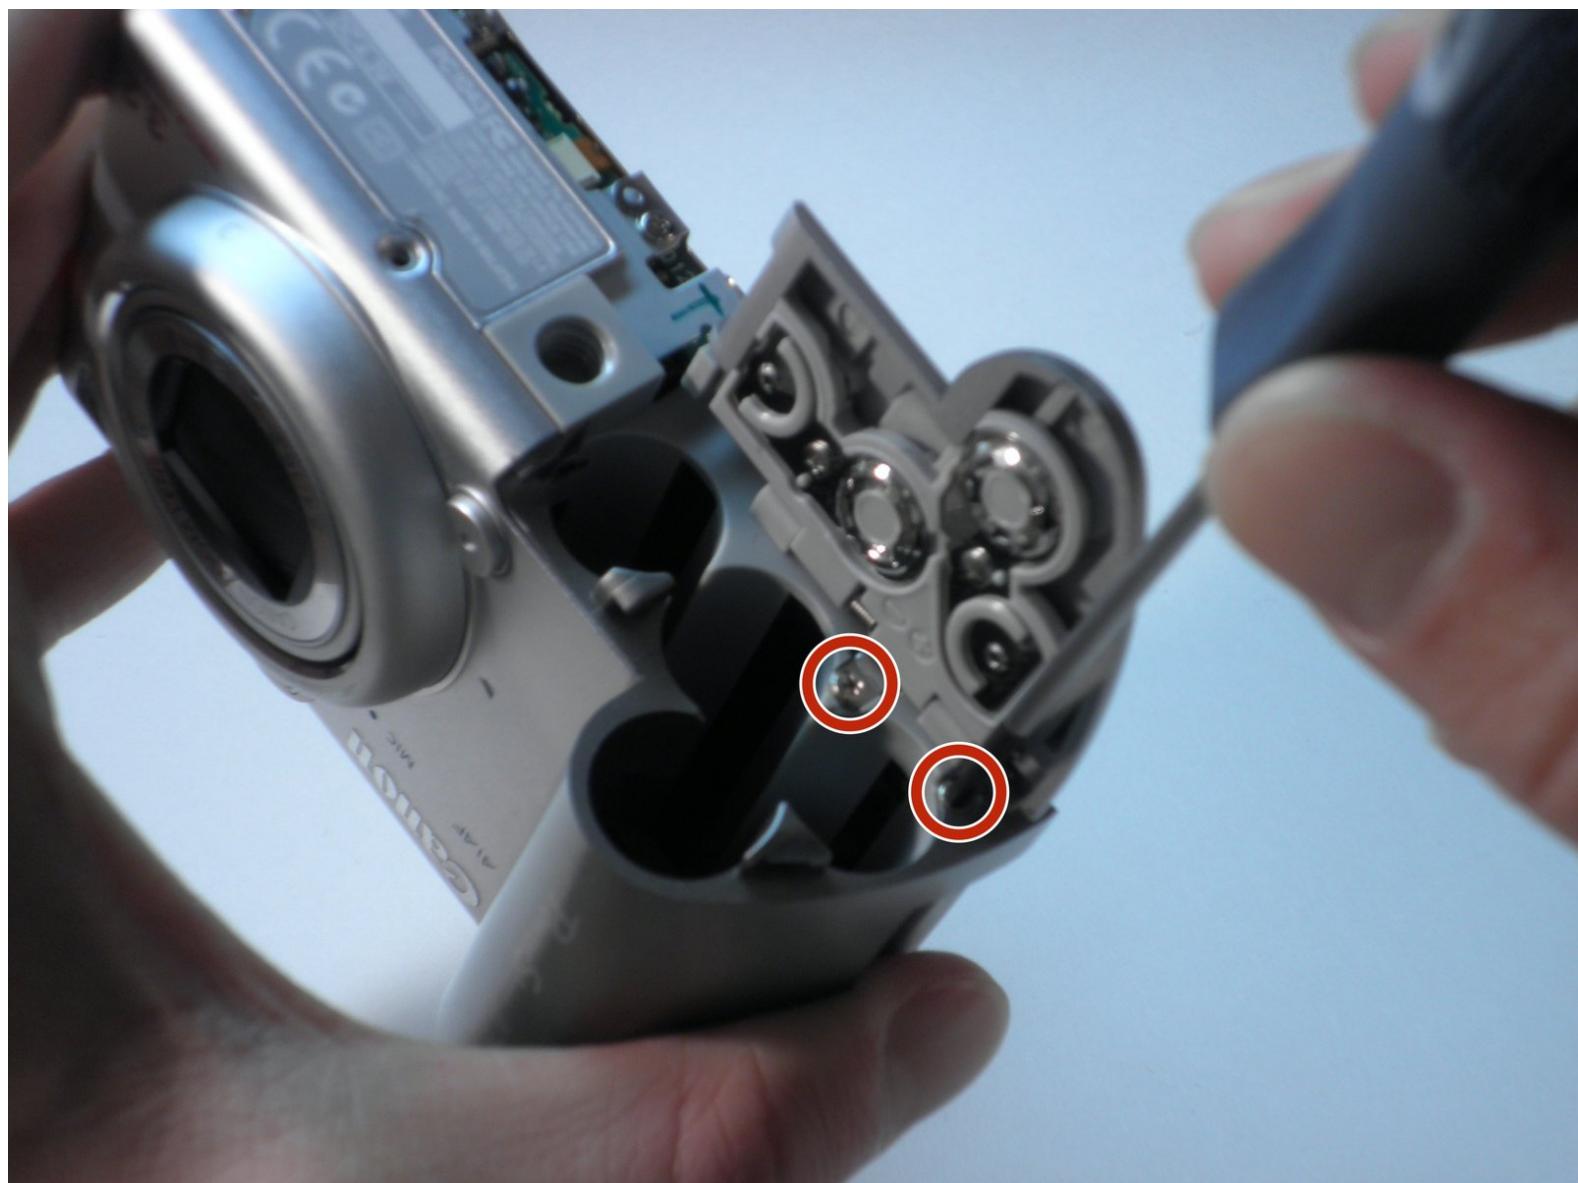

## INTRODUCTION

How to remove the front panel.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Shutter/Speaker Panel



- Open the battery compartment and remove the batteries.
- Remove the two screws that are deep in the battery compartment.


## Step 2



- Open the CF compartment and remove the top screw.
- The panel, that holds the shutter button and zoom, will come off.

**⚠** Be careful! There are two small wires connecting the speaker to the body of the camera. These are very delicate so proceed with caution. *Do not remove.*

## Step 3 — Rear Exterior Panel

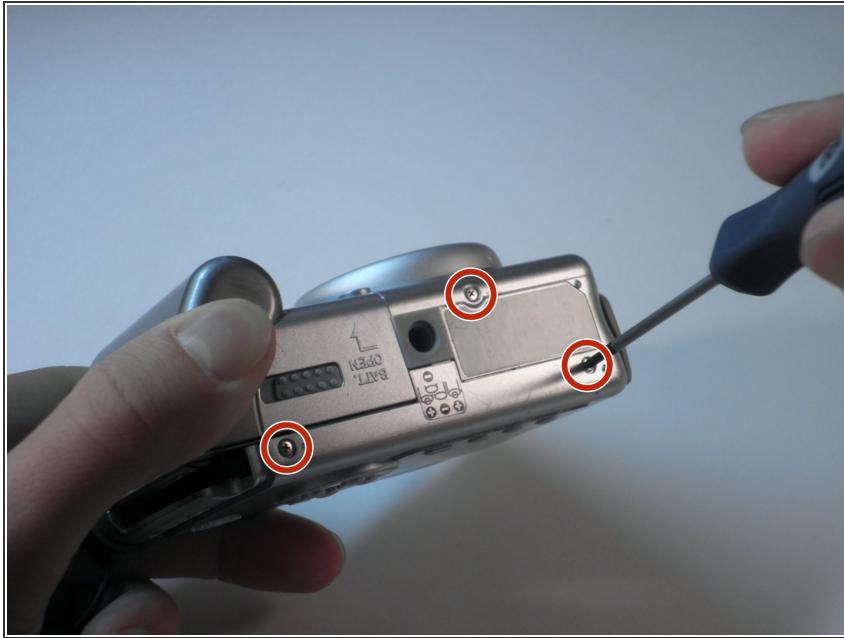

- Unscrew the three small screws on the bottom of the camera.
- Remove the wrist strap.

## Step 4



- Remove the screw in the CF compartment.

## Step 5



- Open the rubber Digital AV Out compartment flap.
- Pry the battery with the iFixit opening tool.
- Carefully pull out the battery with two fingers.
- Remove the two screws that are now visible.

## Step 6



- Starting from the bottom, carefully pull the casing off.
- The casing will now pivot at the top.
  - There are three catches that hold the back casing to the body.
- *(i)* You may have to pull with some force. The rear panel will make a snapping noise when it separates from the body.

## Step 7



- The interior of the camera should look like this.

## Step 8 — Canon Powershot A70 Front Exterior Panel Disassembly



- Remove the two screws at the top of the battery compartment.

## Step 9



- With your right thumb, pull back on the tab while using your left hand to pull the face of the camera away from the body.

To reassemble your device, follow these instructions in reverse order.