



Canon Powershot A70 Shutter/Speaker Panel Replacement

Written By: Shalan Ertis



INTRODUCTION

This guide will explain the simple process to remove the panel on top of the camera, and to gain access to the speaker.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Shutter/Speaker Panel



- Open the battery compartment and remove the batteries.
- Remove the two screws that are deep in the battery compartment.

Step 2



- Open the CF compartment and remove the top screw.
- The panel, that holds the shutter button and zoom, will come off.

⚠ Be careful! There are two small wires connecting the speaker to the body of the camera. These are very delicate so proceed with caution. *Do not remove.*

To reassemble your device, follow these instructions in reverse order.