




# Canon Powershot A70 Speaker Replacement

Written By: Laura Greek

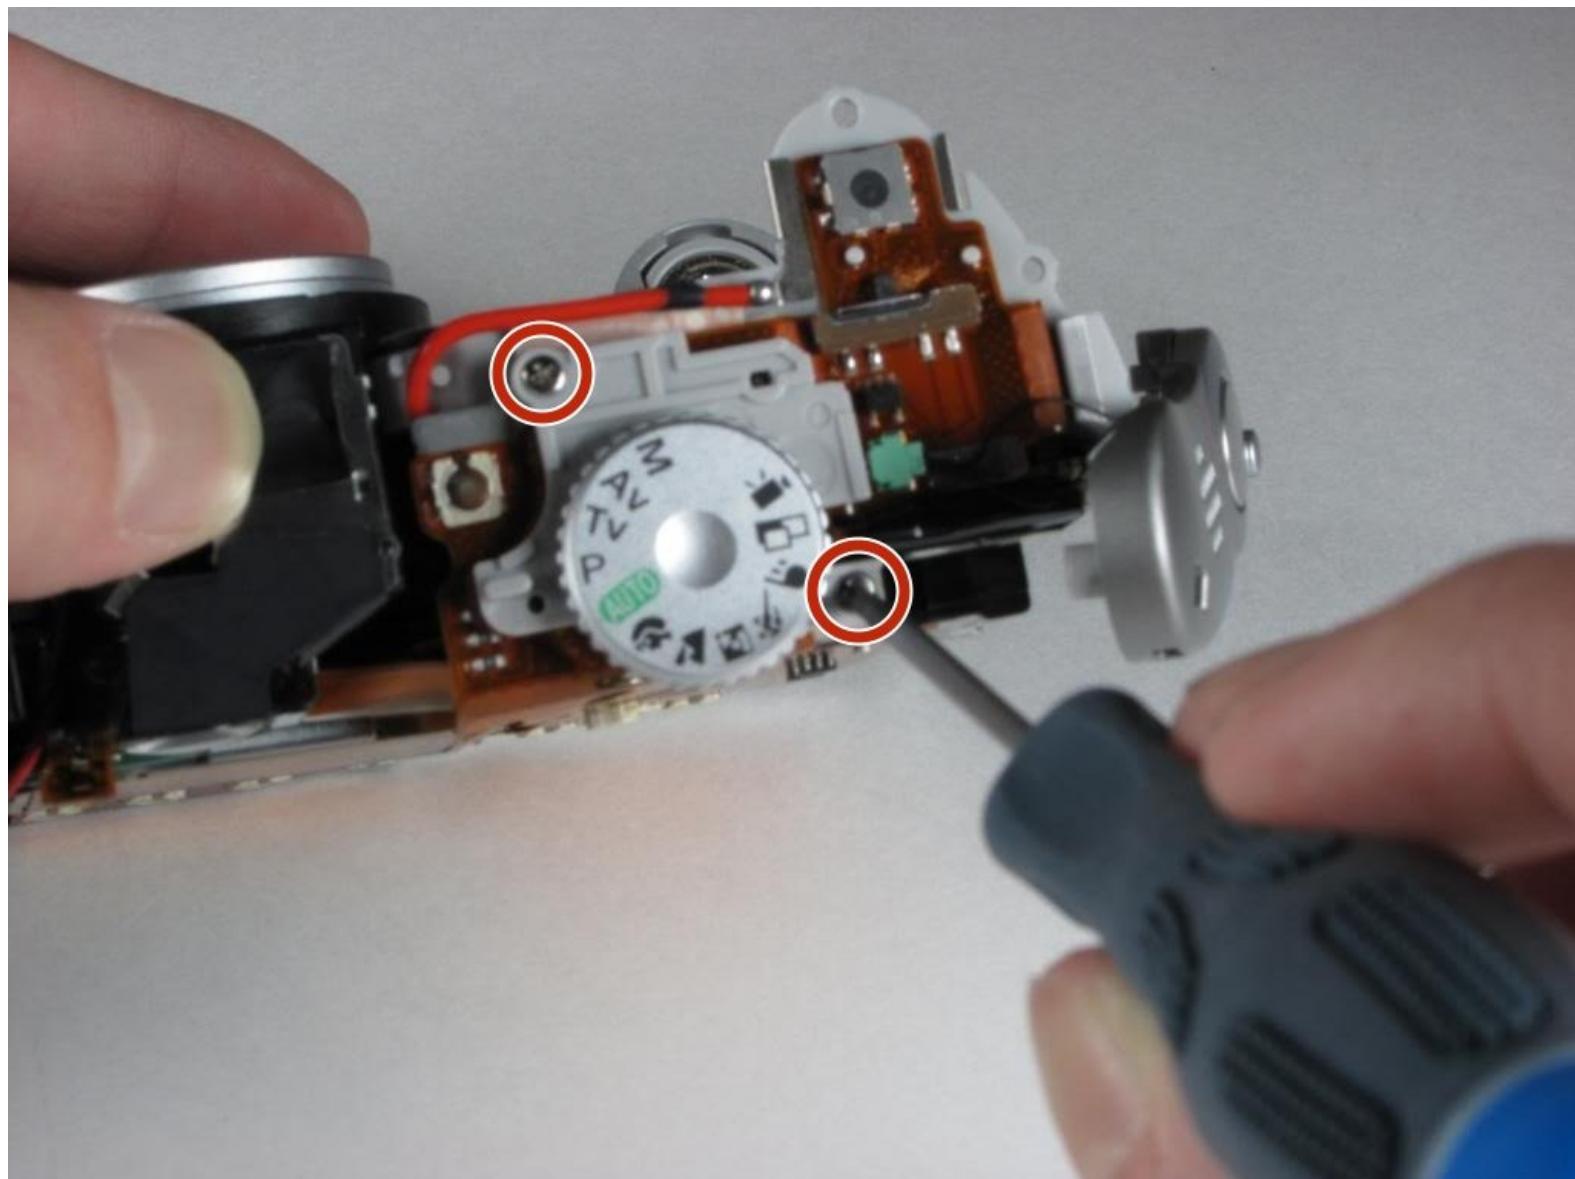

## INTRODUCTION

This guide will help Canon Powershot A70 owners replace the speakers, if the camera is not giving off sound.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Shutter/Speaker Panel



- Open the battery compartment and remove the batteries.
- Remove the two screws that are deep in the battery compartment.


## Step 2



- Open the CF compartment and remove the top screw.
- The panel, that holds the shutter button and zoom, will come off.

**⚠** Be careful! There are two small wires connecting the speaker to the body of the camera. These are very delicate so proceed with caution. *Do not remove.*

## Step 3 — Rear Exterior Panel

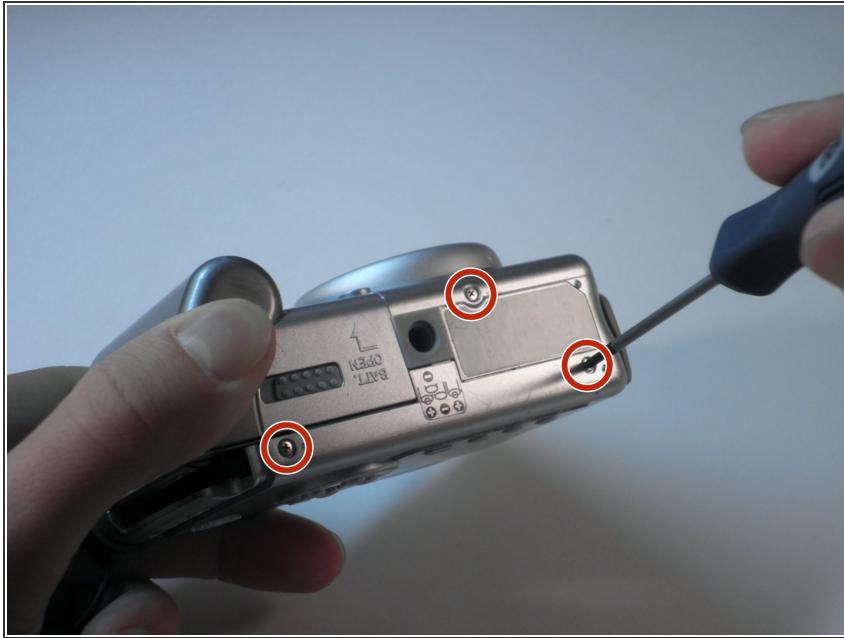

- Unscrew the three small screws on the bottom of the camera.
- Remove the wrist strap.

## Step 4



- Remove the screw in the CF compartment.

## Step 5



- Open the rubber Digital AV Out compartment flap.
- Pry the battery with the iFixit opening tool.
- Carefully pull out the battery with two fingers.
  - Remove the two screws that are now visible.

## Step 6



- Starting from the bottom, carefully pull the casing off.
- The casing will now pivot at the top.
  - There are three catches that hold the back casing to the body.
- *(i)* You may have to pull with some force. The rear panel will make a snapping noise when it separates from the body.

## Step 7



- The interior of the camera should look like this.

## Step 8 — Canon Powershot A70 Front Exterior Panel Disassembly




- Remove the two screws at the top of the battery compartment.

## Step 9




- With your right thumb, pull back on the tab while using your left hand to pull the face of the camera away from the body.

## Step 10 — Speakers

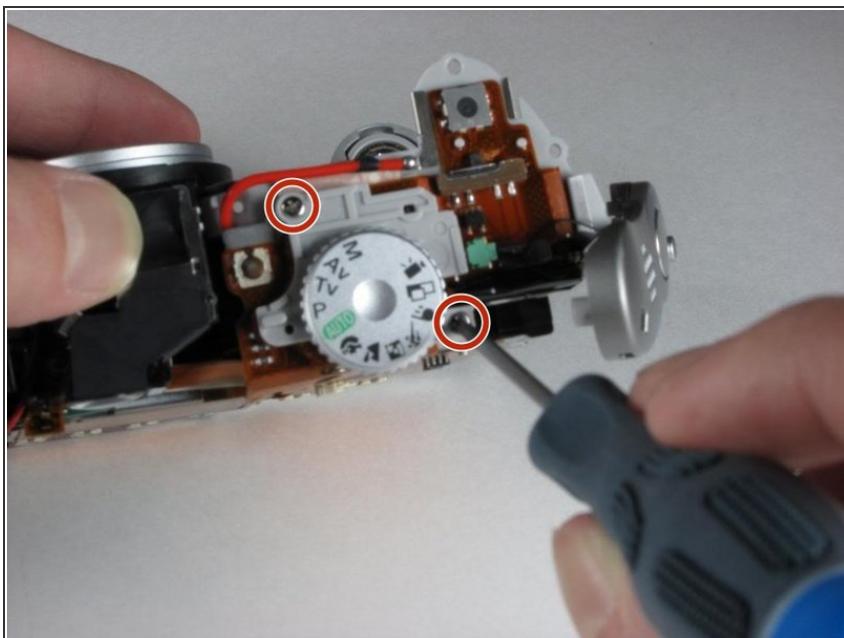

- Remove the two clearly visible screws from the control dial.
- The dial should come off easily.

## Step 11

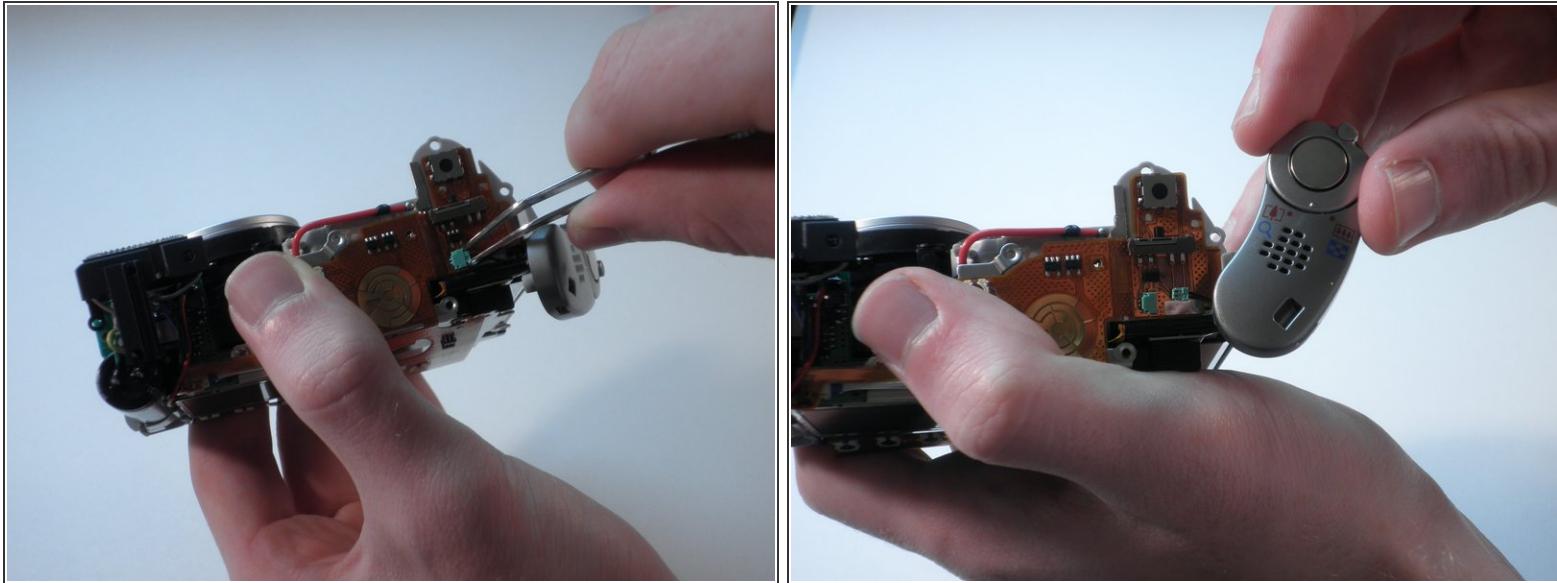

- You should be able to see the two small wires connecting the speaker to a small green plug
- With tweezers, carefully unplug the wires from the plug. The wire should slide straight out
- Carefully replace the broken speaker/shutter panel with a new one

## Step 12



- The removed panel should look like this

To reassemble your device, follow these instructions in reverse order.