



# Canon Powershot Pro1 Lens Replacement

This guide shows you how to replace the camera lens of your Canon Powershot Pro1 with step-by-step instructions.

Written By: Seana Meegan



## INTRODUCTION

The camera lens is the main mechanism which allows the camera to capture images. The lens may need to be replaced if it has scratches or is cracked. These issues could lead to blurry photos or introduce unwanted lines in the photos. This guide walks you through the steps necessary to replace the lens. When following this guide, be sure to pay close attention to the order in which you remove the components. Also, be careful when removing the lens housing. The material is very delicate and is easily damaged.

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Lens



- Remove the 1.5 mm Phillips #1 screws which surround the lens.

## Step 2



- Remove plastic ring with the red strip around it.
- Remove the 1.5 mm Phillips #1 screws which lie underneath the ring.

## Step 3



- Remove the lens cover.
- Remove the additional 1.5 mm Phillips #1 screws from underneath the lens cover.

## Step 4



- Use the nylon spudger to remove the ring holding the lens in place.

## Step 5



- Once the ring around the lens is removed, take out the lens

To reassemble your device, follow these instructions in reverse order.