



# Canon Powershot SX30 IS LCD Panel Front Cover Replacement

A Replacement Guide for the Front Frame of the casing for the LCD display panel.

Written By: Ellis DeVoe



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — LCD Panel Rear Cover



- Turn the camera so the back of it is facing you.
- Pull the LCD screen towards you in order to open it,

## Step 2



- Unscrew the two 3 mm screws shown on the left side of the LCD screen panel using a Phillips screwdriver.

## Step 3




- Unscrew the two 3 mm screws shown on the right side of the LCD screen panel.

## Step 4




- Using the plastic opening tool, remove the rear case of the front LCD cover.

## Step 5

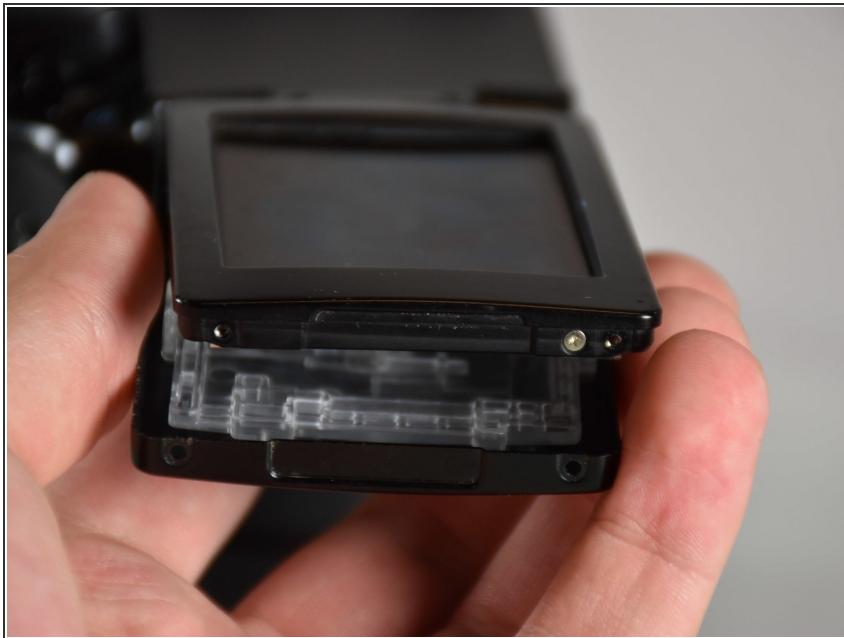

- Pull off the back panel of the LCD screen and the plastic wire protector. Then replace the back panel.

## Step 6 — LCD Panel Front Cover

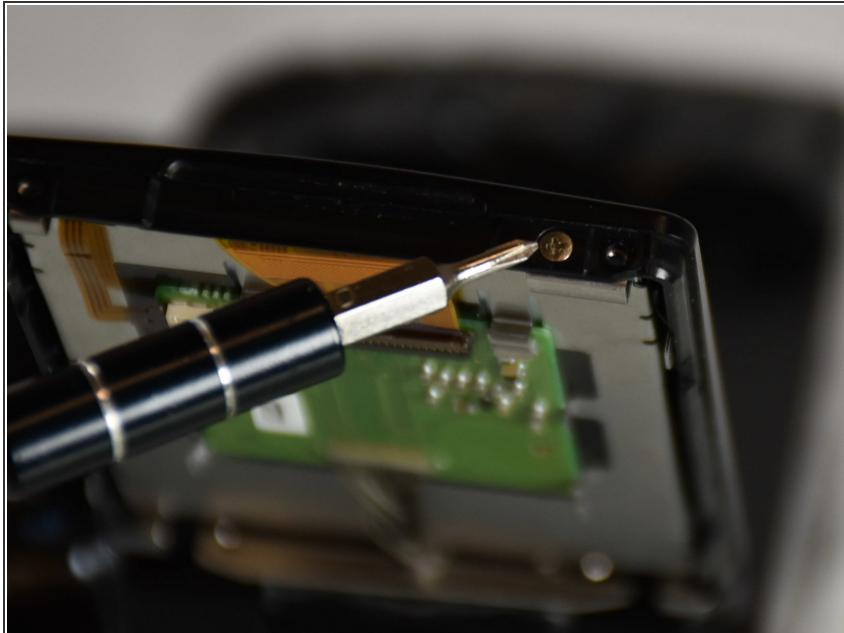

- Unscrew the 2mm screw on the outer edge of the panel

## Step 7



- Unscrew the 3mm screw on the inner edge of the panel. This is easily done by rotating the screen to be perpendicular to the body of the camera, but be careful not to damage the wires or the circuit board.
- The panel will fall right off

To reassemble your device, follow these instructions in reverse order.