



Canon Powershot SX500 IS Battery Replacement

How to replace a dead battery in order to bring power back to the camera.

Written By: Jody Wilkerson



INTRODUCTION

The user will need a replacement battery or fully charged battery to insert into the camera. No tools required.

Step 1 — Battery



- Rotate the camera to expose the underside of the camera.

Step 2



- Slide the rounded rectangle tab to the left to release the battery cover.

Step 3



- Push the small orange tab forward to release the battery (Battery is ready for removal).

To reassemble your device, follow these instructions in reverse order.