



# Canon SX40 HS camera Flash Cover Replacement

Use this guide to replace the flash cover of the camera. This piece could break by dropping the camera on the top surface.

Written By: John Bui



This document was generated on 2019-09-26 02:58:56 PM (MST).

 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Flash Cover



- Extend the flash cover upwards and remove the 4 mm black screw on the left side with a phillips #00 screwdriver.

## Step 2



- Extend the flash cover upwards and remove the 4 mm black screw on the right side with a phillips #00 screwdriver.

## Step 3



- Using a plastic opening tool, remove the plastic cover. Removing this piece is very difficult as it can only be removed when the flash is in the down position, remove with caution.

## Step 4



- When the flash cover is removed, remove the 6 mm silver screw on the right side with a phillips #00 screwdriver.

## Step 5



- When the flash cover is removed, remove the 6 mm silver screw on the left side with a phillips #00 screwdriver.

## Step 6



- Once all four screws are out, you can replace the external flash cover or the internal flash light.

To reassemble your device, follow these instructions in reverse order.