



Canon Sure Shot Z115 Caption Film Replacement

This guide will show how to replace the film in a Canon Sure Shot Z115 Caption.

Written By: Kevin BesharaFlynn



INTRODUCTION

Film is an essential part of using a camera. As you use the camera, the film will get used up. This guide will show you how to replace the film with a new one.

Step 1 — Film




- On the side of your camera, push the strip of black plastic located in between "open" and a down arrow, down to open the camera. The back of the camera will pop open showing the film.

Step 2



- Locate the side of the film that holds all the film. Push it forward and lift it out of the camera.

Step 3

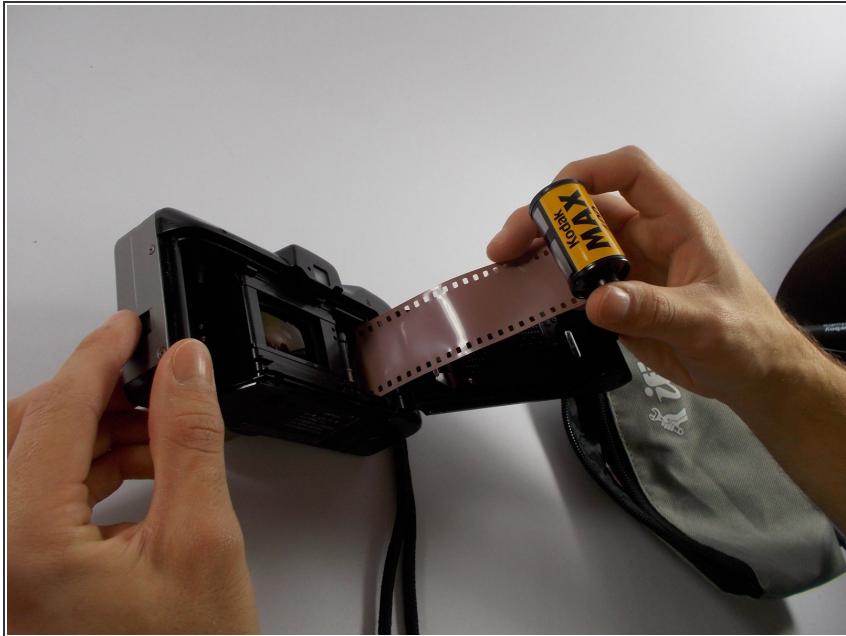

- Pull the rest of the film out from the other side.

Step 4



- Take your new roll of film and pull film out until it's the horizontal length of the camera.

Step 5



- Place the roll part of the film in the corresponding side.

Step 6



- Take the film and feed it through the right side of the plastic cylinder. The film should wrap around it.

Close the cover that covers the film that you opened in part 1.