



Canon Vixia HF R500 Battery Replacement

Prerequisite Only

Written By: Deion Woods



Step 1 — Battery



- Hold on to the battery.

Step 2



- On the bottom of the battery hold the battery release switch.

Step 3



- Remove the battery slowly away from the camcorder.

⚠ Removing the battery quick or in a different angle may cause sparks and damage to device.

To reassemble your device, follow these instructions in reverse order.