



Canon Vixia HF R500 Disassembly

Disassemble your camera to begin a repair or replacement operation

Written By: James Walker



 **TOOLS:**


- [Phillips #000 Screwdriver \(1\)](#)
- [Magnetic Project Mat \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Canon Vixia HF R500 Disassembly



- Remove the two 8mm Philips #000 screws on the side where the grip belt was located on.

Step 2

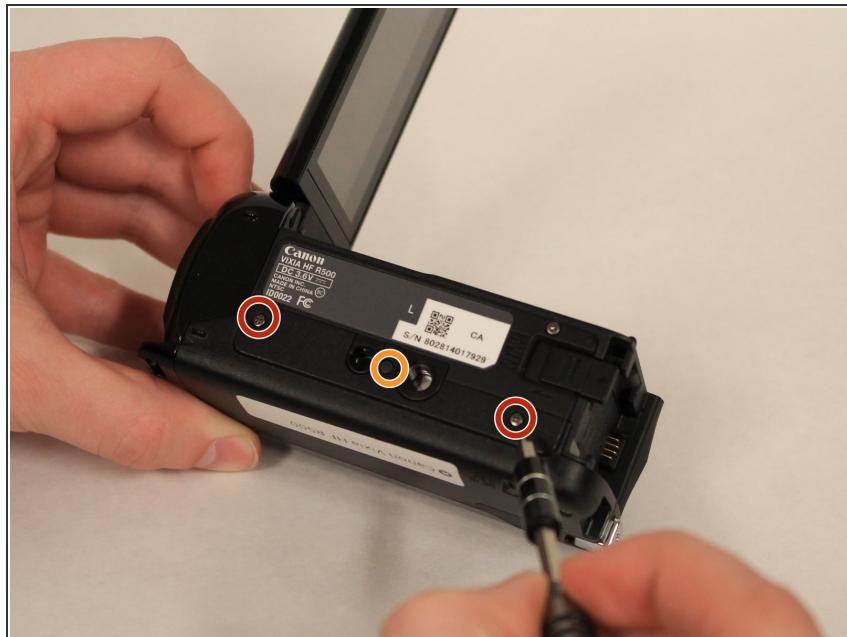

- Remove the two 4mm Philips #000 head screws from the bottom of the camcorder.
- A hidden 4mm Philips #000 screw is shown under the black plug shown.

Step 3




- Remove the side piece plate.

Step 4



- Near the LCD screen, remove the three 7mm Philips #000 screws in the picture shown.


Step 5

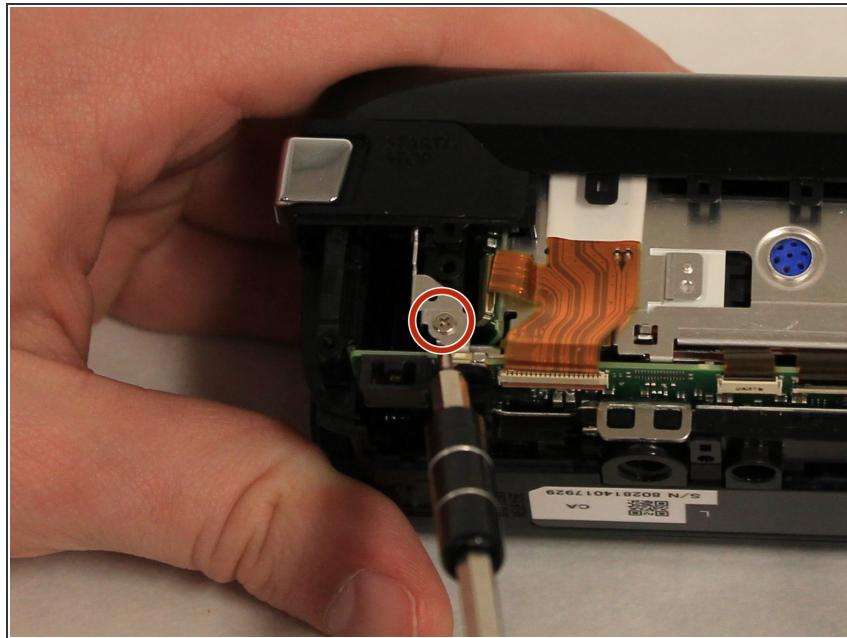

- Carefully place the camcorder where the inside of the device is facing upwards and remove the 3mm Philips #000 screw shown.

 Do not use strong magnetic parts on the inside, as they may damage the device.

Step 6

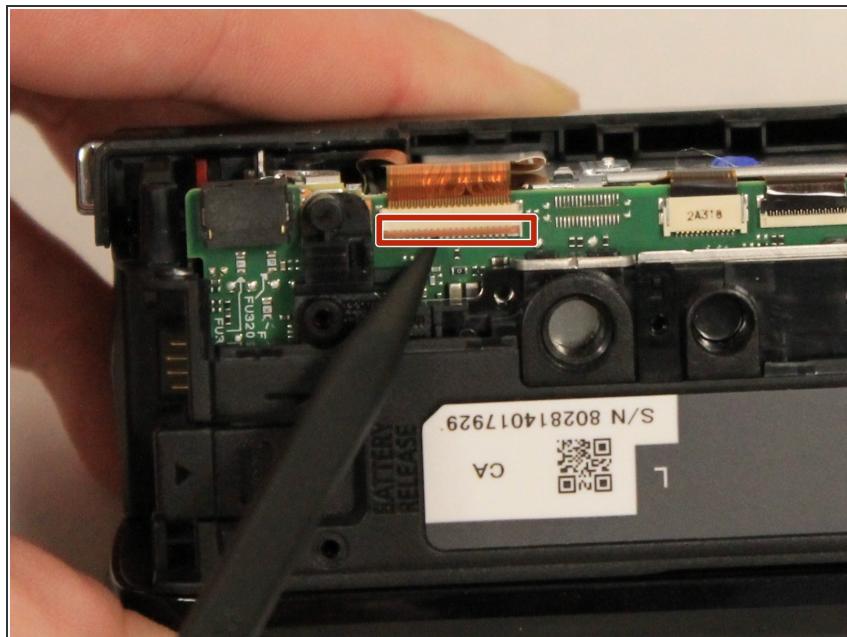


- Using the spudger, pull the tab shown to start removing the ribbon cable.

Step 7



- Using the Spudger, carefully remove the two ribbon cables that are connected to the top of the device.

Step 8

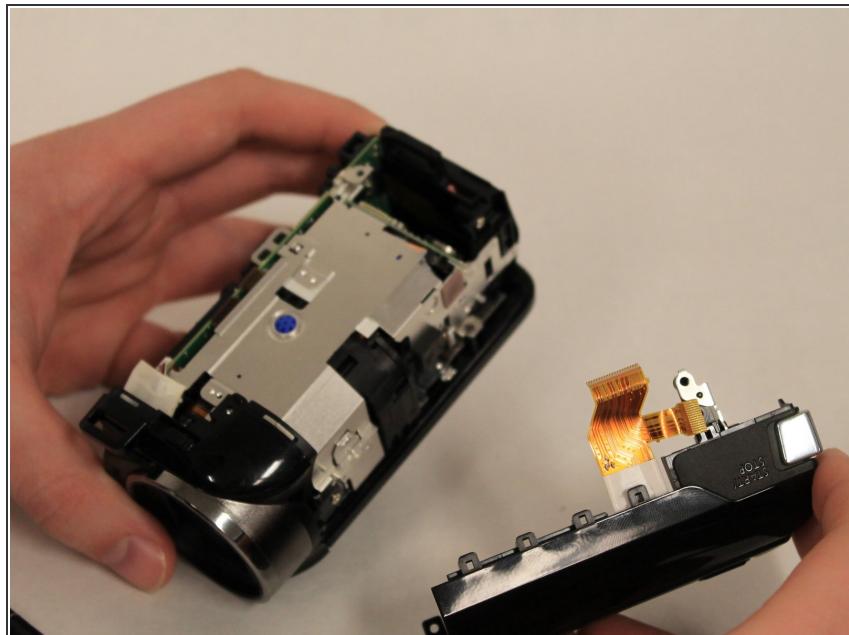

- Remove the top piece.

To reassemble your device, follow these instructions in reverse order.