



Canon Vixia HF R500 Grip Belt Replacement

Prerequisite Only

Written By: Deion Woods



Step 1 — Grip Belt



- On the right side of the camcorder remove the grip belt.

To reassemble your device, follow these instructions in reverse order.