




Canon Vixia HF R62 Central Capturing Unit Replacement

Unmount and remove the central capturing unit in order to repair or replace the assembly.

Written By: Jeffrey Harn

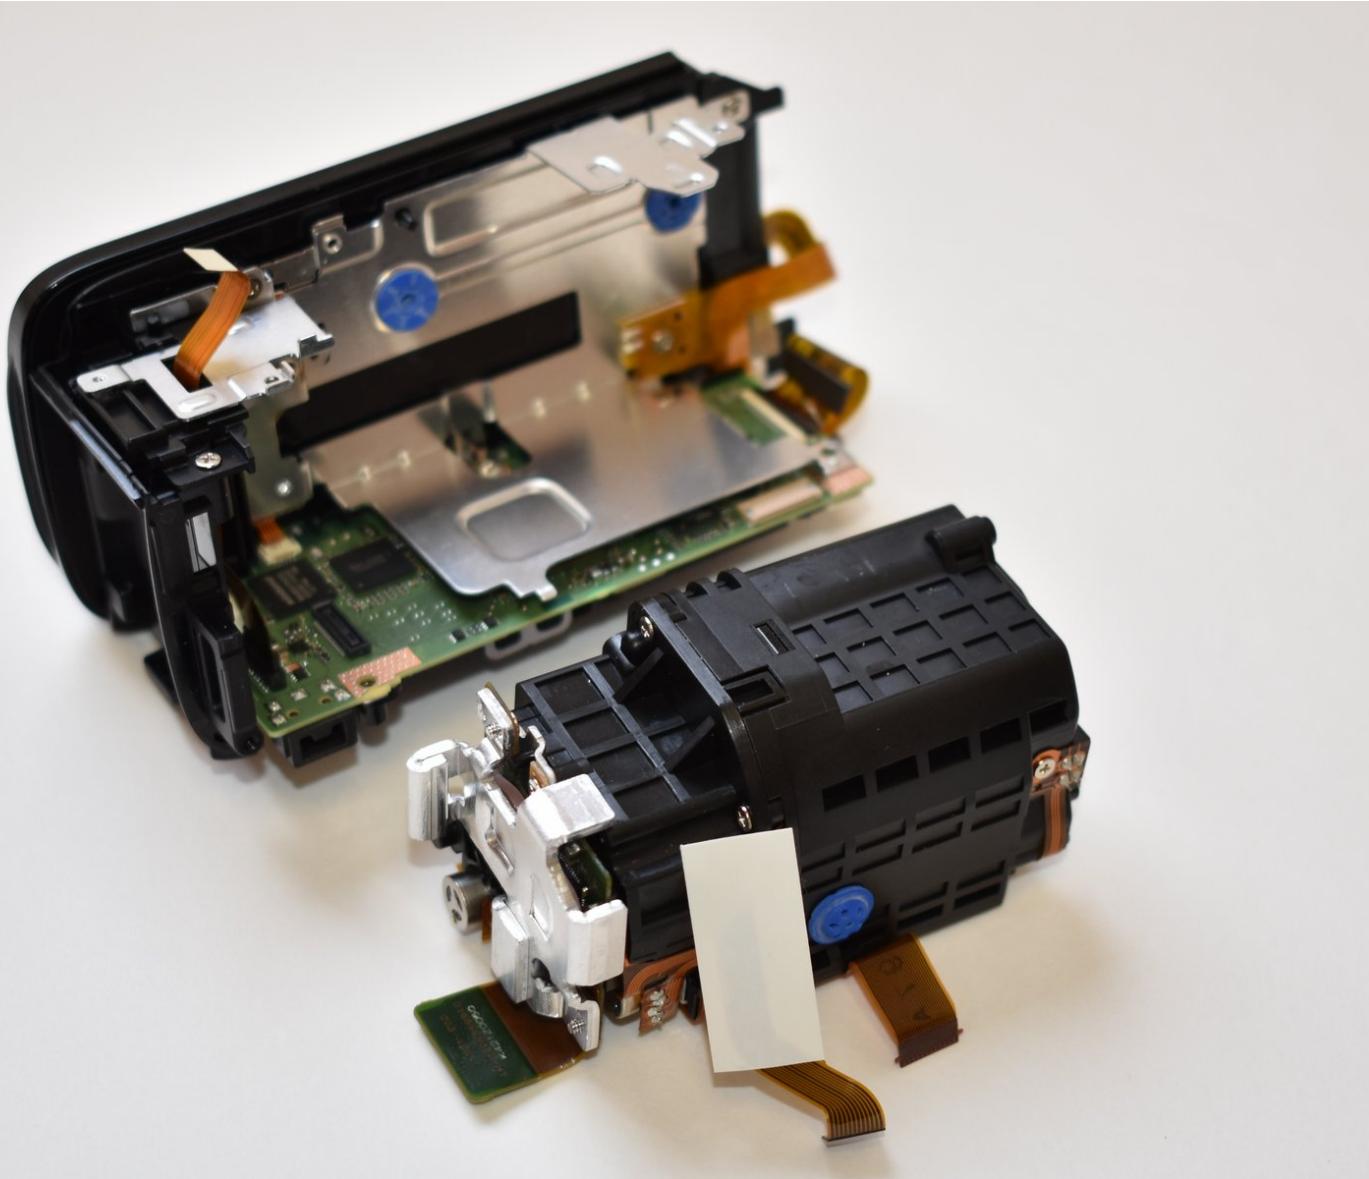

INTRODUCTION

This guide will show you how to access and replace the heart of this camcorder, the central capturing unit assembly.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

Step 1 — Outer Shell



- Remove the strap by undoing the Velcro and pulling it through the thread points.
- Remove the external battery pack by pressing down on the slide release and sliding it out.

Step 2



- Remove the three 5mm Phillips #000 screws on the bottom of the device.

Step 3




- On the side of the device, remove the following Phillips #000 screws:
 - One 3mm screw
 - One 5mm screw

Step 4



- Remove the panel opposite the display by pulling up perpendicular to the side.

Step 5

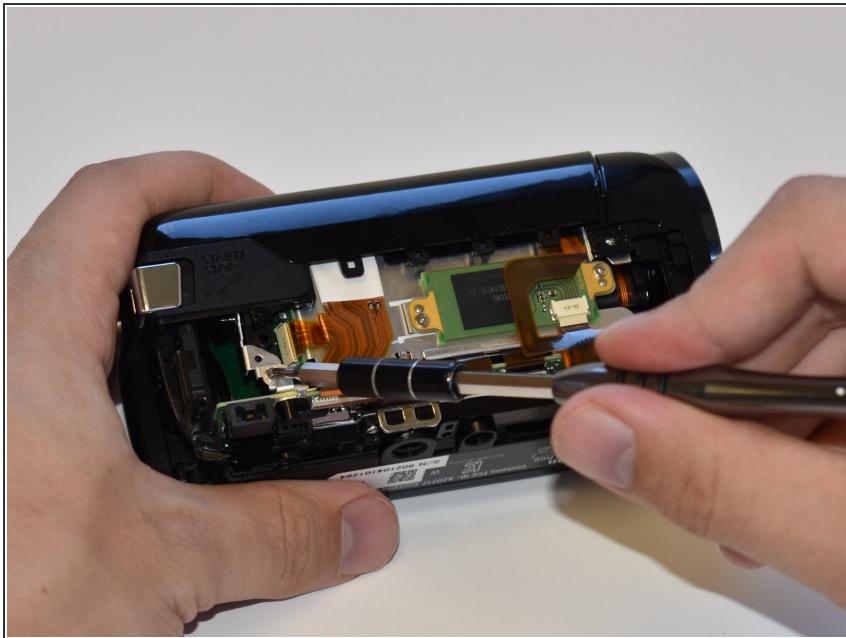

- Remove the 4mm Phillips #000 screw that was exposed after taking off the side panel.


Step 6



- Remove the three 4mm Phillips #000 screws shown.

ⓘ There will be foam covers protecting some or all of these screws. These will need to be removed before you will be able to unscrew them.

Step 7

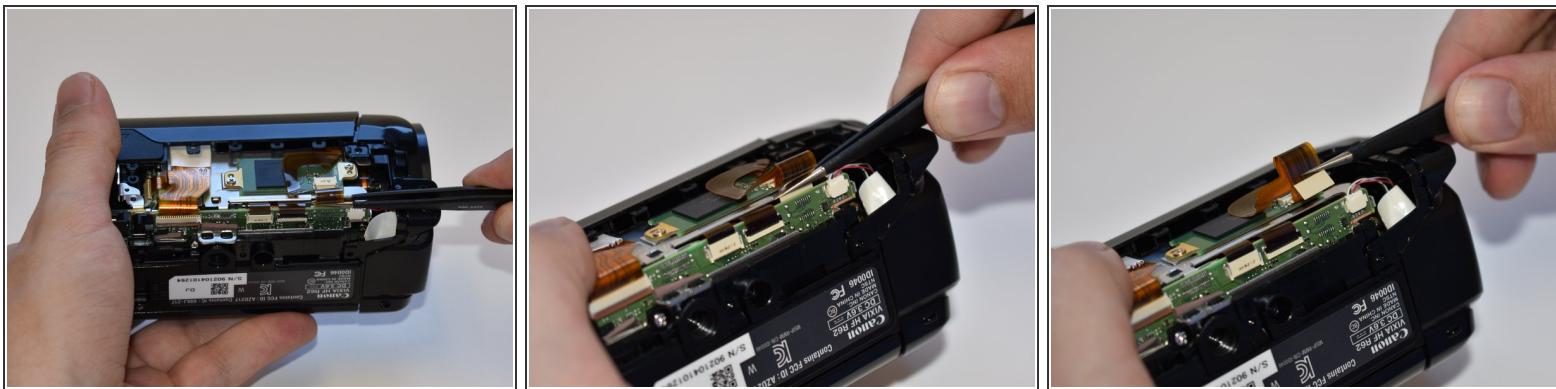


- Using tweezers, disconnect this ribbon cable by pulling straight out.

Step 8




- Repeat step seven (7) for the remaining three wires shown.

Step 9

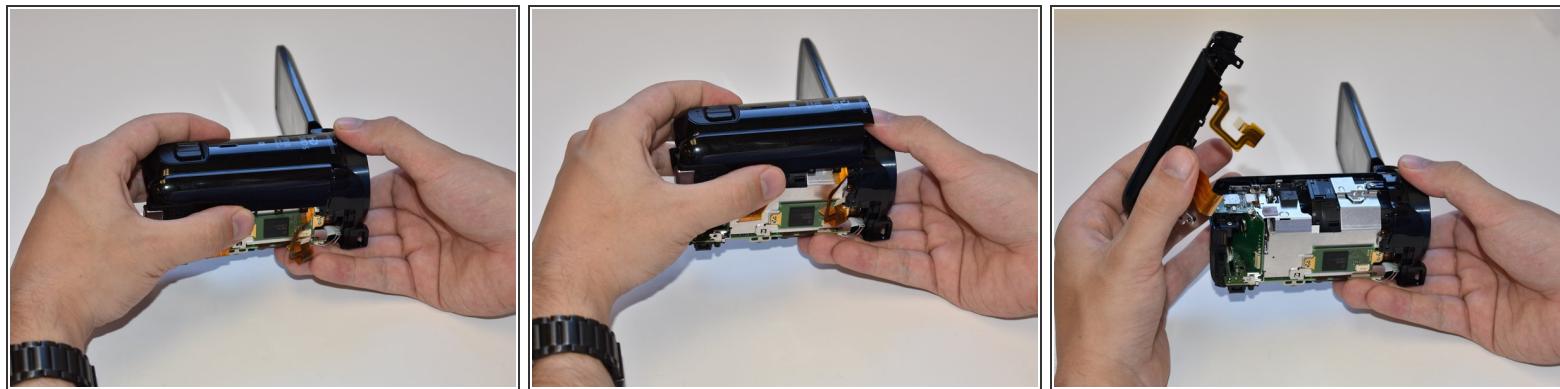

- Grasp the top of the camera and pull straight up to remove the top panel.

Step 10 — Lens

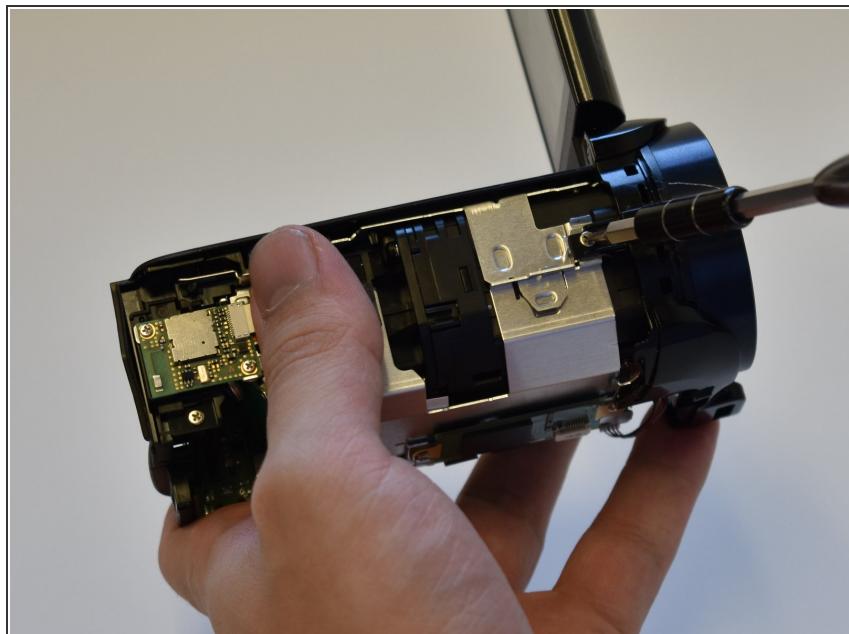


- Remove the 5mm Phillips #000 screw on top of the inner case.

Step 11



- Remove the two 5mm Phillips #000 screws near the display panel.

Step 12

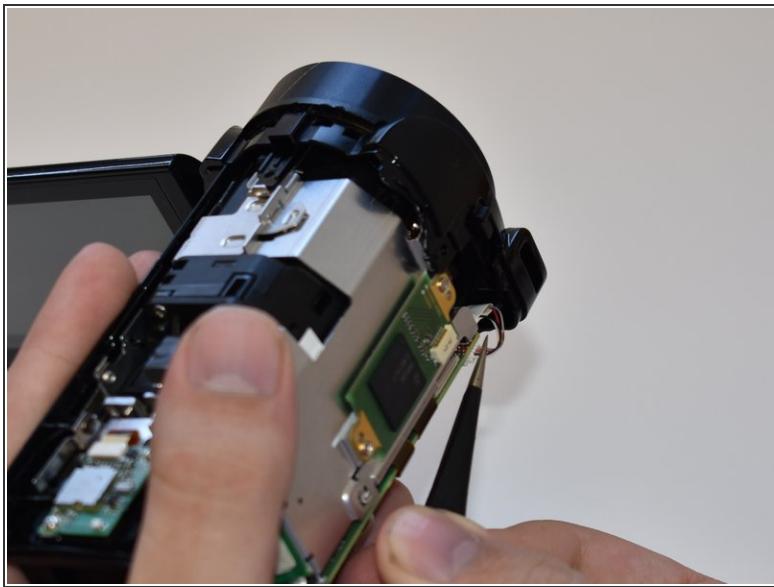


- Disconnect the small bundled cable connector on the side of the lens cover by pulling it straight out.

Step 13



- Remove the lens cover by pulling straight away from the body.

Step 14

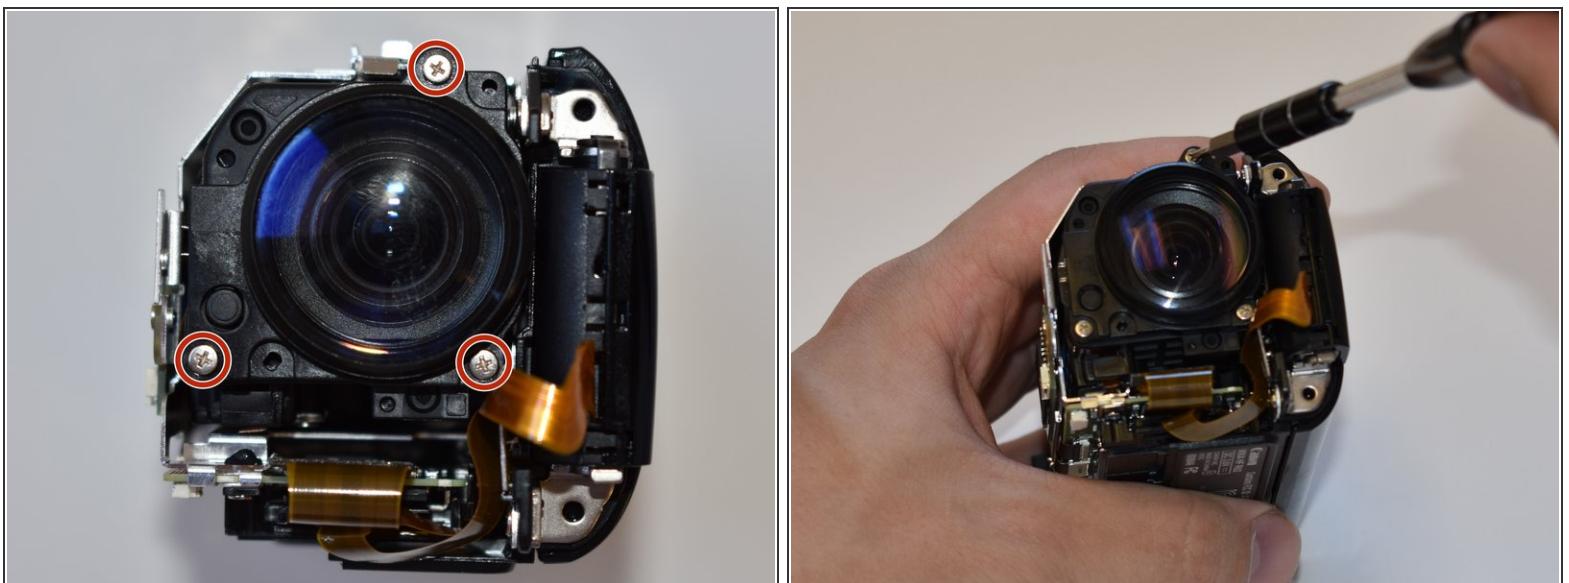


- Remove the three 6mm Phillips #000 screws shown.

Step 15




- Remove the lens by pulling straight away from the main body.
- ⓘ Be aware of the small rubber gasket around the lens as it may come loose.

Step 16 — Internal Battery and SD Card Reader

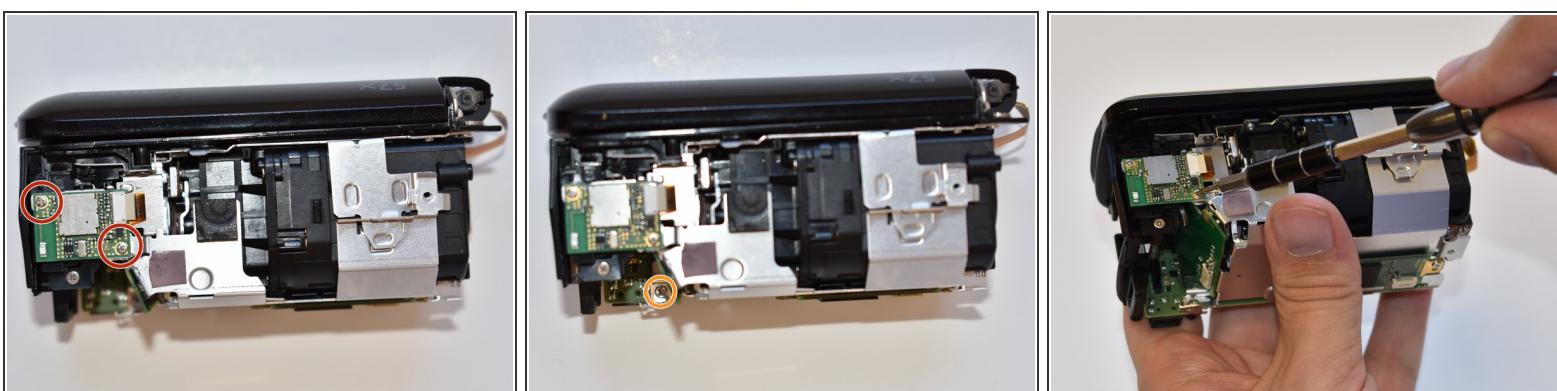


- Remove the two 3mm Phillips #000 screws.
- Remove the 4mm Phillips #000 screw.

Step 17

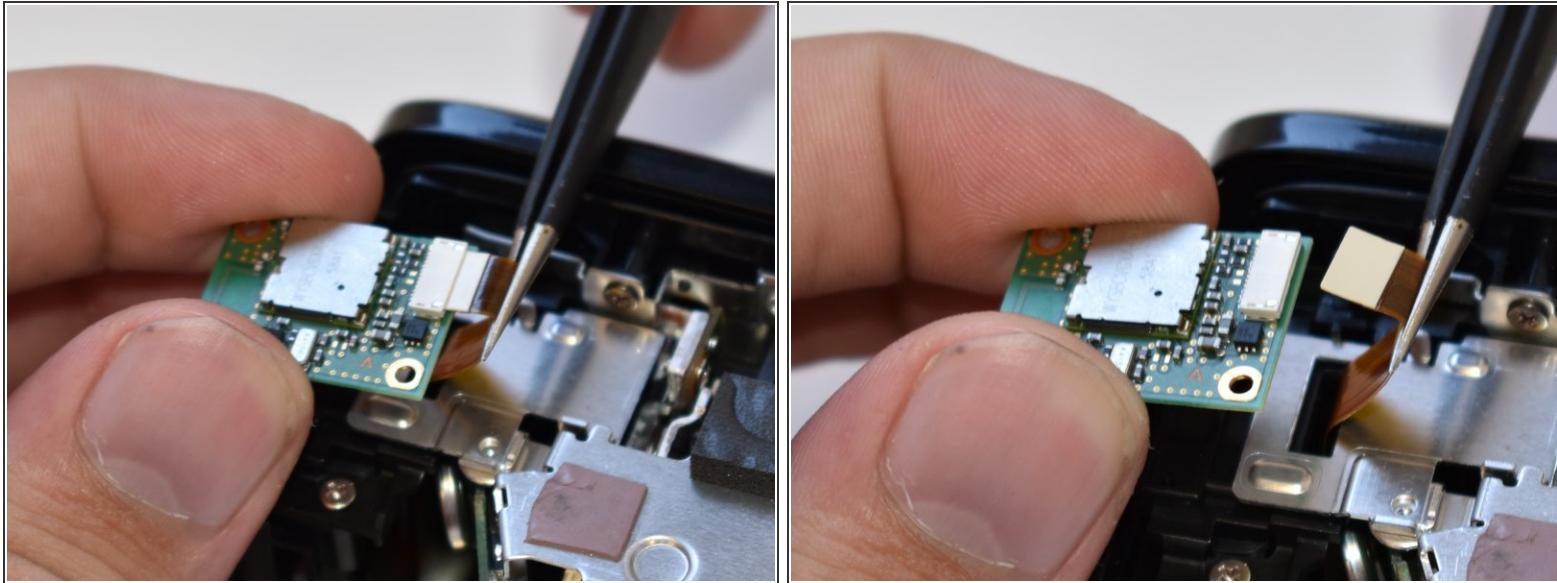


- Disconnect the ribbon cable shown.

Step 18

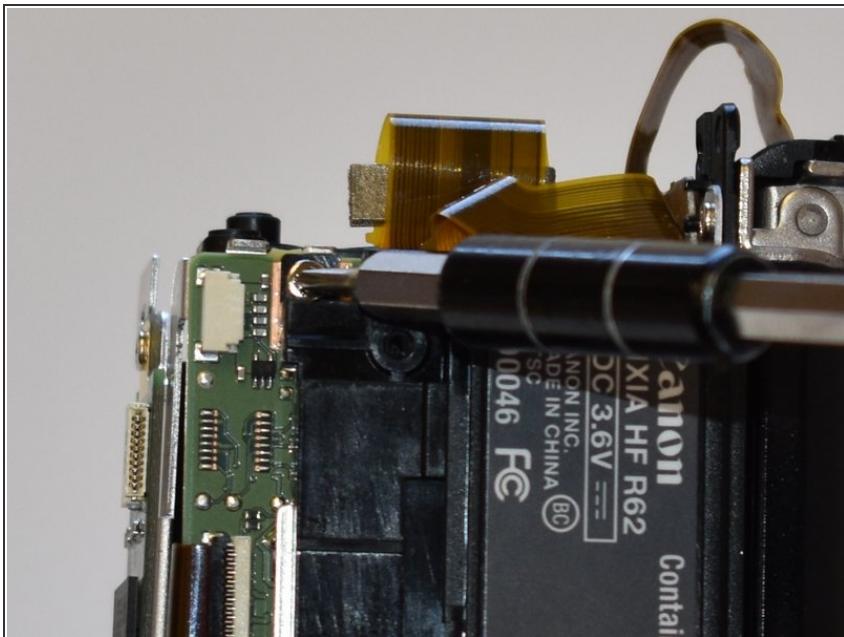


- Remove the 4mm Phillips #000 screw at the bottom of the camera.

Step 19

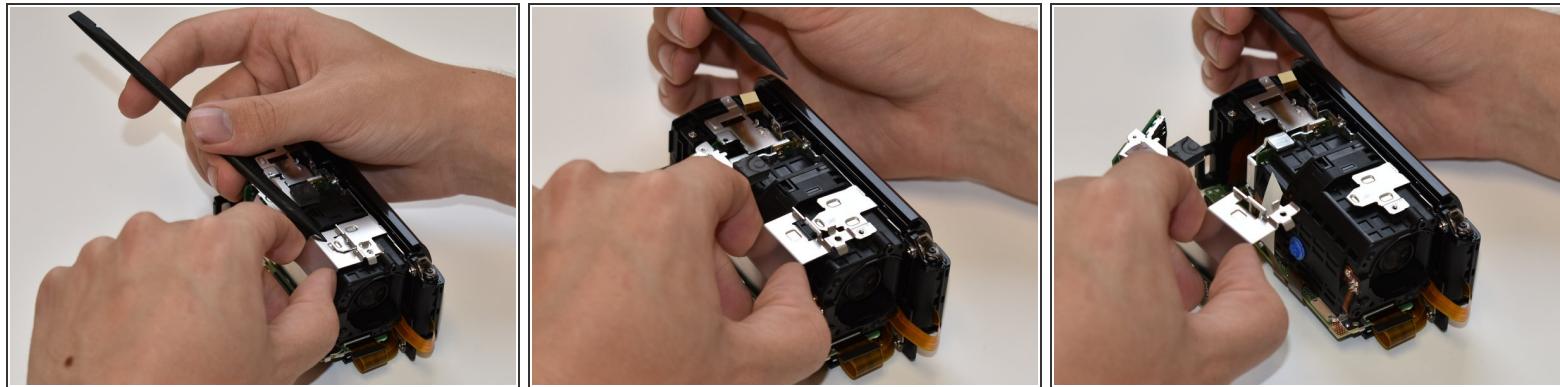


- Place the spudger under the tab shown.
- While prying the tab up with the spudger, pull the case away.

Step 20 — Central Capturing Unit

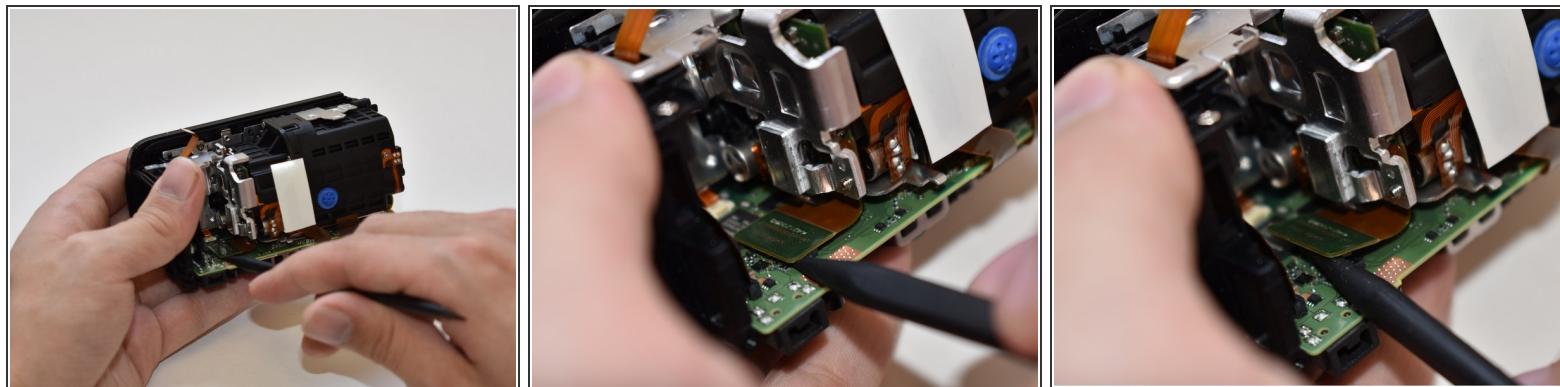

- Using a spudger, disconnect the ribbon cable connector from the PC board shown in the picture.

Step 21

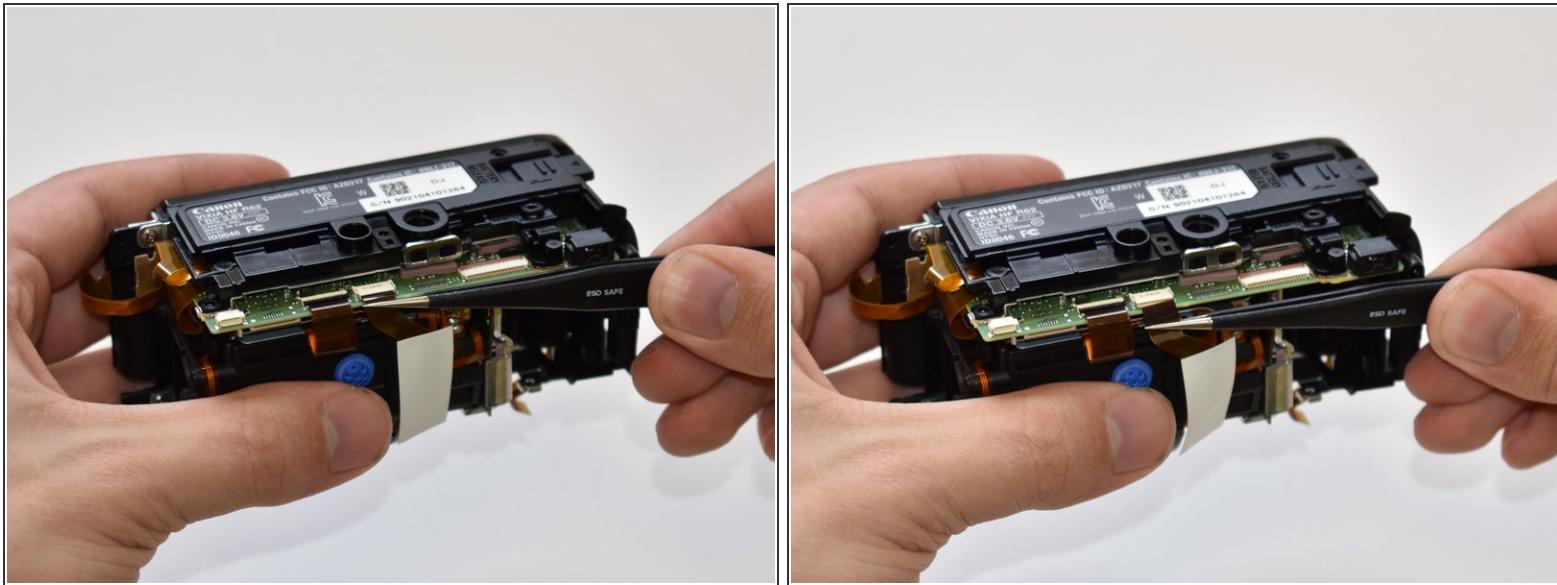

- Using tweezers, disconnect the ribbon cable shown in the picture by pulling straight out.

Step 22



- Using a spudger, gently pry up the top tab on the ZIF connector. The wire will now disconnect with no force needed.
- ➡ When reassembling you will need to place the ribbon wire tightly against the tab in order to properly secure it.

Step 23



- Using your fingers, firmly grasp both ends of the capturing device and gently pull the assembly straight out.

To reassemble the central capturing unit, follow these instructions in reverse order.