




Canon Vixia HF R62 Lens Replacement

Replace the lens and lens cover of your Canon Vixia HF R62 Camcorder.

Written By: Patrick Bennett

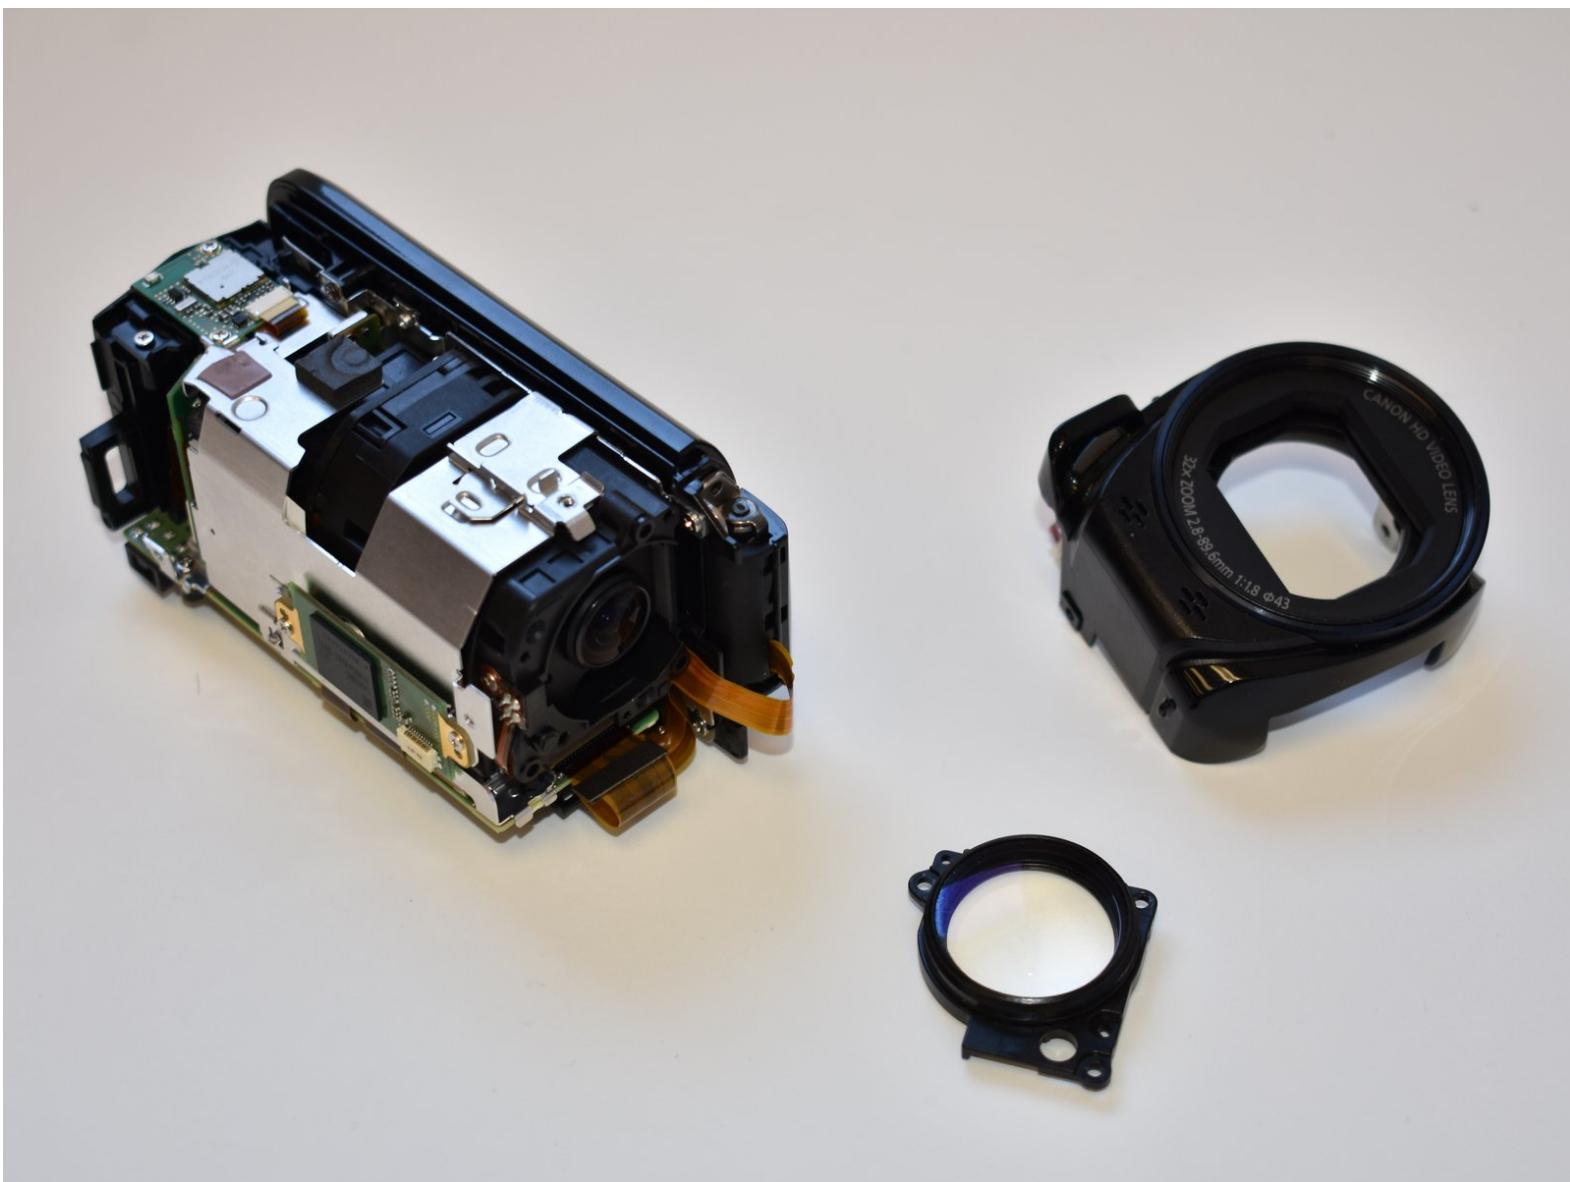

INTRODUCTION

This guide will show you how to access and replace the lens of the camcorder. It will also act as a prerequisite to most of the internal components.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Outer Shell



- Remove the strap by undoing the Velcro and pulling it through the thread points.
- Remove the external battery pack by pressing down on the slide release and sliding it out.

Step 2



- Remove the three 5mm Phillips #000 screws on the bottom of the device.

Step 3




- On the side of the device, remove the following Phillips #000 screws:
 - One 3mm screw
 - One 5mm screw

Step 4



- Remove the panel opposite the display by pulling up perpendicular to the side.

Step 5

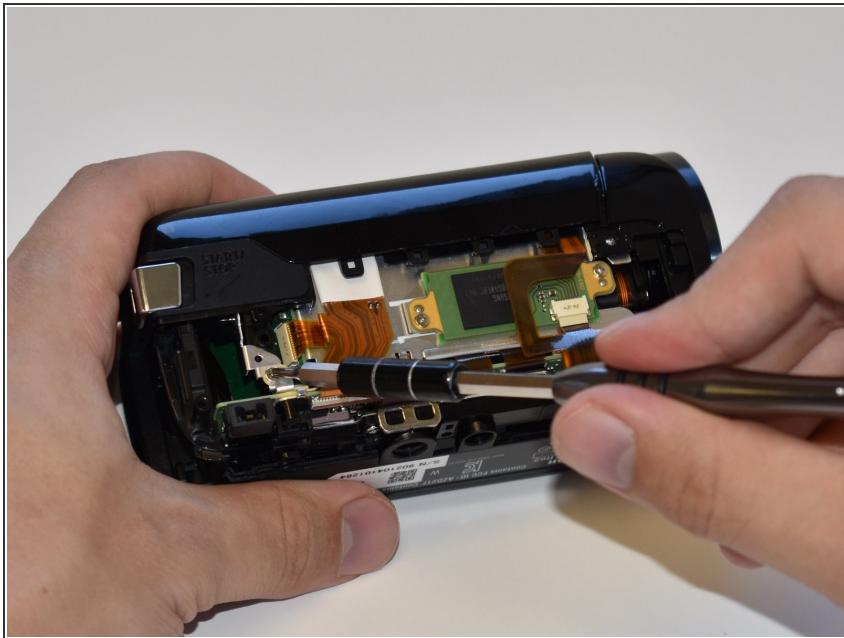

- Remove the 4mm Phillips #000 screw that was exposed after taking off the side panel.


Step 6



- Remove the three 4mm Phillips #000 screws shown.

(i) There will be foam covers protecting some or all of these screws. These will need to be removed before you will be able to unscrew them.

Step 7

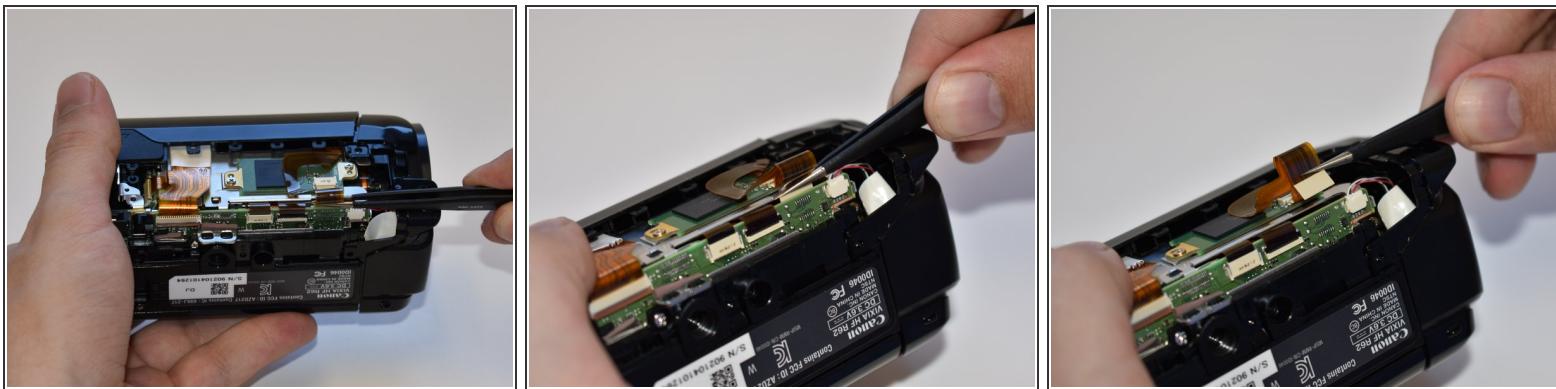

- Using tweezers, disconnect this ribbon cable by pulling straight out.

Step 8




- Repeat step seven (7) for the remaining three wires shown.

Step 9




- Grasp the top of the camera and pull straight up to remove the top panel.

Step 10 — Lens

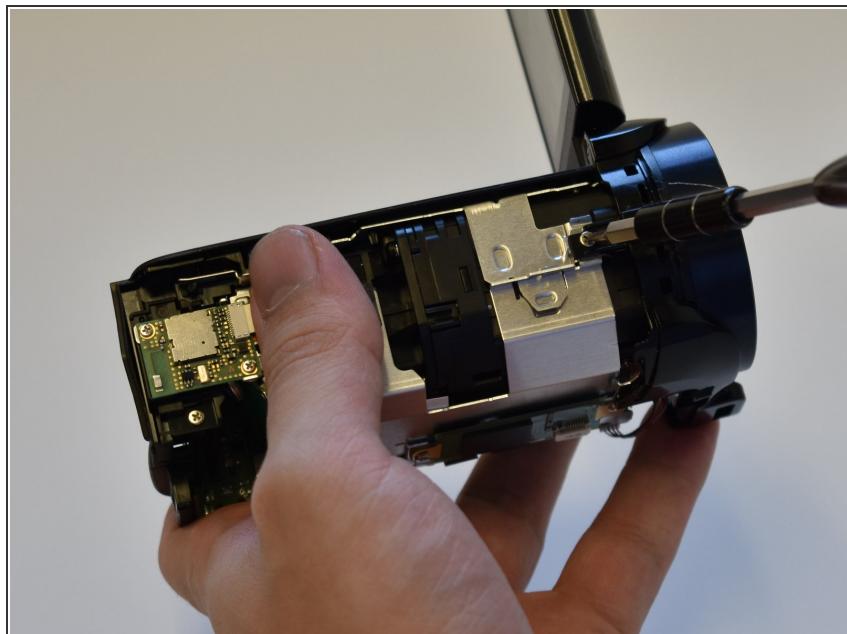



- Remove the 5mm Phillips #000 screw on top of the inner case.

Step 11

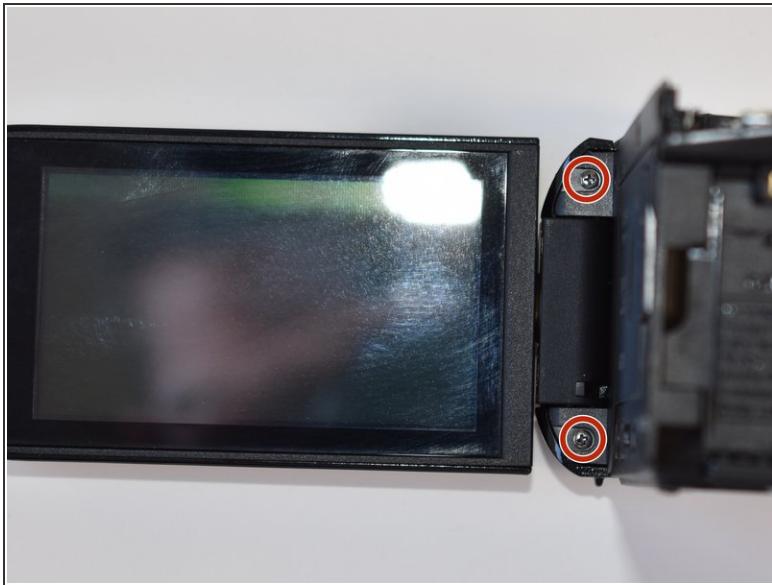


- Remove the two 5mm Phillips #000 screws near the display panel.

Step 12

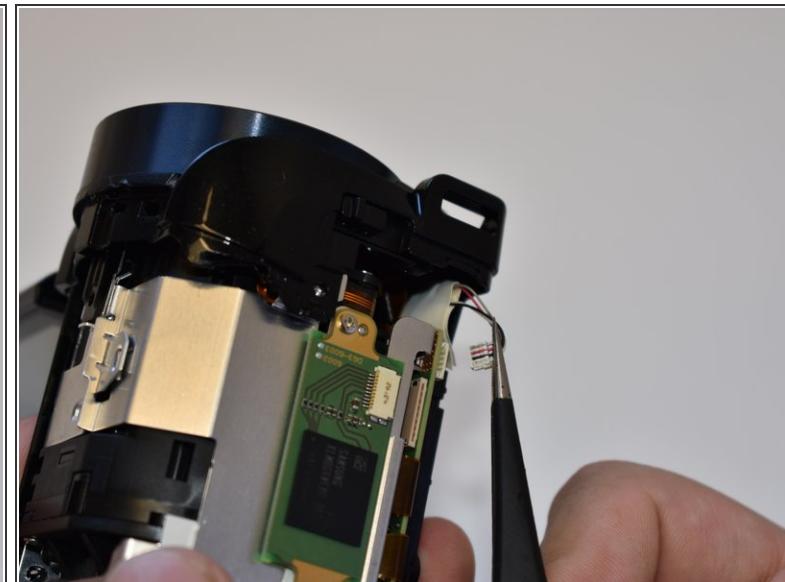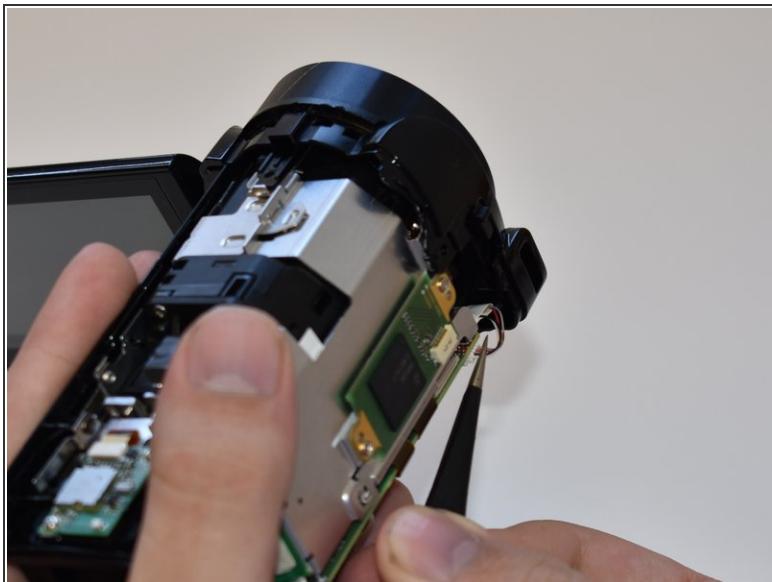


- Disconnect the small bundled cable connector on the side of the lens cover by pulling it straight out.

Step 13

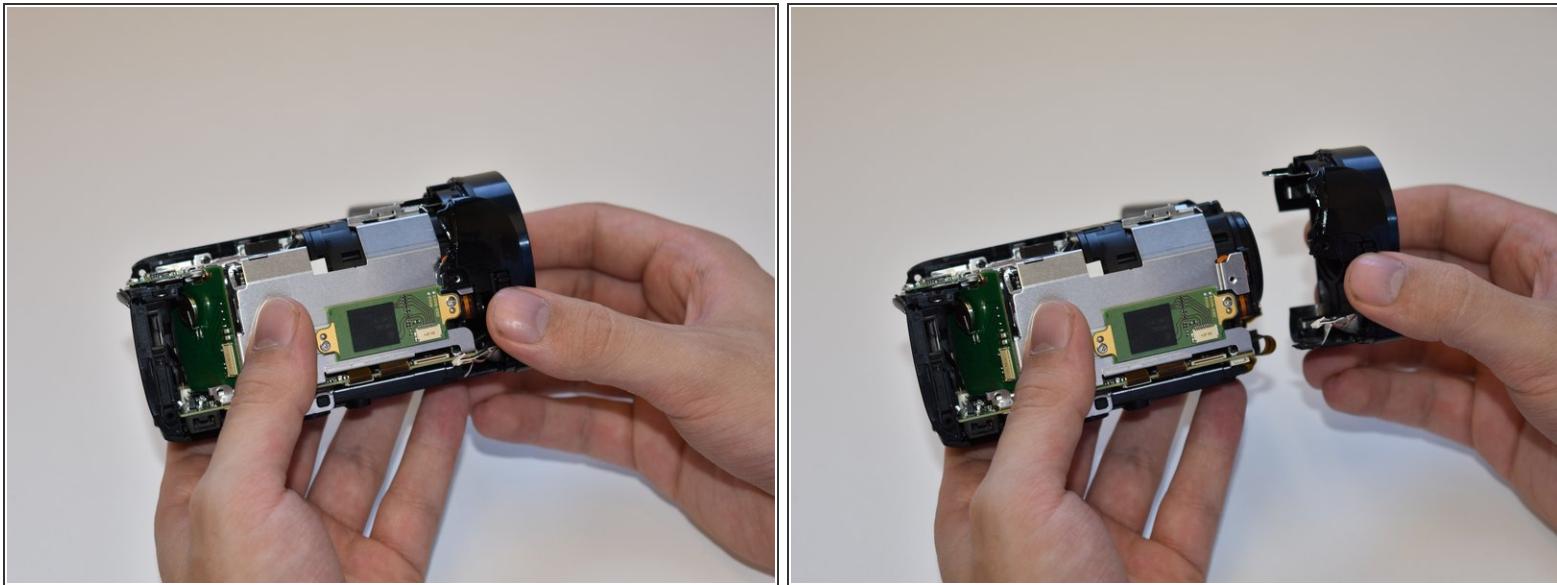


- Remove the lens cover by pulling straight away from the body.

Step 14

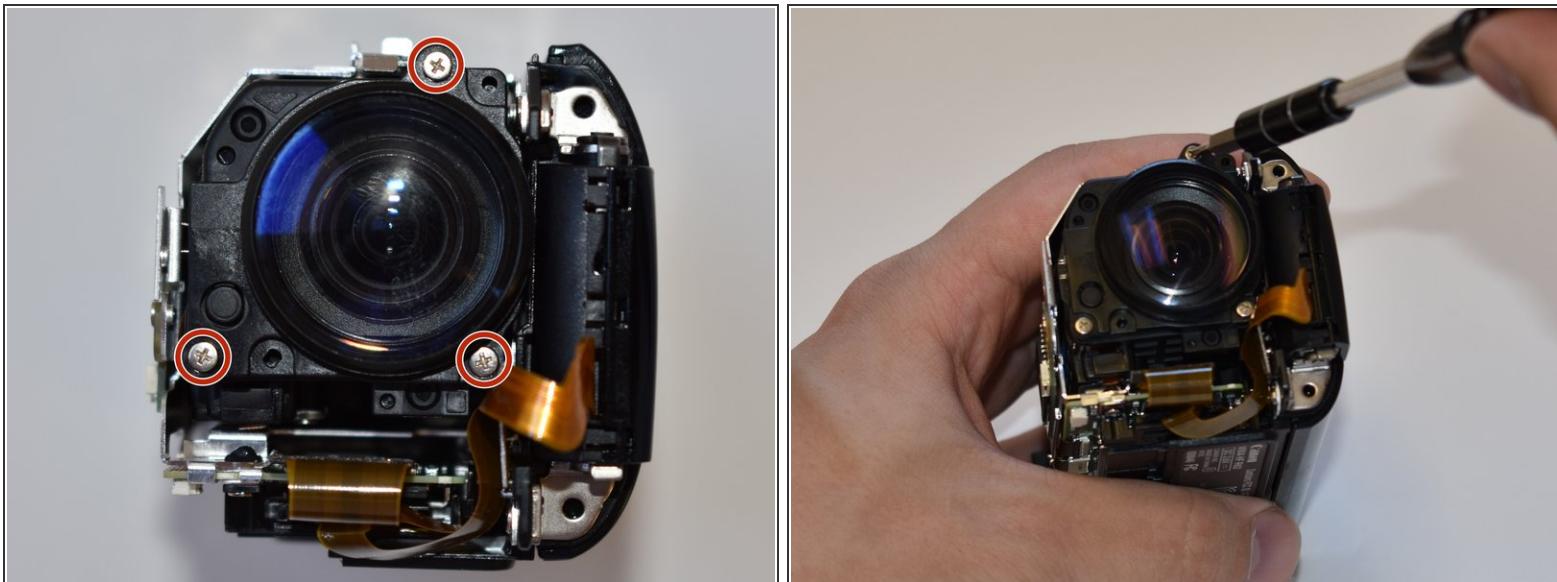

- Remove the three 6mm Phillips #000 screws shown.

Step 15

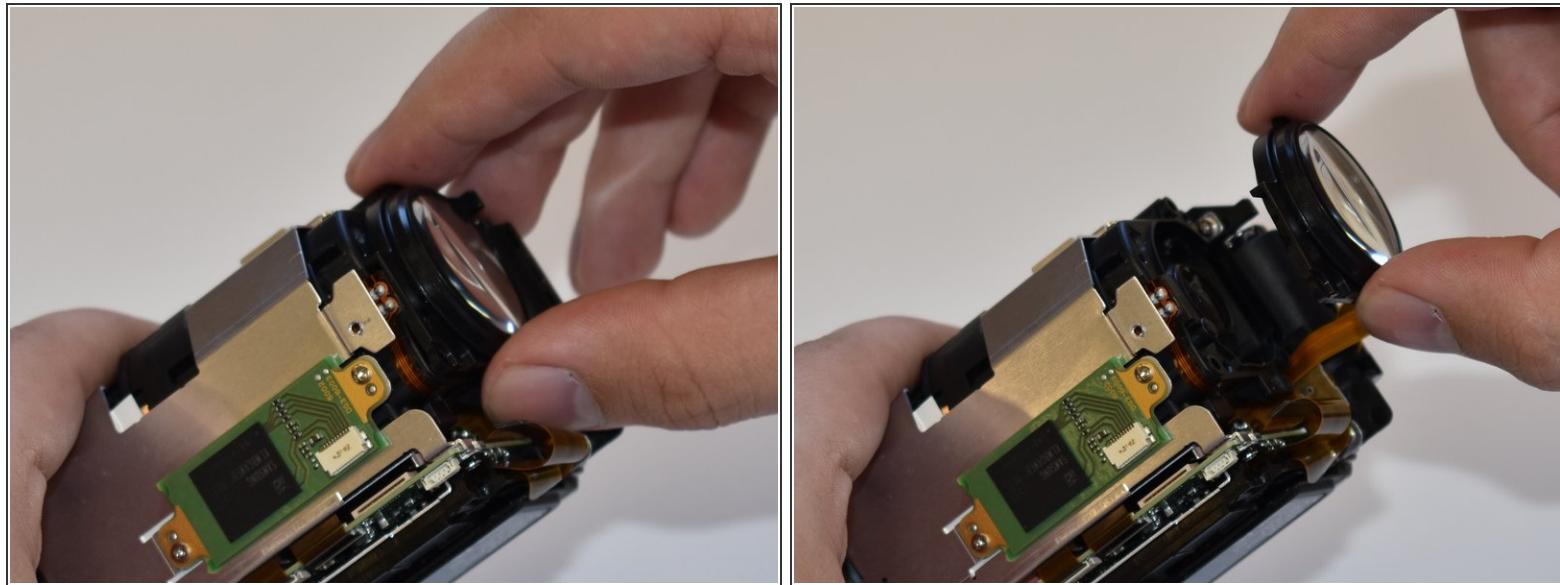

- Remove the lens by pulling straight away from the main body.
- ⓘ Be aware of the small rubber gasket around the lens as it may come loose.

To reassemble your device, follow these instructions in reverse order.