


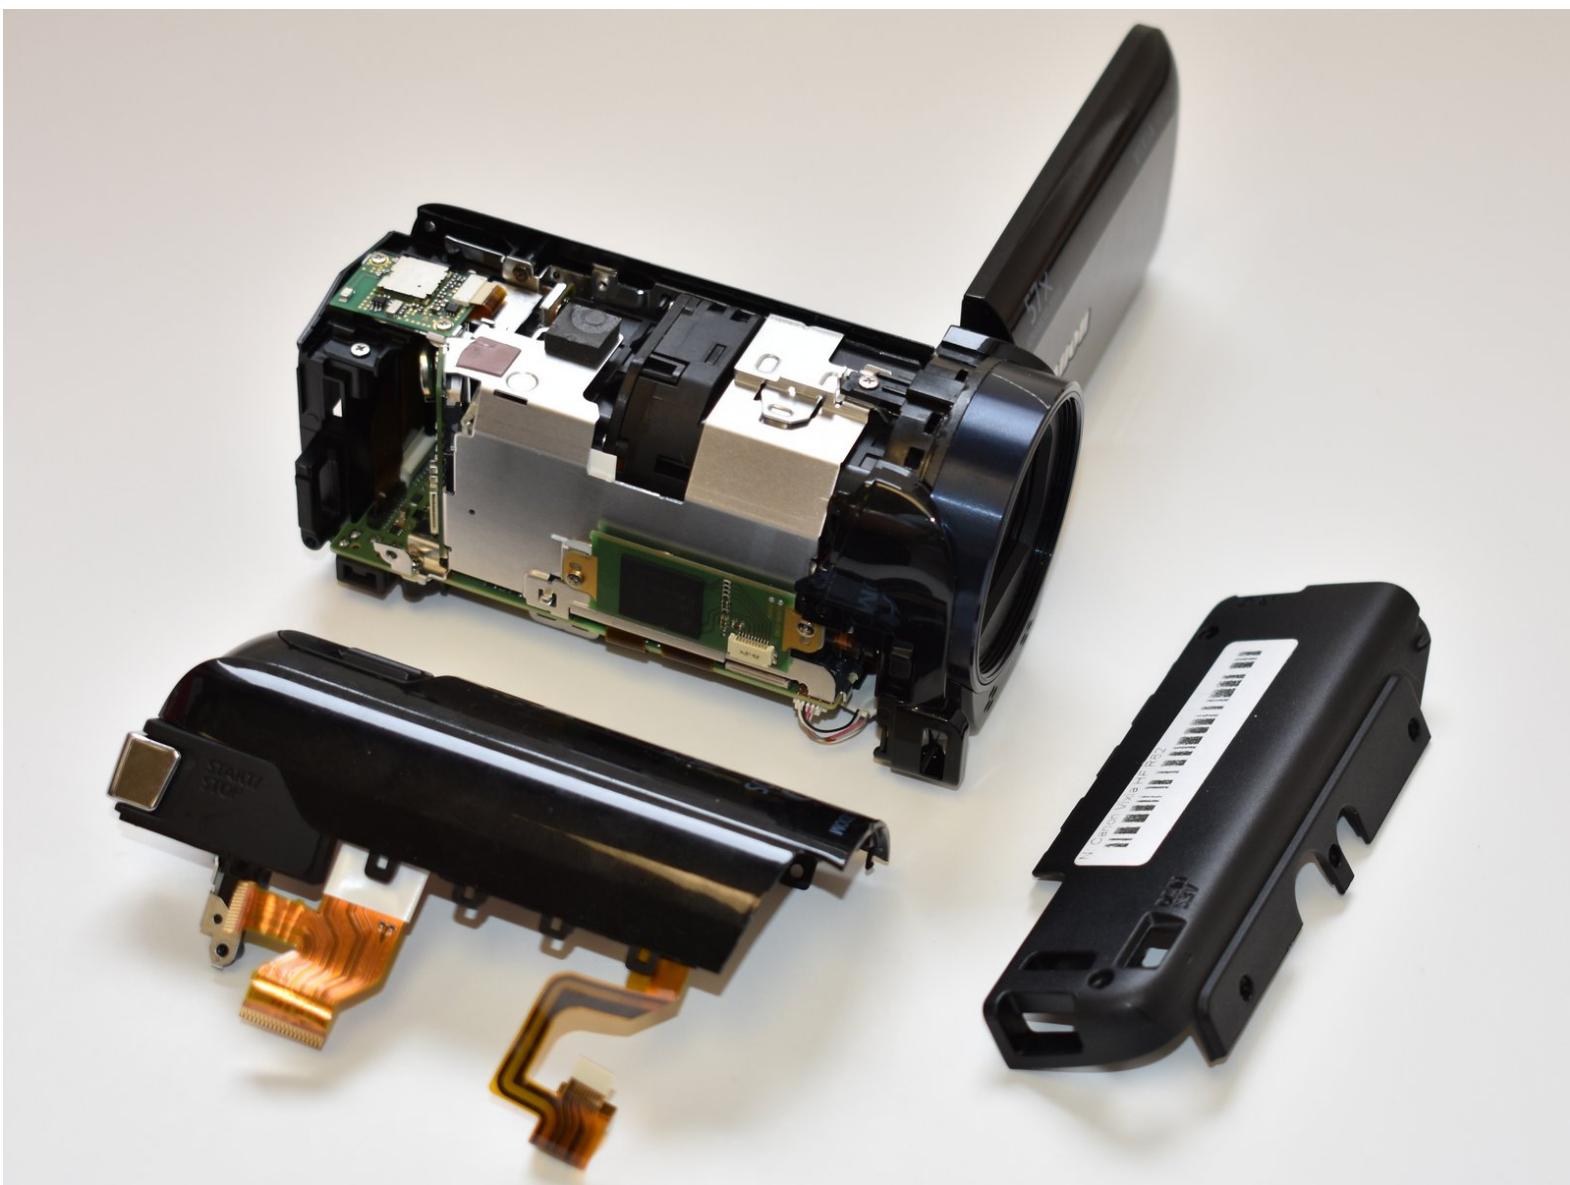

# Canon Vixia HF R62 Outer Casing Replacement

Disassemble the outer shell of your Canon Vixia HF R62 Camcorder to replace the casings or access the internal components.

Written By: Jeffrey Harn



## INTRODUCTION

This guide is the pre-requisite to all guides involving the replacement or repair of the internal components of the camera. Before you begin, please note that some screws will be covered with foam protectors.

### TOOLS:

- **Phillips #000 Screwdriver** (1)
- **Tweezers** (1)

## Step 1 — Outer Shell



- Remove the strap by undoing the Velcro and pulling it through the thread points.
- Remove the external battery pack by pressing down on the slide release and sliding it out.

## Step 2



- Remove the three 5mm Phillips #000 screws on the bottom of the device.

## Step 3




- On the side of the device, remove the following Phillips #000 screws:
  - One 3mm screw
  - One 5mm screw

## Step 4



- Remove the panel opposite the display by pulling up perpendicular to the side.

## Step 5

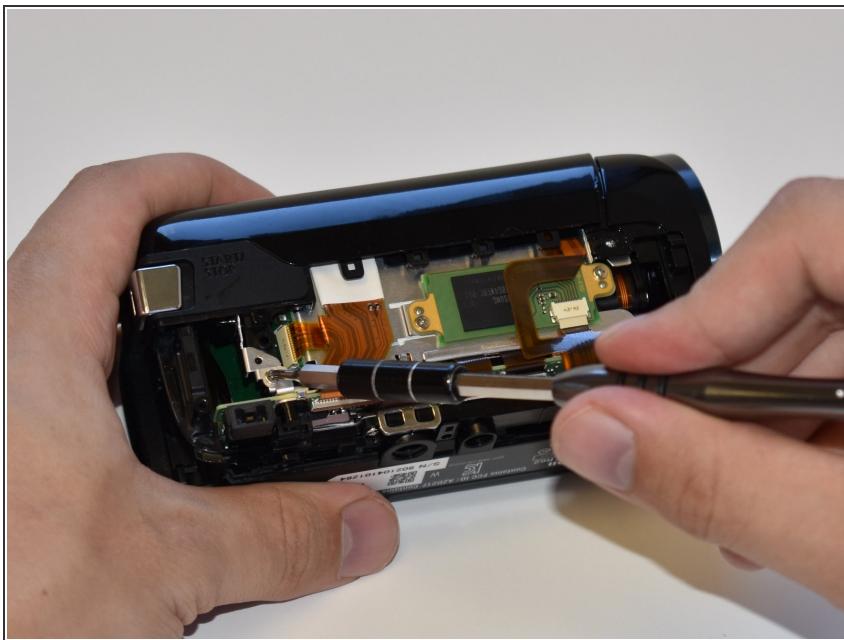

- Remove the 4mm Phillips #000 screw that was exposed after taking off the side panel.


## Step 6



- Remove the three 4mm Phillips #000 screws shown.

*(i)* There will be foam covers protecting some or all of these screws. These will need to be removed before you will be able to unscrew them.

## Step 7

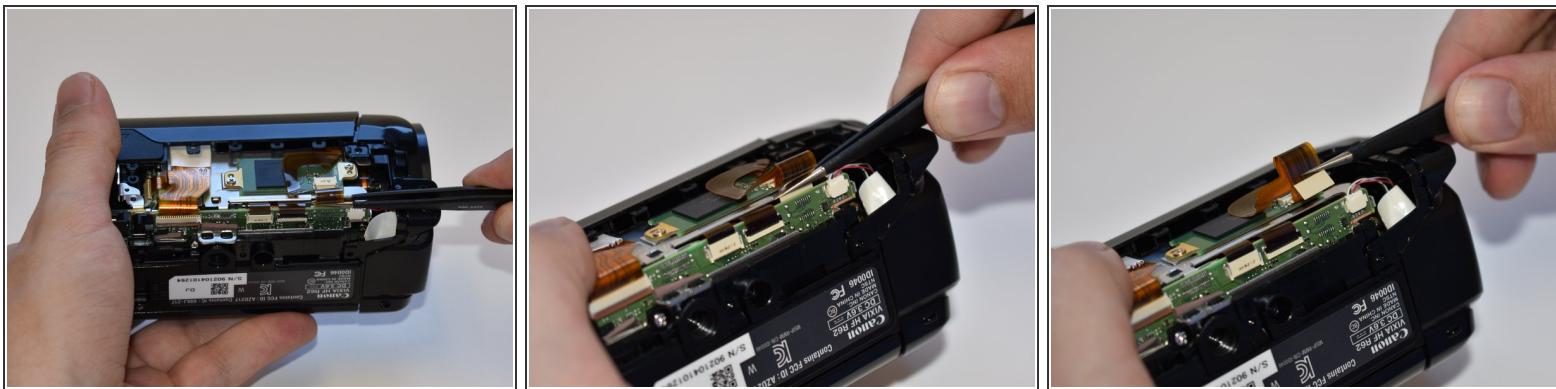


- Using tweezers, disconnect this ribbon cable by pulling straight out.

## Step 8



- Repeat step seven (7) for the remaining three wires shown.

## Step 9

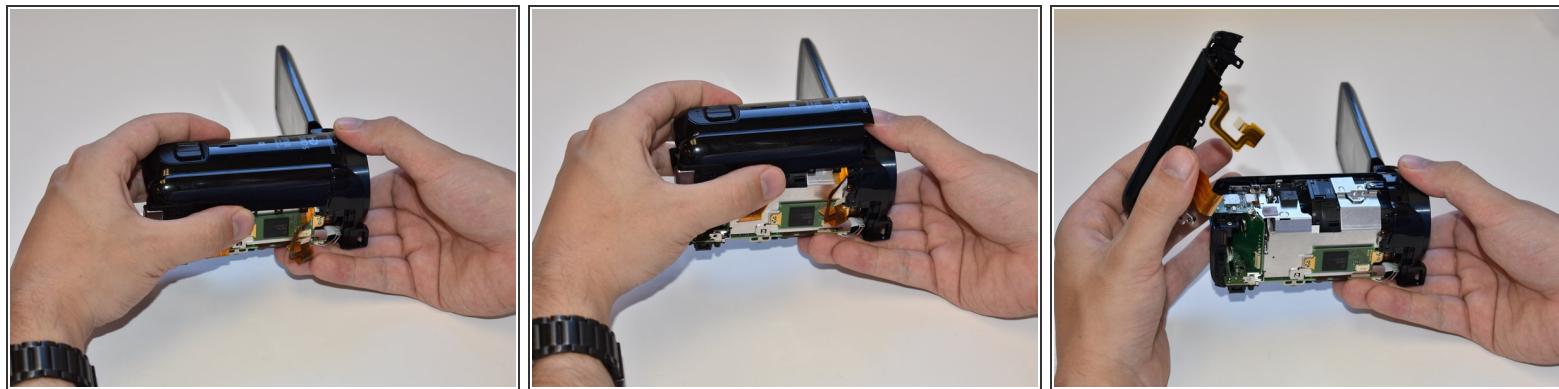

- Grasp the top of the camera and pull straight up to remove the top panel.

To reassemble your device, follow these instructions in reverse order.