



Canon Vixia HF R70 Battery Replacement

A detailed guide for removing and replacing the battery to your Canon Vixia HF R70

Written By: Thomas Rogienski



INTRODUCTION

Use this guide to swap out an old battery for a new one.

Step 1 — Battery



- Power off and unplug the device.
- Position the camera so that the battery is facing you.

Step 2



- Locate the latch on the bottom edge of the camera.
- Hold the battery into place and gently push down on the latch towards the lens.

Step 3



- While holding down the latch, remove the battery by pulling it out of the device.

To reassemble your device, follow these instructions in reverse order.