



Canon Vixia HF R70 SD Card Replacement

Replace an old SD card for a new one for your camcorder.

Written By: Thomas Rogienski



INTRODUCTION

This guide will aid you in removing and replacing your SD Card.

Step 1 — SD Card



- Open the screen compartment.
- Position the camcorder so that the screen is facing you.

Step 2



- Find the SD card compartment.
- Place your finger under the slot and gently slide it forward to open the compartment.

Step 3



- Gently push on the SD card until you hear a "click". The SD card should pop out.
- Remove the old SD card by pulling it out.

To reassemble your device, follow these instructions in reverse order.