




Canon Vixia HF S10 Camcorder LCD Screen Replacement

This guide will easily demonstrate on how to replace the LCD screen in the Canon Vixia HF S10.

Written By: Karina

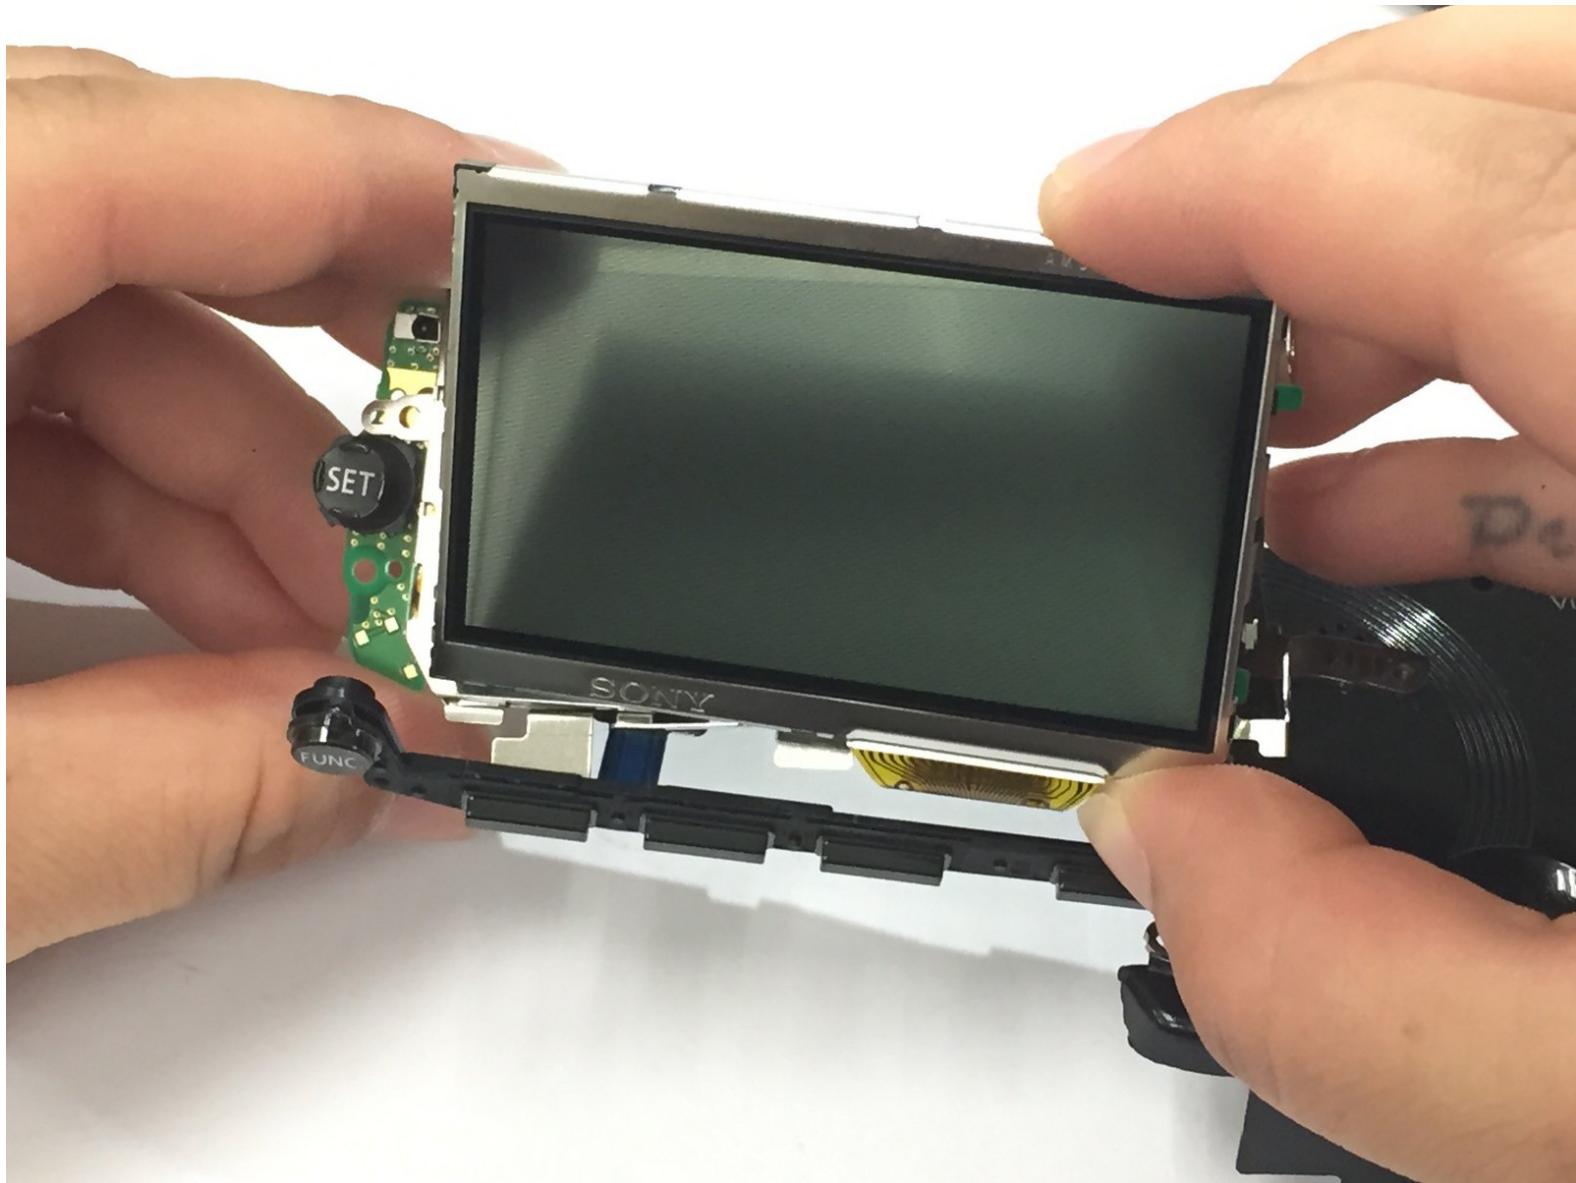

INTRODUCTION

Do you have a Canon Vixia HF S10 with a screen that is cracked, broken, scratched, or in need of a replacement? No worries! This guide will give you clear instructions and show you step by step on how to disassemble your camcorder to remove the LCD screen.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Magnetic Project Mat](#) (1)

Step 1 — LCD Screen



- Turn the camcorder upside down and remove the three 3x4 mm Phillips screws securing the black plastic case.

Step 2




- Flip open the LCD screen.
- Remove the three 3x4 mm Phillips screws securing the black panel plastic case.
- From the inner corner in between the panel and the LCD screen, remove the two 2x2.5 mm Phillips screws and the 3x4 mm Phillips screw.

Step 3




- Using your fingers, remove the black plastic covering. Underneath the covering, you will find a screw hinge.
- Remove the 2x2.5 mm Phillips screw located at the top of the screw hinge.
- Using your fingers, remove the panel from the base of the camcorder.

Step 4

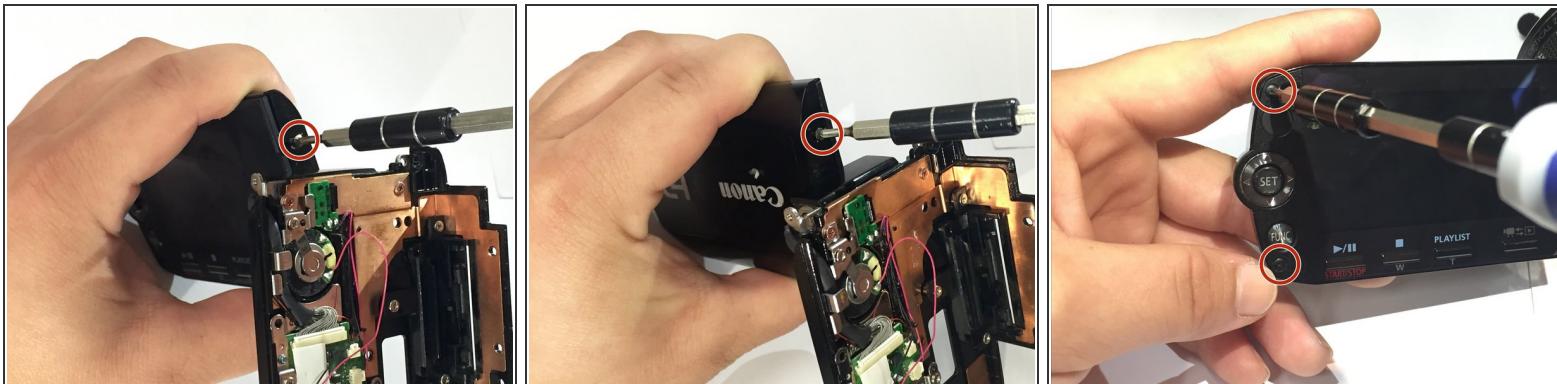

- Remove the 2x2.5 mm screw from the right side of the plastic case surrounding the LCD screen.
- Flip over the plastic case and remove the 2x2.5 mm screw.
- Remove the two 2x2.5 mm screws from the front plastic case.


Step 5

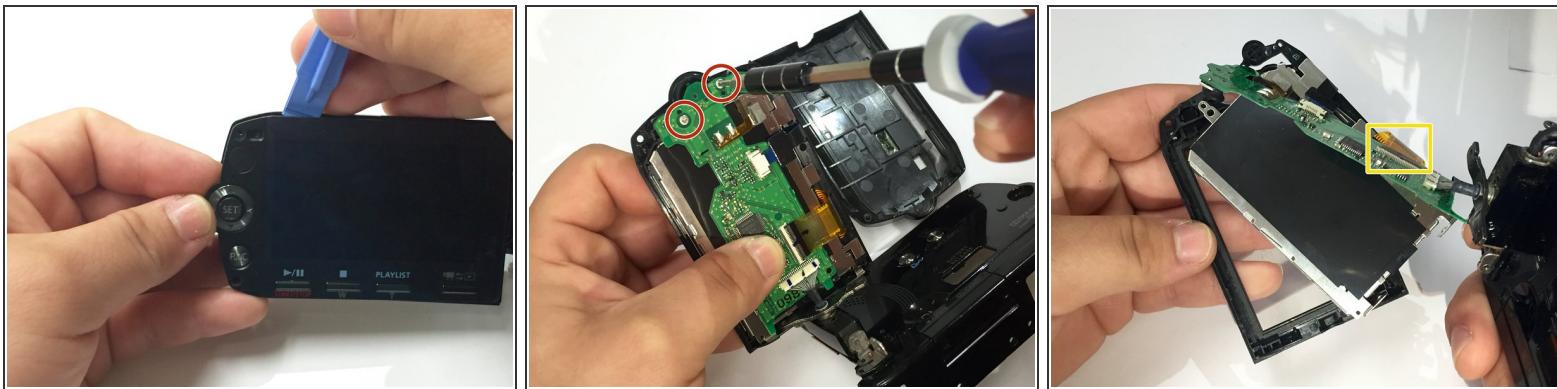

- Using a plastic opening tool, pry off the plastic case surrounding the LCD screen.
- Remove the two 1x2.5 mm screws from the motherboard on the back of the LCD screen.
- Gently pull off the motherboard from the LCD screen.

 Be aware of the orange tab when separating the motherboard from the LCD screen.

Step 6

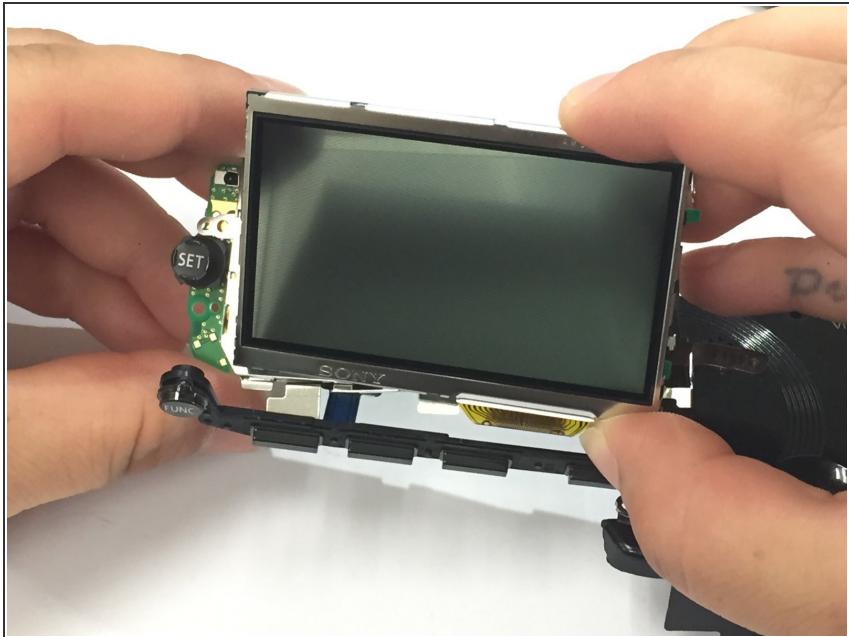

- Using your fingers, remove the LCD screen.

To reassemble your device, follow these instructions in reverse order.

