


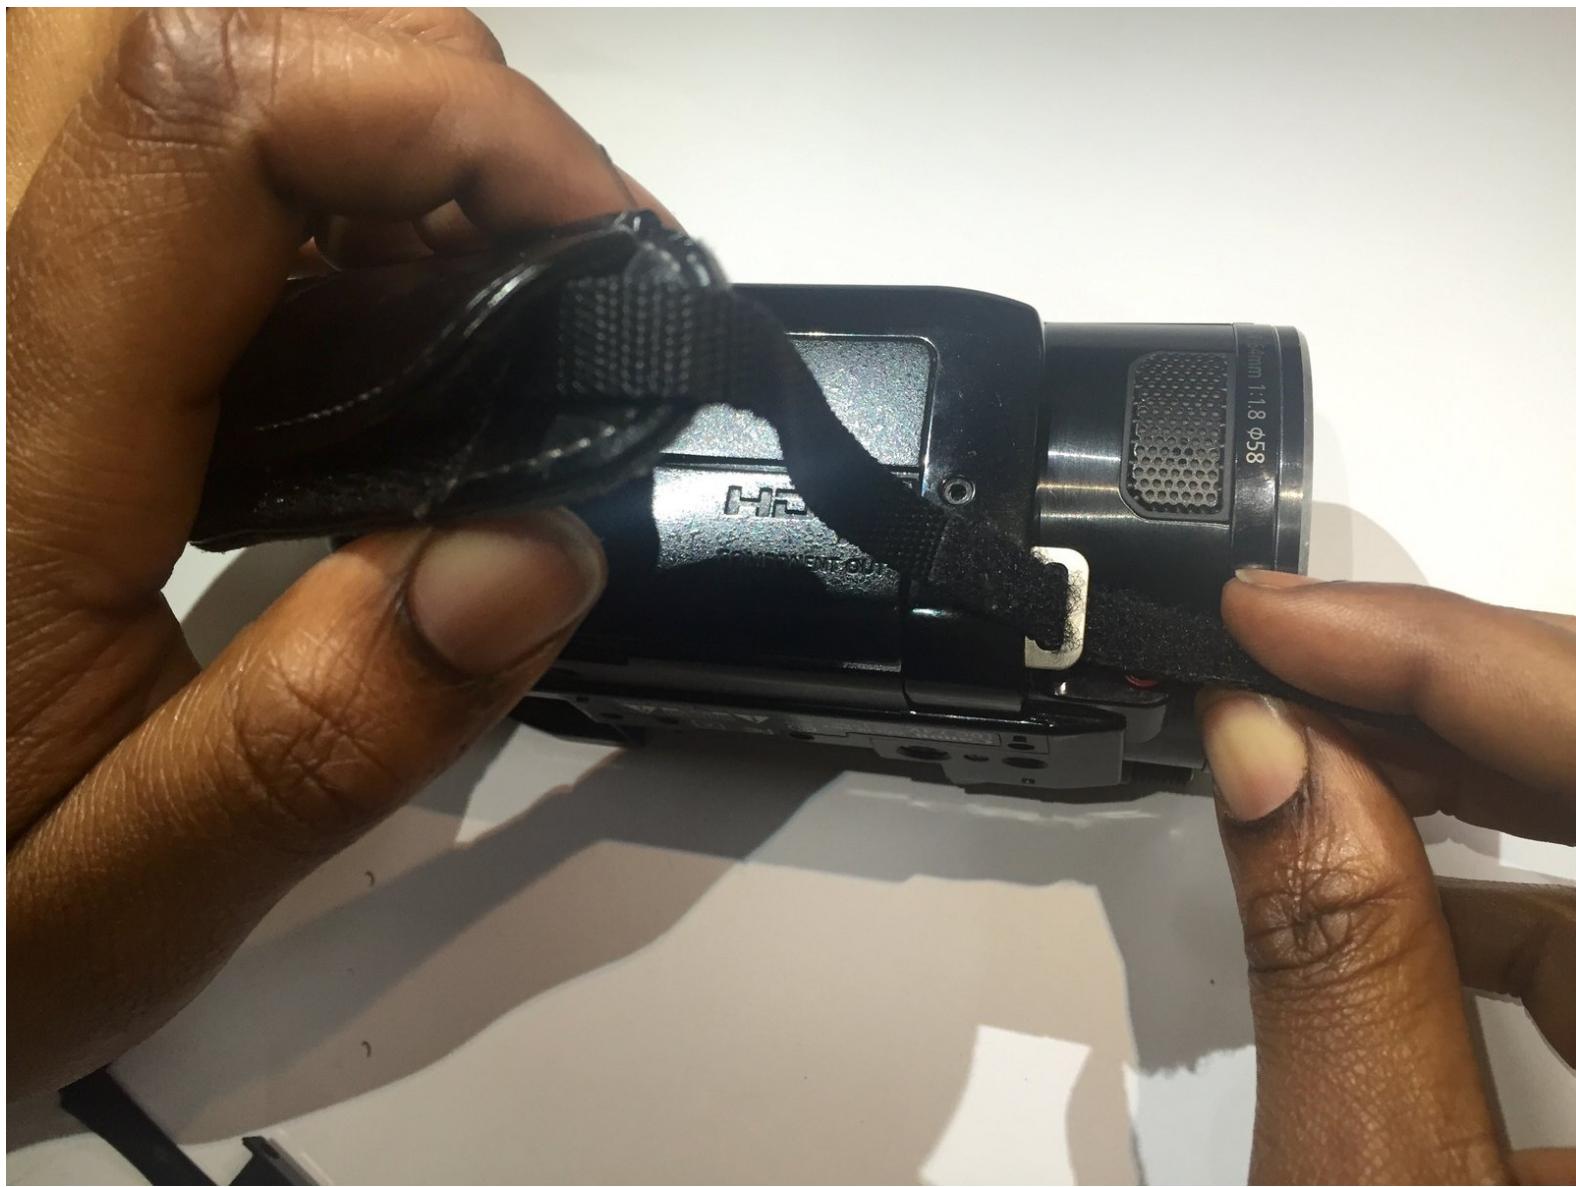

Canon Vixia HF S10 Camcorder Strap Replacement

The handle strap is a very important part of the camcorder, giving that it is what keeps the device balanced and controlled by the owner.

Written By: Olivia



This document was generated on 2019-09-26 03:14:54 PM (MST).

INTRODUCTION

These simple steps will help you replace the strap handle.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Magnetic Project Mat](#) (1)

Step 1 — The Strap Handle





- Flip the camcorder upside down and remove the four 2x2.5 mm Phillips screws.
- Flip the camcorder on its side and remove the two 1x2.5 mm Phillips screws.
- Unhook the strap.

Step 2



- Using a plastic opening tool, outline the edges.
- Remove the plastic casing.
- Remove the 2x2.5 mm Phillips screw.

Step 3

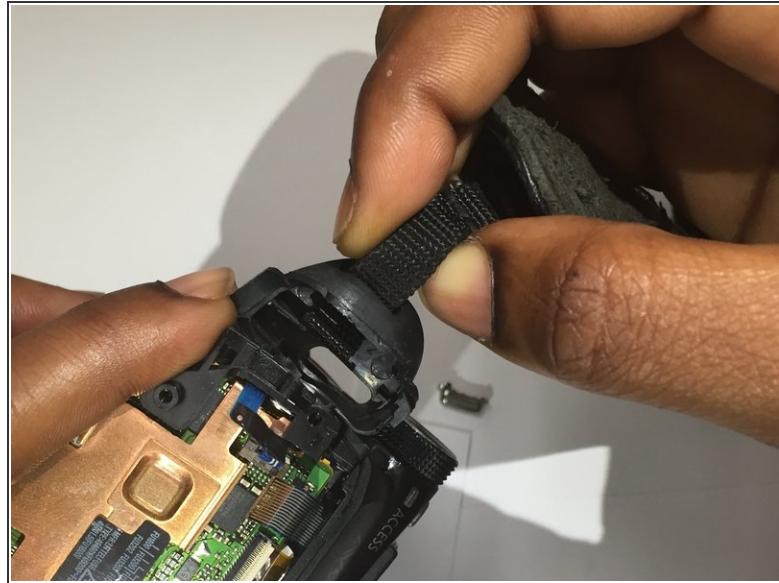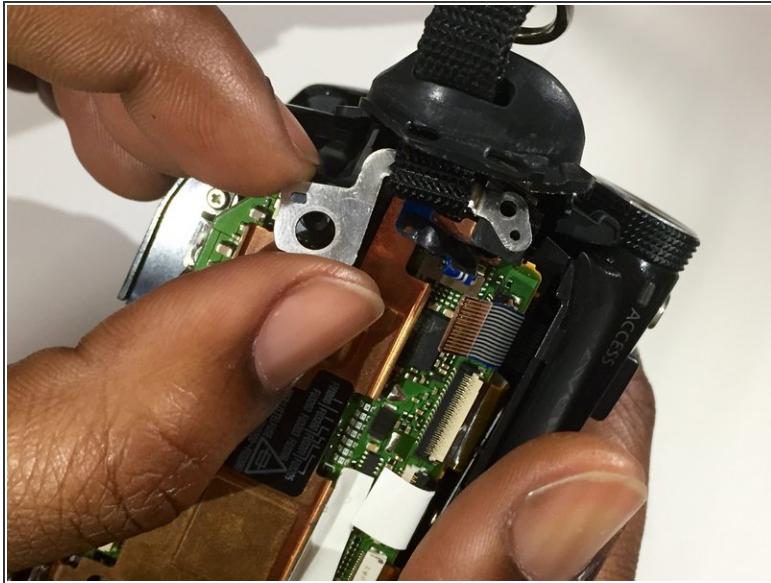

- Using your fingers, remove the silver plate.
- Remove the strap to have it replaced.

To reassemble your device, follow these instructions in reverse order.