



Caribou Coffee CC-EKV8SS7 Base Disassembly

Many of the CC-EKV8SS7 replacement guides require that the bottom of the base be removed.
This guide will demonstrate the steps necessary to do so.

Written By: Lucas Baesler



This document was generated on 2019-11-05 09:24:31 PM (MST).

INTRODUCTION

Many of the CC-EKV8SS7 replacement guides require that the bottom of the base be removed. This guide will demonstrate the steps necessary to do so.

TOOLS:

- [Tri-point Y0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Metal Spudger](#) (1)




Step 1 — Caribou Coffee CC-EKV8SS7 Base Disassembly



 Unplug the unit before disassembling to avoid electrocution.


- Remove the five (10mm) Y screws from the bottom of the base. Three are in a triangle around the center and two are on the corners of the flat edge.

Step 2

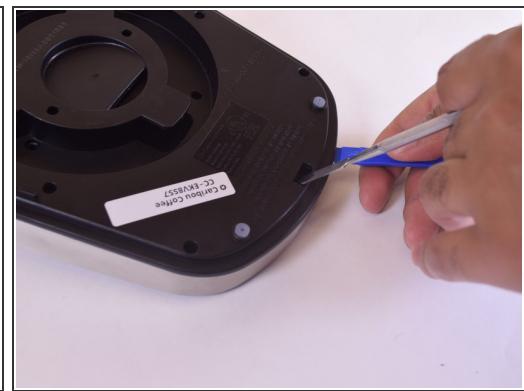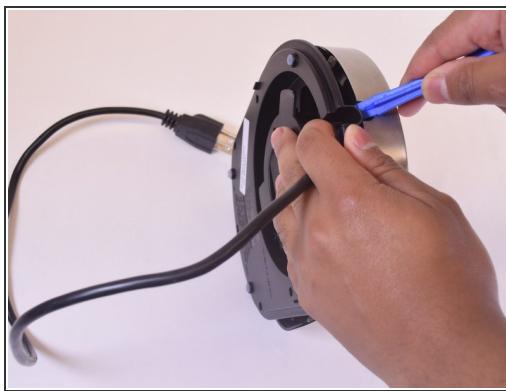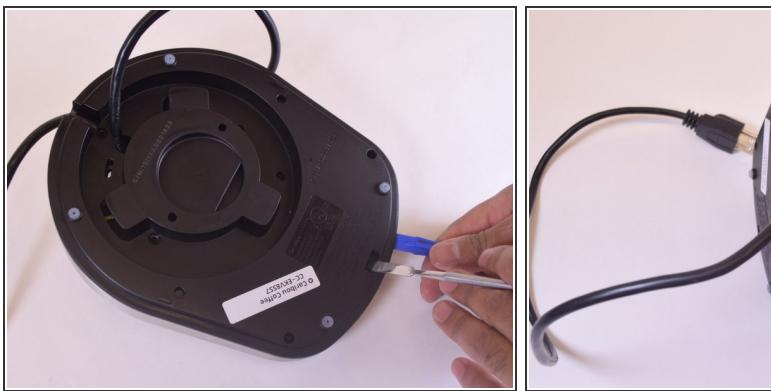

- Now you will need to 'unlock' the top and bottom of the base from each other. On the flat edge, there is a rectangle inset with one side cut out. Insert a metal spudger about 1/2" in to the opening to toggle open an interior tab.
- With the metal tool still inserted, use an opening tool between the black and silver sides to pry the base open.

Step 3

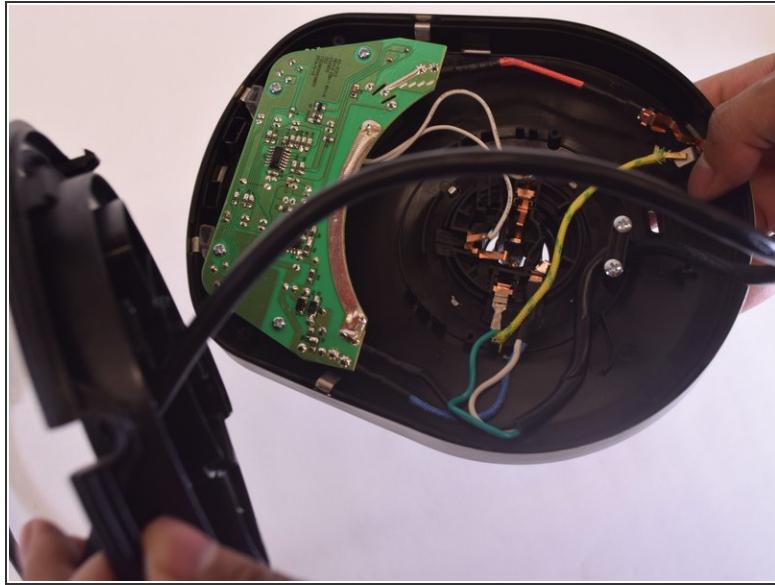

- Once you have the halves opened at least 1/4", remove the metal key and rotate the base a quarter turn in any direction.
- Continue using the spudger to pry open the base at each quarter turn until the sides separate easily.

(i) The black bottom will catch on the power cord plug, to prevent total dismantlement.

To reassemble your device, follow these instructions in reverse order.