



Casdon Dyson Ball Disassembly

Disassemble the Casdon Dyson Ball where the battery compartment is separate from the vacuum ball.

Written By: Seldon Price



INTRODUCTION

Using a PH00 screwdriver, this guide will demonstrate how to disassemble the Casdon Dyson Ball. This disassembly will show how to separate the battery compartment from the vacuum ball.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Remove one 9.2mm (0.36 in) screw using the PH00 screwdriver.
- Remove the battery cover by pulling it away from the vacuum once the 9.2mm (0.36 in) screw is removed.

Step 2



- Remove batteries from the vacuum by pulling them out and away from the vacuum.

Step 3 — Casdon Dyson Ball Disassembly



- Remove all seven 9.2mm (0.32 in) screws on the back of the vacuum.

Step 4



- Remove the front side covers by pulling them away from the vacuum.

Step 5



- Separate the battery compartment from the ball and bead cylinder by sliding the vacuum ball away from the battery compartment.

Step 6



- Separate the bead cylinder and the fan compartment by pulling the bead cylinder away from the fan compartment.

Step 7



- Remove beads from the container.

To reassemble your device, follow these instructions in reverse order.