



# Casdon Dyson Ball On/Off Switch Replacement

Replace a faulty on/off switch to enable your Casdon Dyson Ball to turn on and off correctly.

Written By: Seldon Price



## INTRODUCTION

Using a PH100 screwdriver, a set of wire cutters, and a soldering tool, the on/off switch can be replaced in the Casdon Dyson Ball.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Soldering Iron](#) (1)
- [Flush Wire Cutters](#) (1)

## Step 1 — Battery



- Remove one 9.2mm (0.36 in) screw using the PH00 screwdriver.
- Remove the battery cover by pulling it away from the vacuum once the 9.2mm (0.36 in) screw is removed.

## Step 2



- Remove batteries from the vacuum by pulling them out and away from the vacuum.

## Step 3 — On/Off Switch



- Remove four 9.2mm (0.32 in) screws from the back of the vacuum using the PH00 screwdriver.

## Step 4



- Remove the cover to the on/off switch by pulling up on the cover from the front of the vacuum.

## Step 5




- Cut the two wires connected to the on/off switch using a set of wire cutters.

## Step 6



- Remove the two 9.2mm (0.32 in) screws which hold the on/off switch to the vacuum using the PH00 screwdriver.

## Step 7

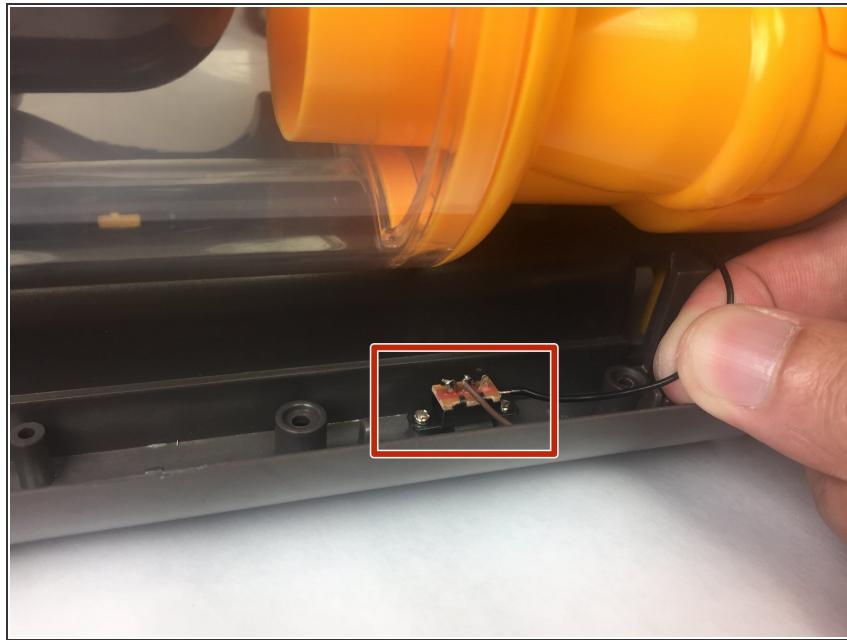

- Remove the on/off switch by pulling it away from the vacuum with your fingers.
- Replace the faulty on/off switch with the new on/off switch.
- ➡ Solder the new on/off switch's wires to the vacuum's wires using a soldering station.

To reassemble your device, follow these instructions in reverse order.