



# Casio CGP-700 Teardown

Disassemble CGP-700 to check/replace circuit boards. Replace JKA1 Board to fix pedal/line outs

Written By: jfar



## Step 1 — Tools/Hardware




- See tools needed for disassembly
- There are 5 types of screws to remember where they go back in place

## Step 2 — Remove keyboard from base




- Remove from base. 4 screws on corners. Disconnect speakers from base.
- Flip keyboard over.

## Step 3 — Remove Back Screws

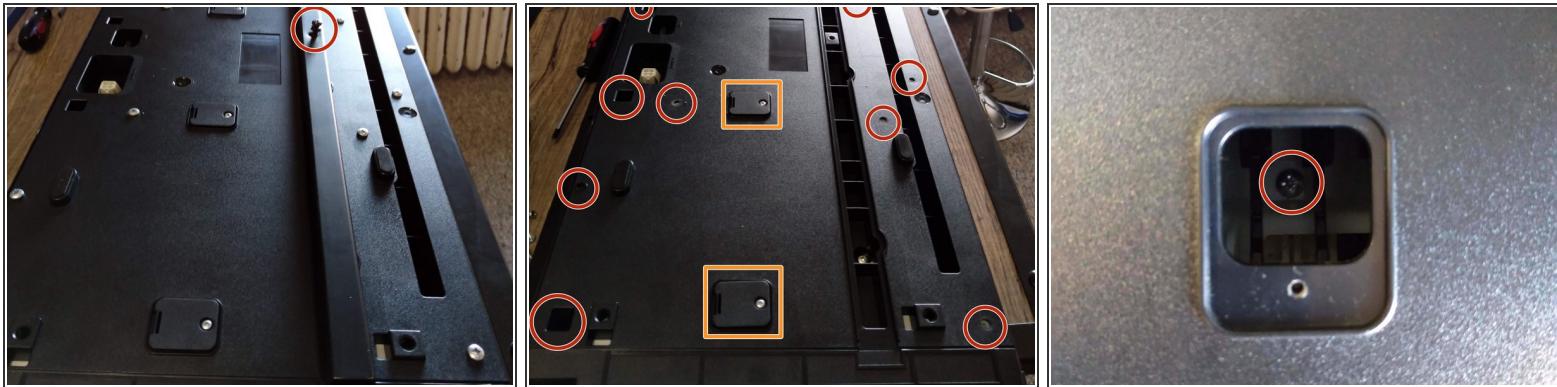


- Remove the square tube support first
- Remove all visible screws on the back
- Underneath tabs, use a magnetid screw driver to remove screws inside the keyboard body

## Step 4 — Remove Side Panels

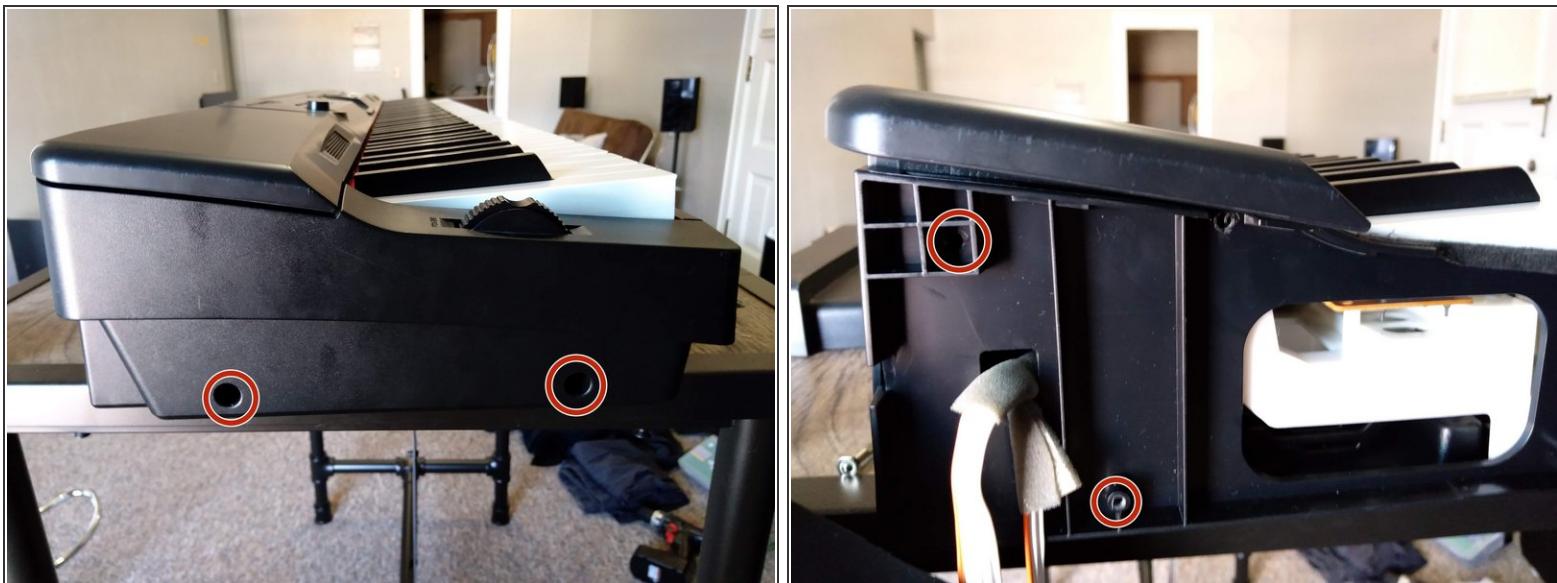

- Remove side panels on each side
- Use both hands to pull it out, prying one side at a time

## Step 5 — Remove pitch slide, headphone jack from left panel

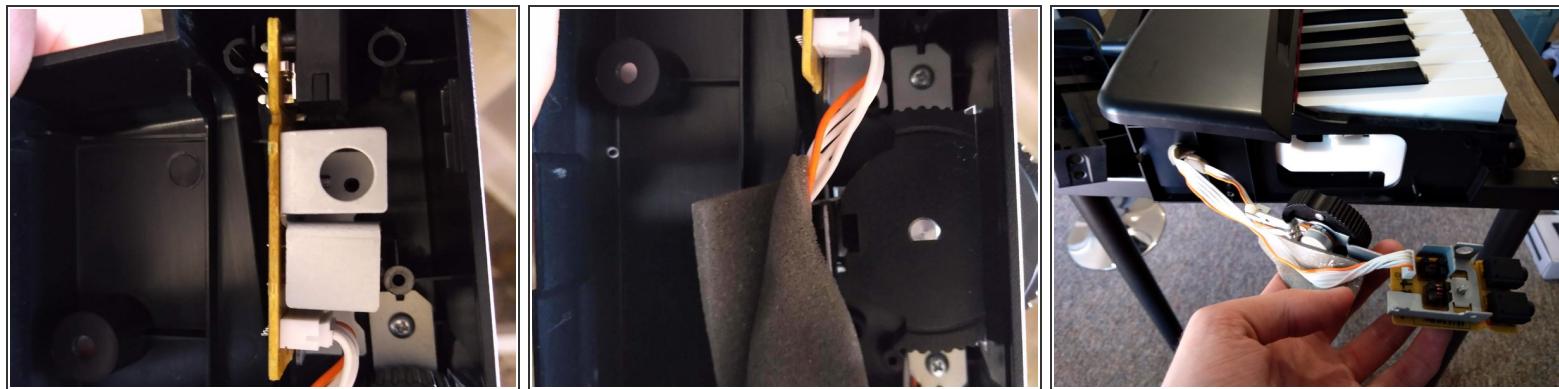


- Remove ribbon from circuit board. Untape ribbon cable from side panel
- Use a small screw driver to remove screws on circuit boards

## Step 6 — Remove top panel



- Carefully flip the over the keyboard while holding it together
- The top panel should easily lift up without force. Otherwise check for screws in the keyboard

## Step 7 — Inspect circuit boards

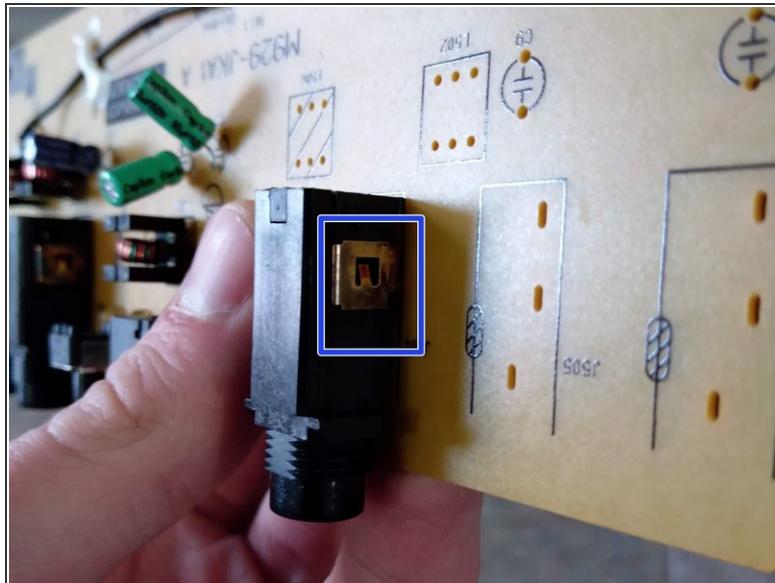

- Inspect for defective parts
- Replacement boards available online

To reassemble your device, follow these instructions in reverse order.