




Casio Cassiopeia E-125 Key Pad Replacement

This guide will show you how to replace the key pad.

Written By: Ryan Fernandez

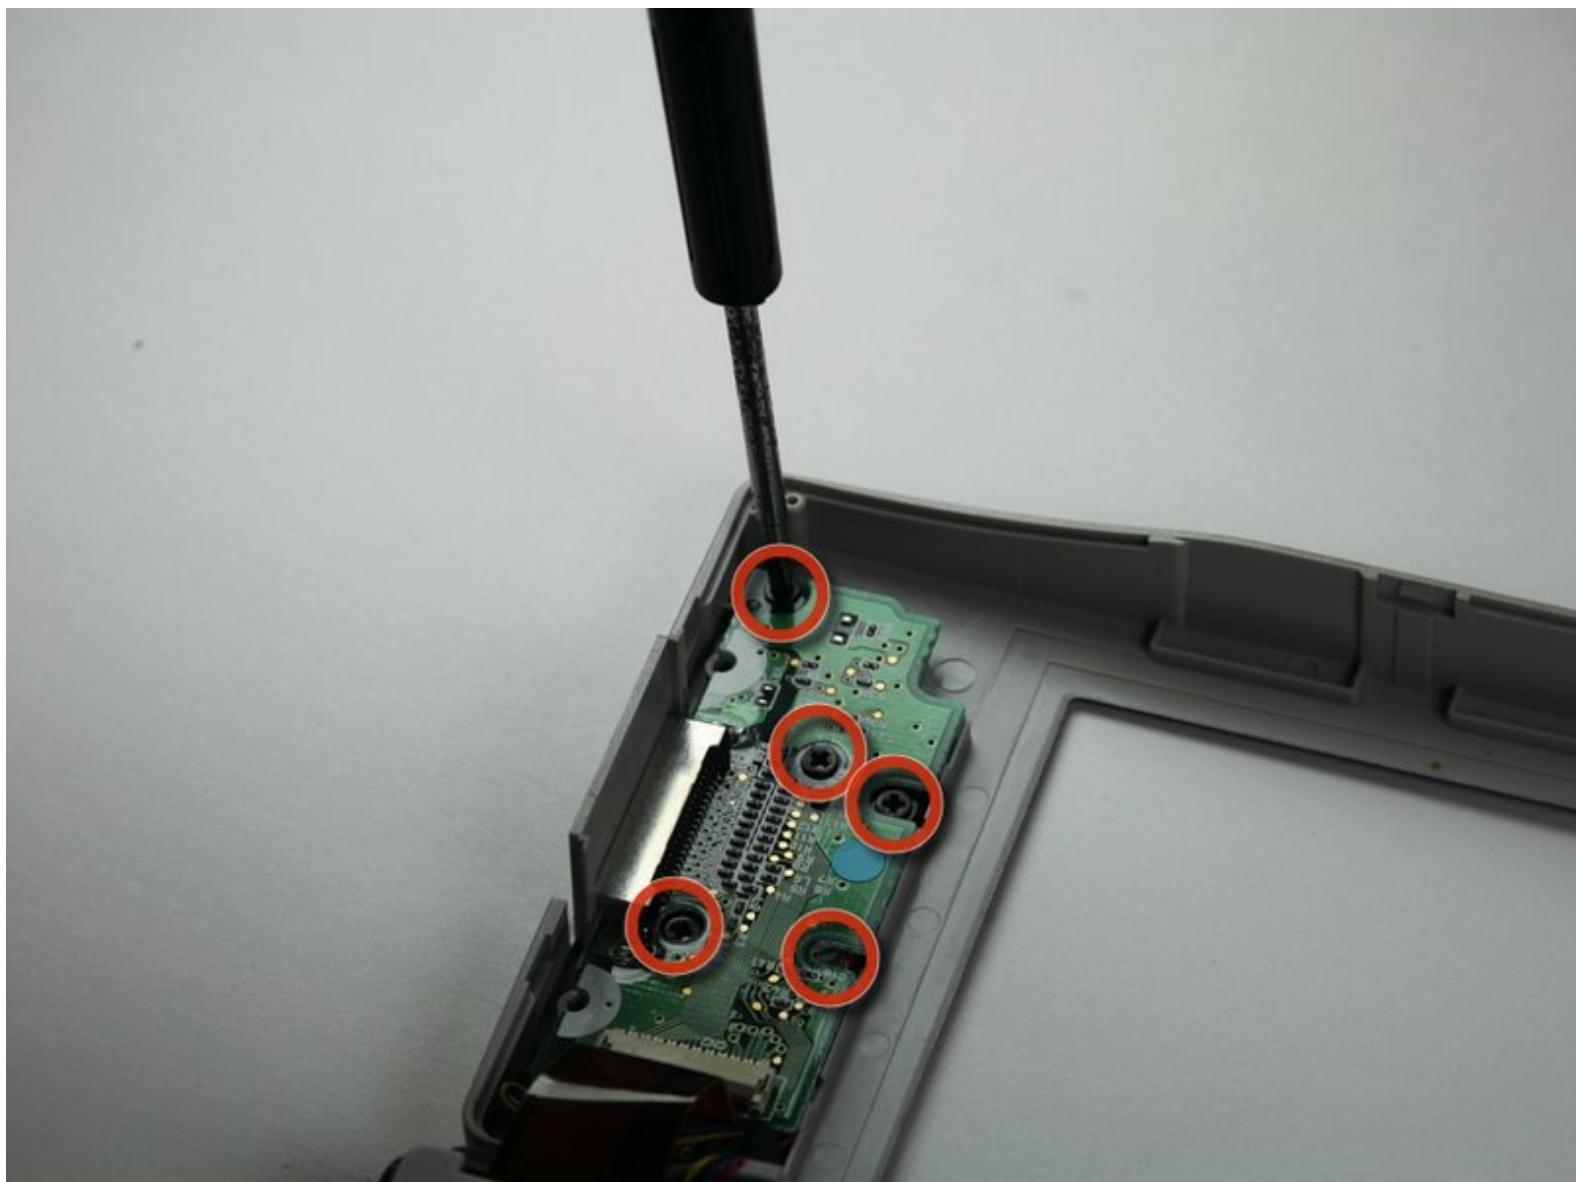

 **TOOLS:**

- **Phillips #00 Screwdriver** (1)
- **Flathead 3/32" or 2.5 mm Screwdriver** (1)

Step 1 — Battery



- Flip the device over to the back side.

Step 2



- Slide the small switch on the back to "MAIN".

Step 3




- Slide the battery cover downwards.
- Pull off the battery cover.

Step 4




- Pull the black tab to remove the battery.

Step 5 — Touch Screen

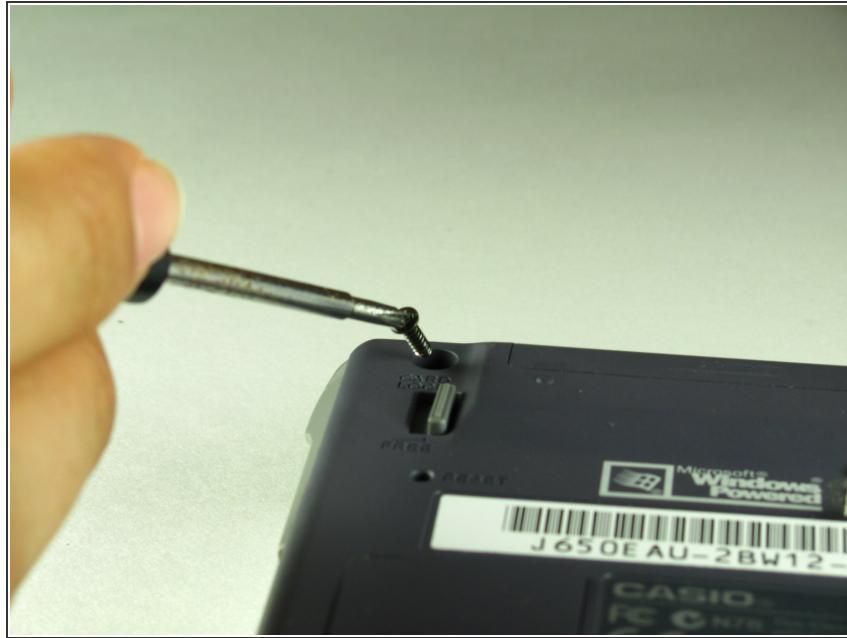

- Using the Phillips #00 screwdriver, remove the two screws near the top of the device.

Step 6

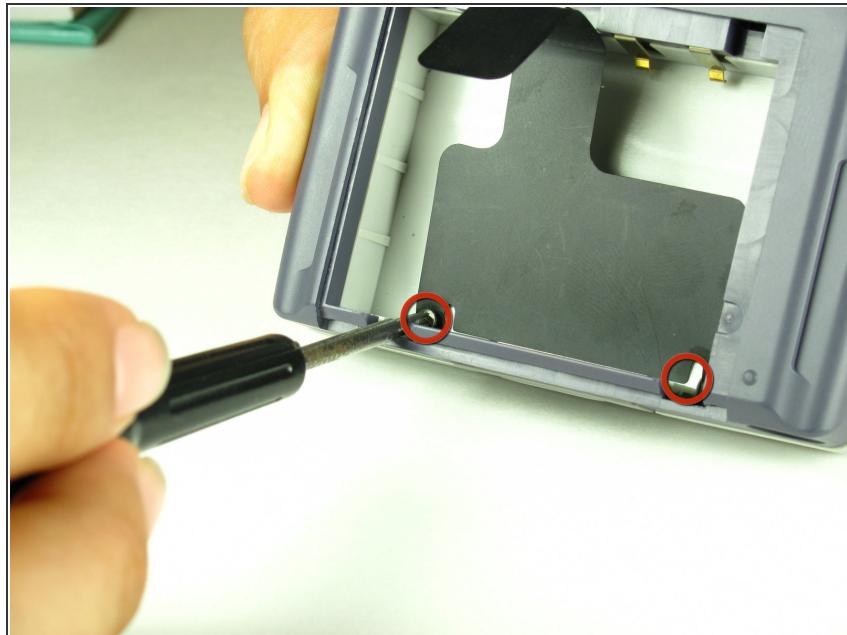


- Using the Phillips #00 screwdriver, remove the two screws located inside the battery compartment.

Step 7



- Partially separate the two halves of the case by inserting the tip of a small flat head screw driver into the space between the halves.

Step 8

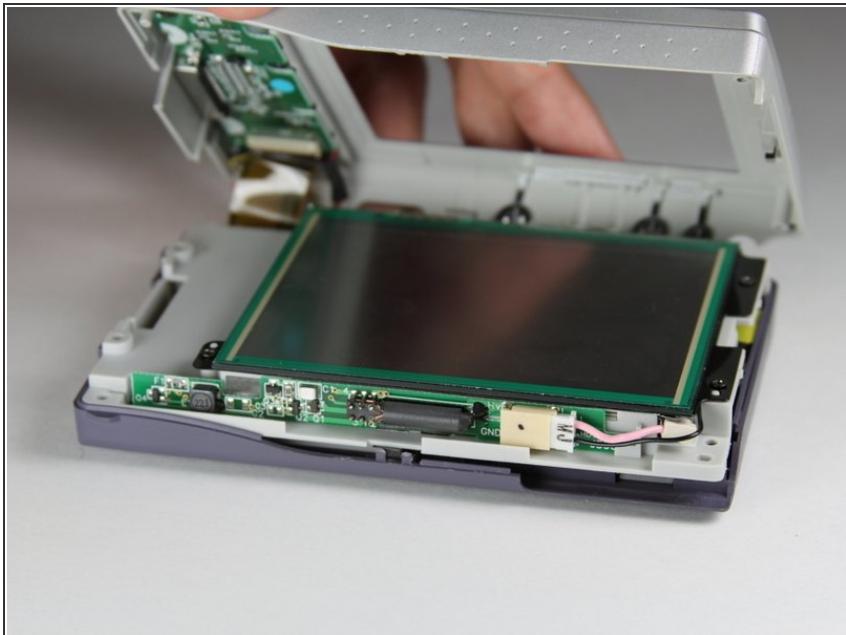

- Pry the two halves of the case apart with the small flat head screwdriver.

Step 9



⚠ Caution: be careful not to pull out the wires connecting the two halves of the outer case. These wires are necessary for the device to be able to function.


- Lay the two halves of the outer case next to the central components as shown.

Step 10



- Using the #00 Phillips screwdriver, remove the screws from the corners of the screen. There are 3 screws total.

Step 11

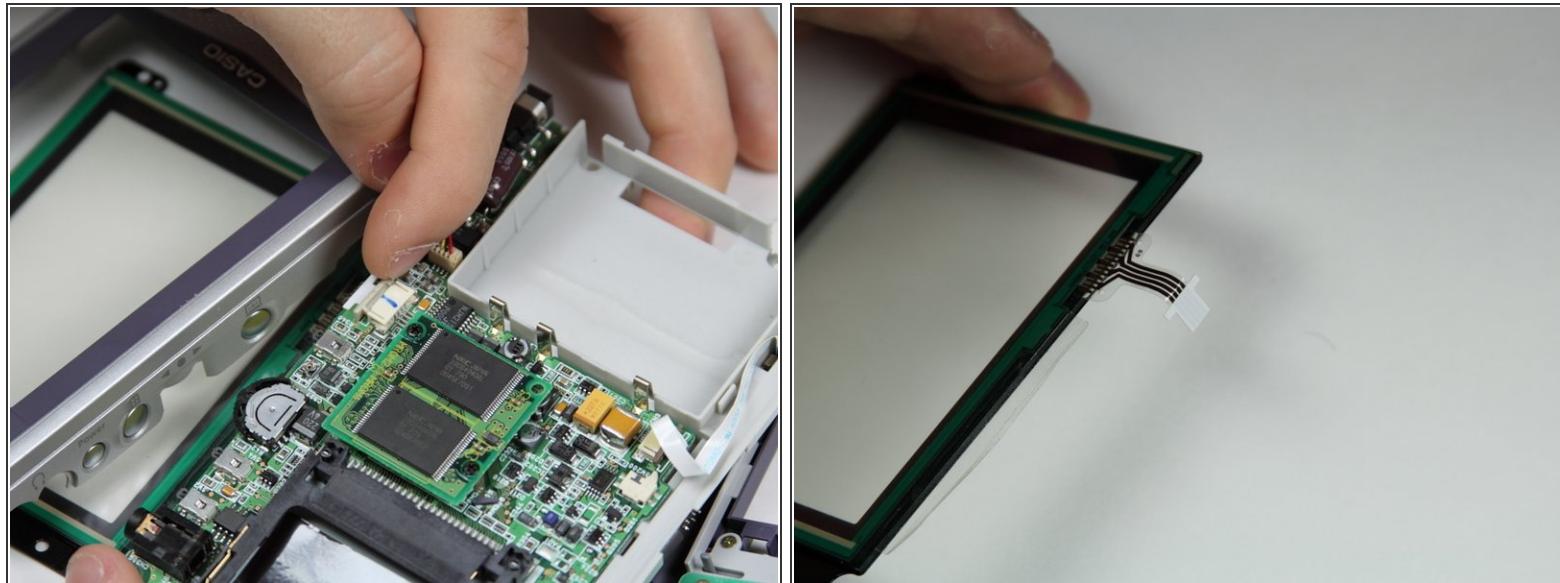


- Lift the tab on the motherboard and pull out the ribbon cable.
- After the ribbon cable is detached from the motherboard, the touch screen is completely separated from the device.

Step 12 — Key Pad




- Using the #00 Phillips screwdriver, remove the screws on the back of the front case. There are five total.

Step 13

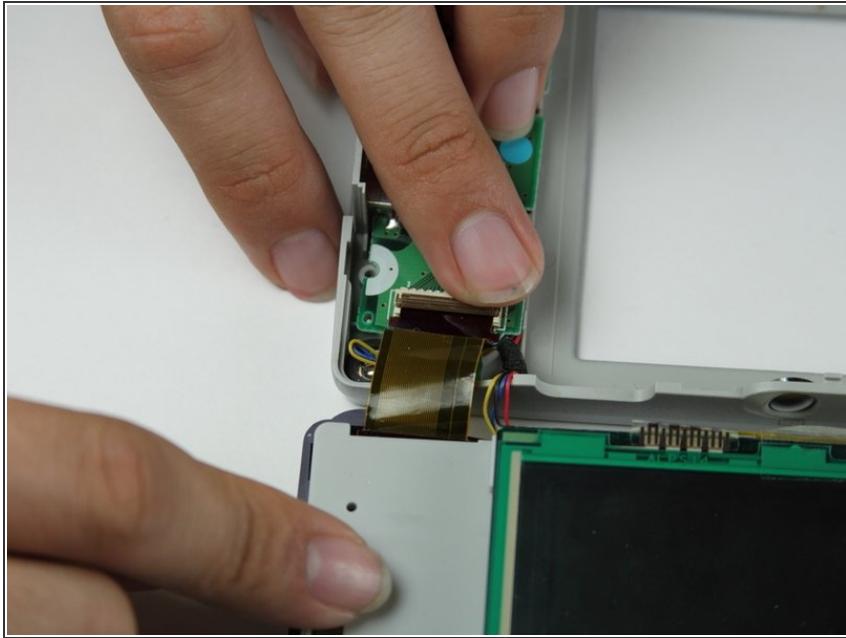

- Pull the ribbon cable out of its port on the back of the keypad.

Step 14

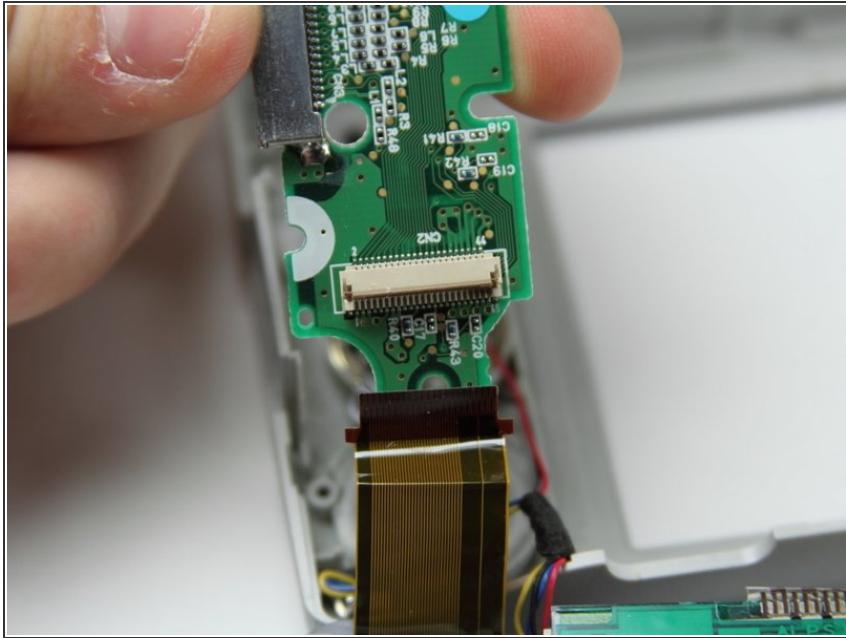

- The keypad can now be lifted off the front case.

To reassemble your device, follow these instructions in reverse order.