



Casio Exilim EX Z55 LCD Screen Replacement

How to remove the LCD screen.

Written By: Laura



INTRODUCTION

This guide shows how to remove the LCD screen from the camera. You may have to replace a broken or shattered screen.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Front Case



- Locate 12 screws. Four on the left, four on the right, and four on the bottom.

Step 2

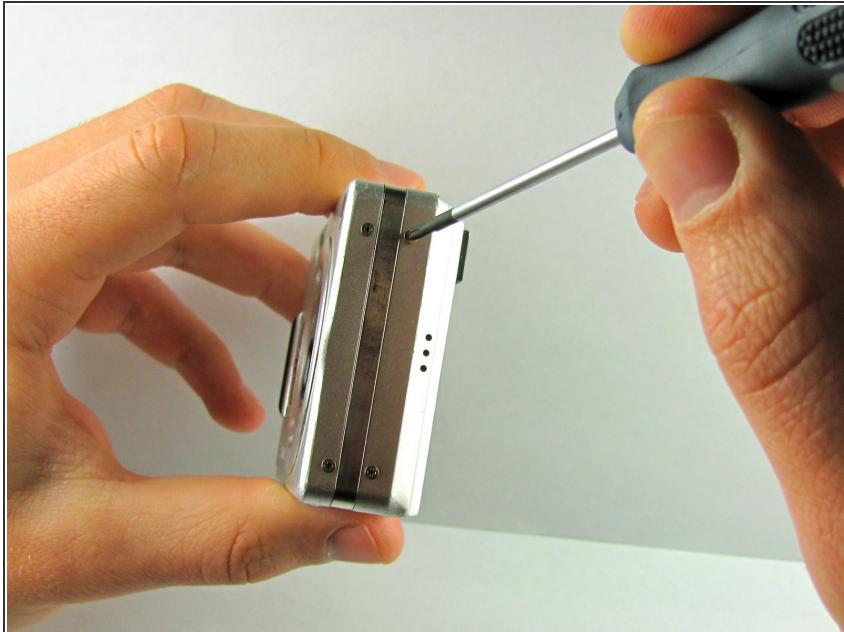

- Using the #00 Phillips screwdriver, remove the four 3.66mm screws from the bottom outer case, and the eight 1.75mm screw from the sides of the case.

Step 3




- Separate the front case from the body of the camera.

Step 4 — Back Case




- Separate the back case from the body of the camera.

Step 5 — LCD Screen

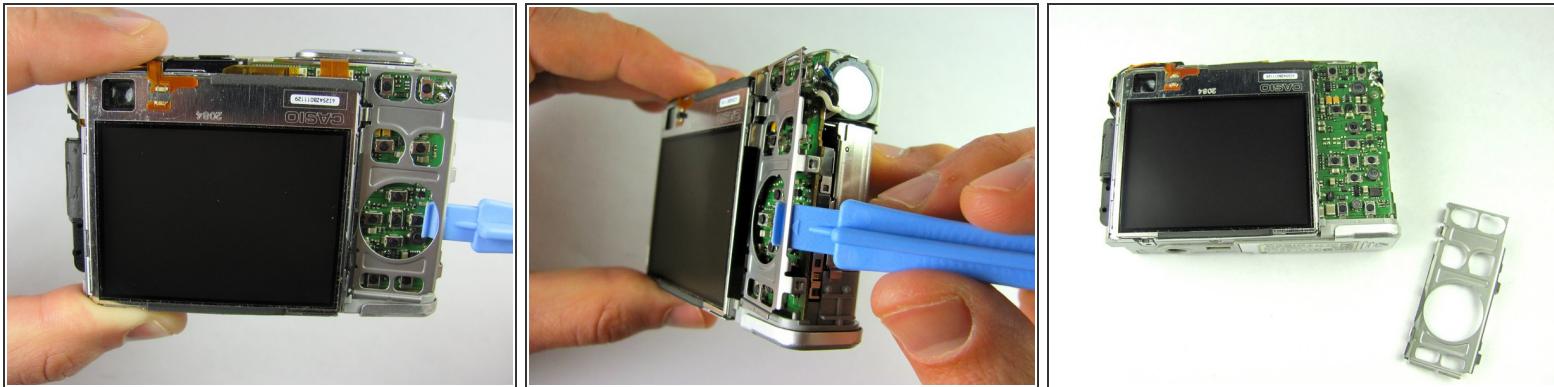


- Remove the metal grating located to the right of the LCD screen by inserting the plastic opening tool under the grating and pulling up.

Step 6

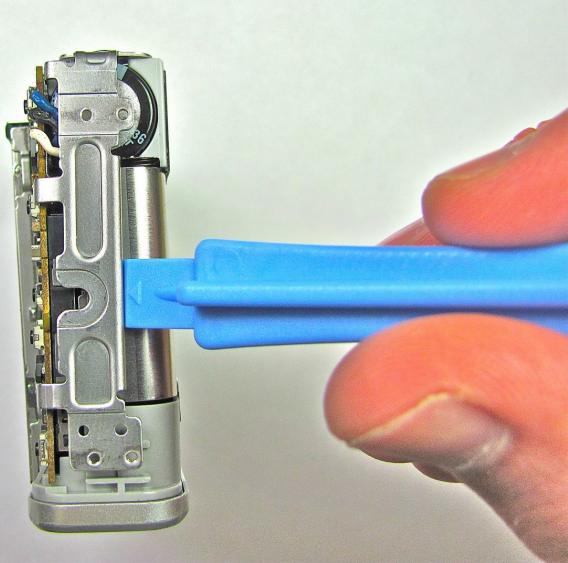

- Before removing the side metal bracket, first remove the attached strap knob by twisting it off.
- Then, remove the side metal bracket by inserting the plastic opening tool under the bracket and pulling up.

Step 7

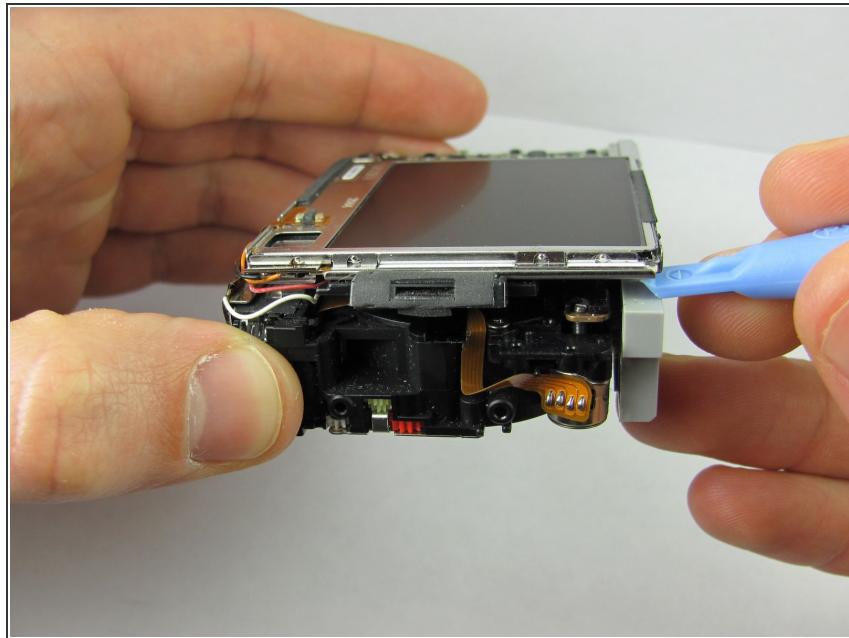

- Using the plastic opening tool, pry up the LCD screen starting at one of the corners. Insert the tool under one of the corners and lift up.

Step 8



- Continue to lift the LCD screen all the way up.

⚠ Be careful not to rip any wires connecting the LCD screen to the top of the camera.

To reassemble your device, follow these instructions in reverse order.