


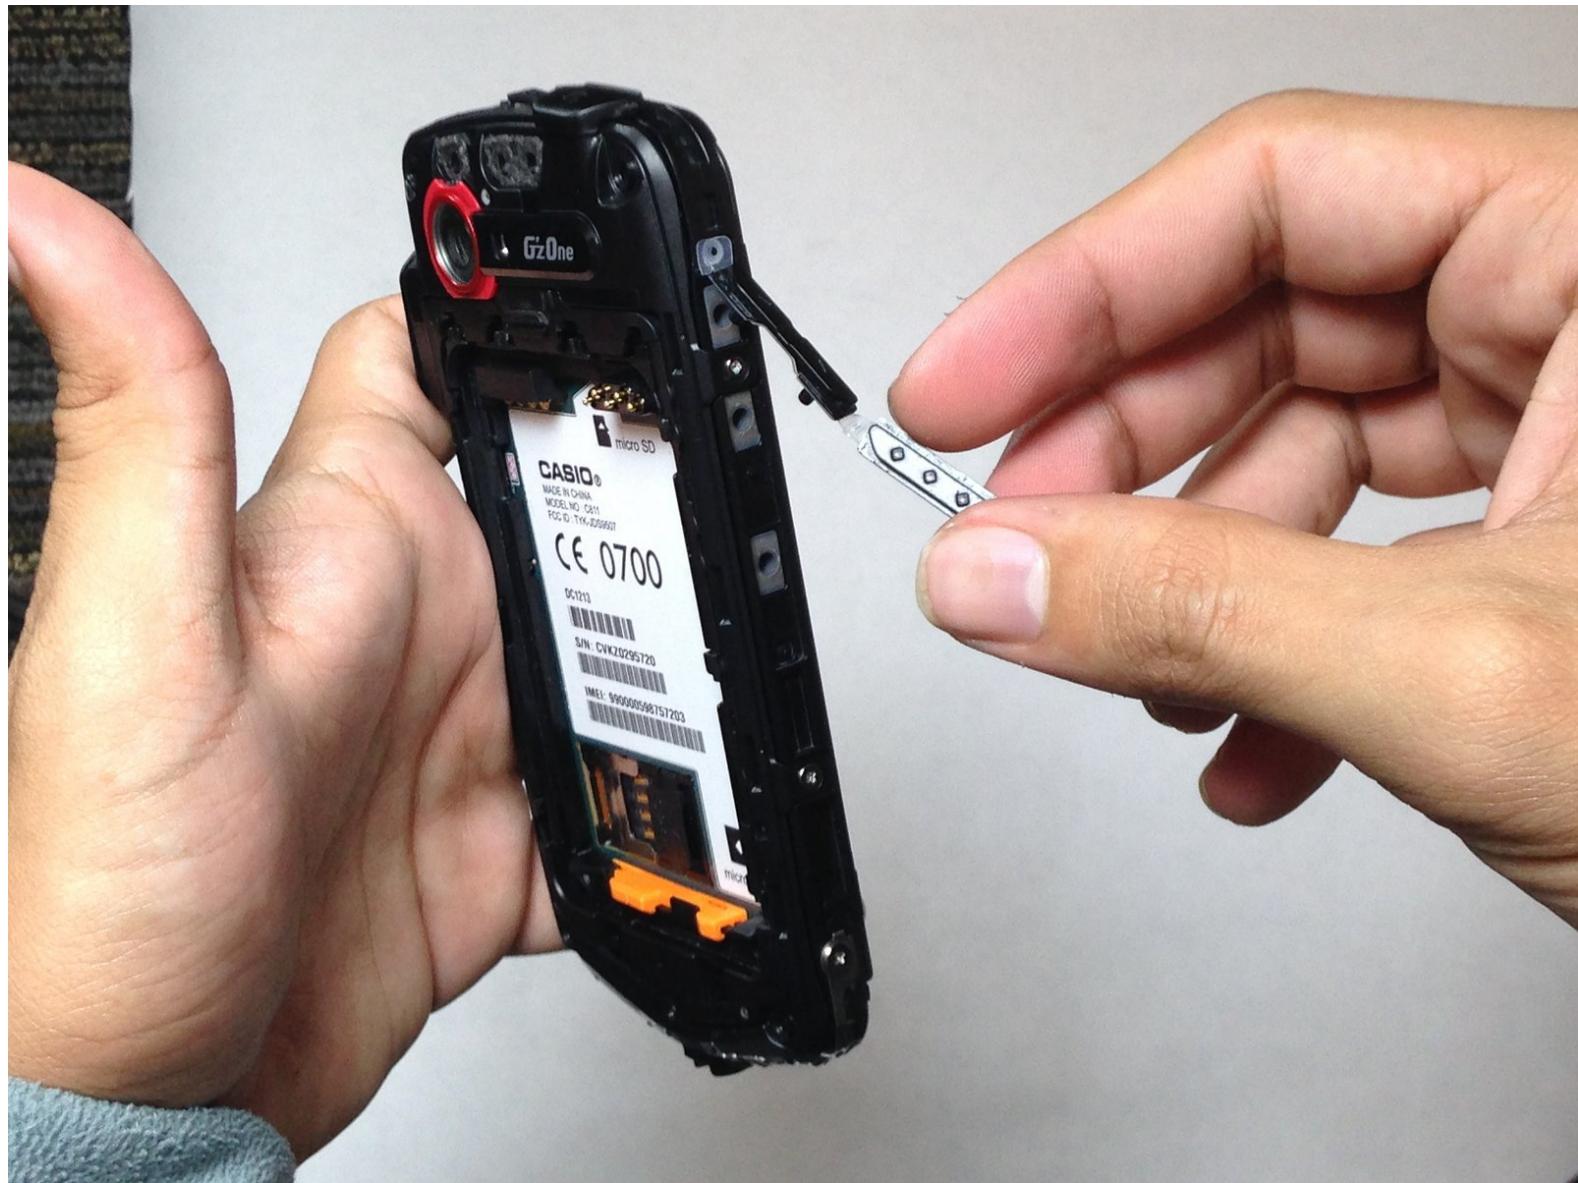

Casio G'zOne Commando 4G LTE Volume Buttons Replacement

This guide shows how to replace the volume buttons located on the side of the phone.

Written By: Brett Boehm



 **TOOLS:**


- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Remove front and back screws



- Use a screwdriver to remove the front and back 5 mm screws.
- *(i)* There are 4 screws in the back and 2 screws in the front.


Step 2 — Remove side-Back cover

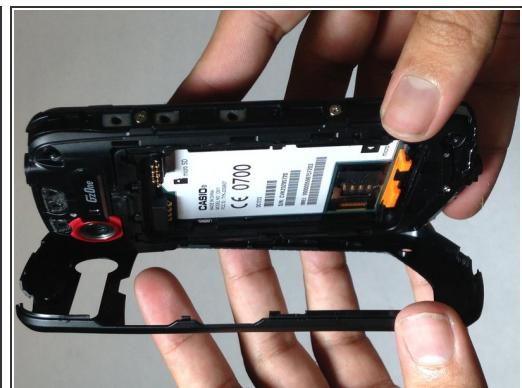

- Use your hands to remove the side cover from any corner of the phone.
- Push the screen with your thumbs so that the frame comes out easily.

 Make sure to push gently because the frame is fragile.

Step 3 — Remove Side-Front cover

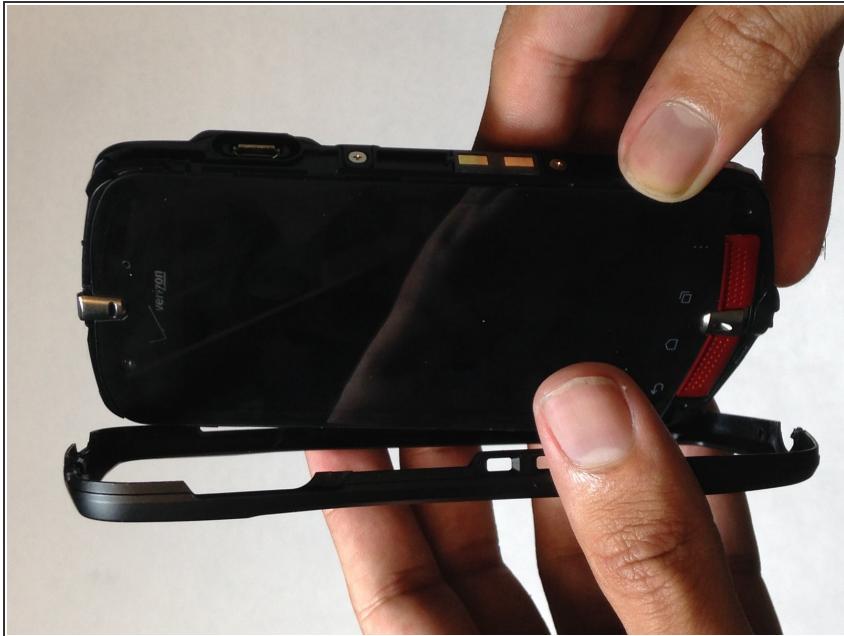


- The side-front cover will come out easily because it is not attached any more by the side-back cover.

Step 4



- Unscrew the eight 2.5mm Phillips screws in the holes of the casing.

Step 5

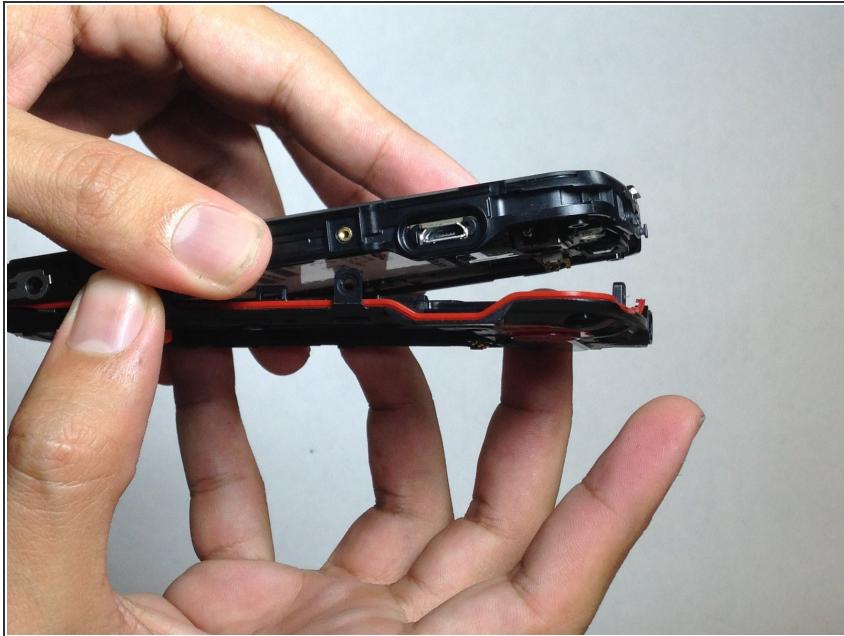

- After all the side screws are removed, pull off the motherboard cover.

Step 6



- Unscrew all 2.5 mm attached to the mother board.

⚠ Do not touch the integrated circuits in the mother board.

Step 7 — Motherboard



- Finally, use the spudger very gently to remove the motherboard.

Step 8 — Removing external volume pads



- Following step 4 in the prerequisite guide, remove the volume pads located on the side of the phone with a gentle pull.

Step 9 — Removing internal volume buttons



- Following step 6, remove the adapter connecting the volume buttons to the motherboard.

To reassemble your device, follow these instructions in reverse order.