




Casio WK-220 Speaker Replacement

Remove and replace speaker

Written By: Alexa

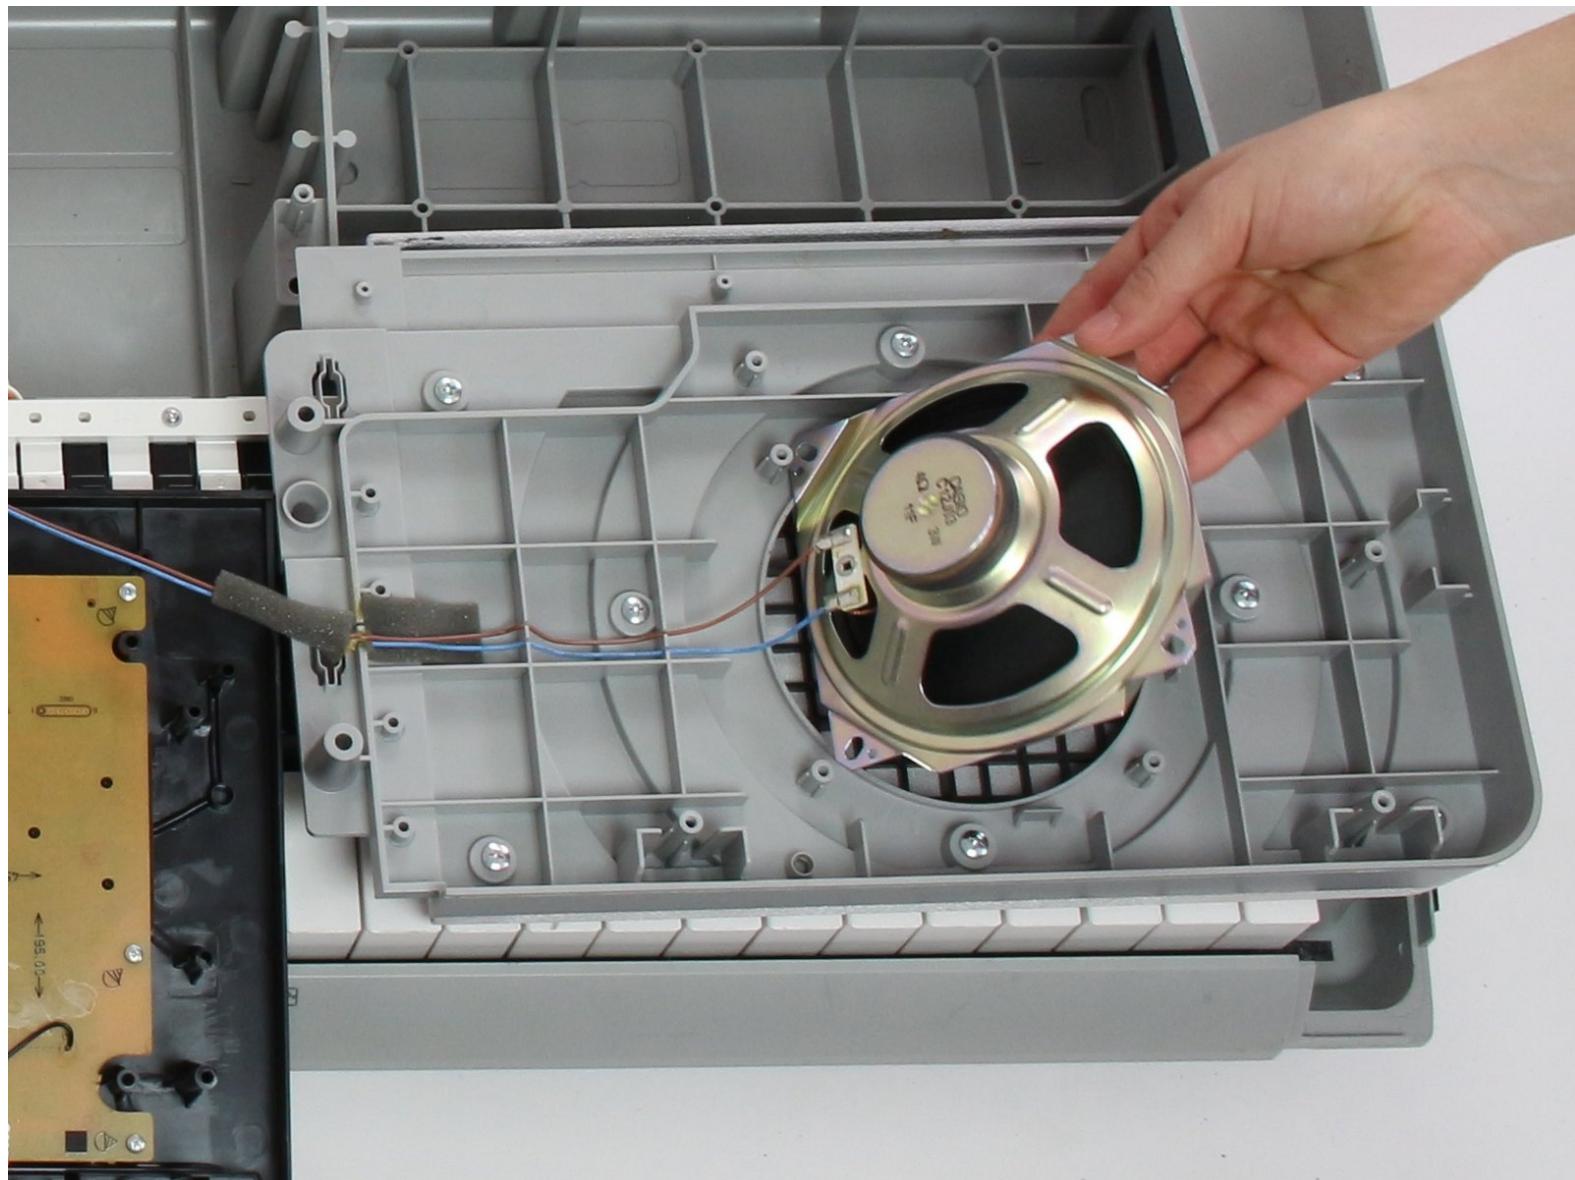

INTRODUCTION

This guide will walk you through the steps of how to get to the speaker component of the keyboard in order to properly replace it.


TOOLS:

- Solder (1)
- Phillips #2 Screwdriver (1)
- Portable Soldering Iron (1)
- iFixit Opening Tools (1)

PARTS:


- Casio Speaker (1)

Step 1 — Speaker

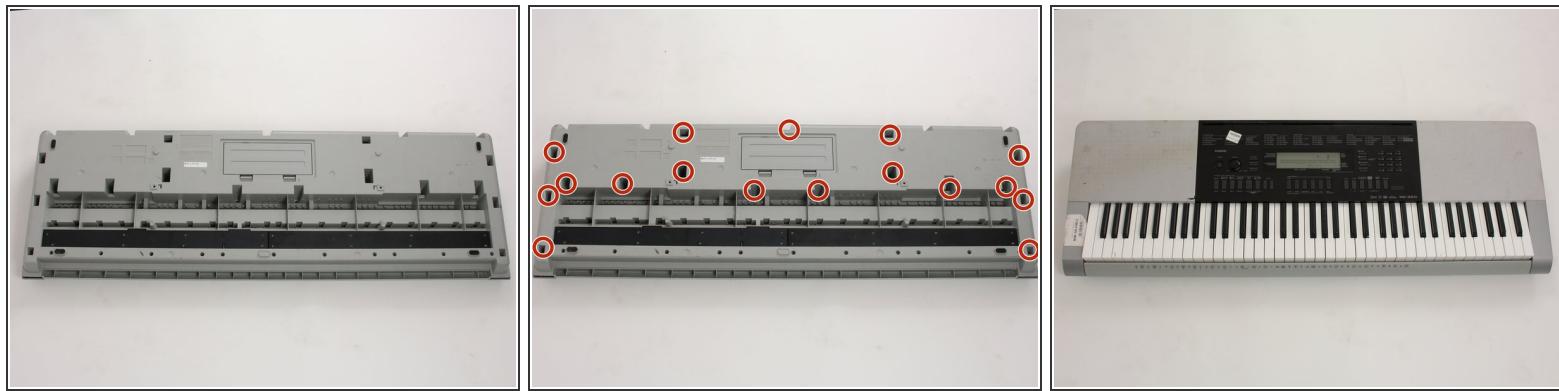

- Place device face-down.
- Remove seventeen 16 mm screws with a Phillips #2 screwdriver.
- Flip keyboard around so the keys are facing up.

Step 2

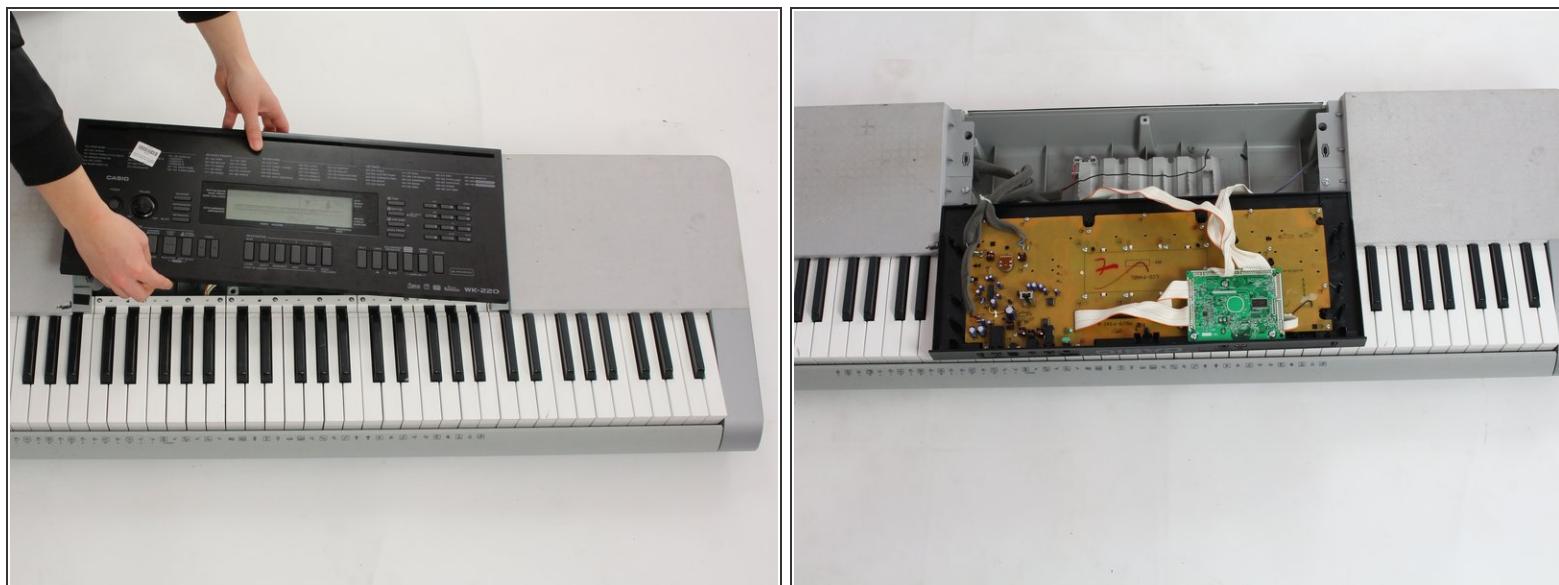


- Pull the black panel away from the keyboard.

Step 3





- Remove two 16 mm screws with a Phillips #2 screwdriver.
- Pop the wires out of the plastic holders with a finger.

Step 4

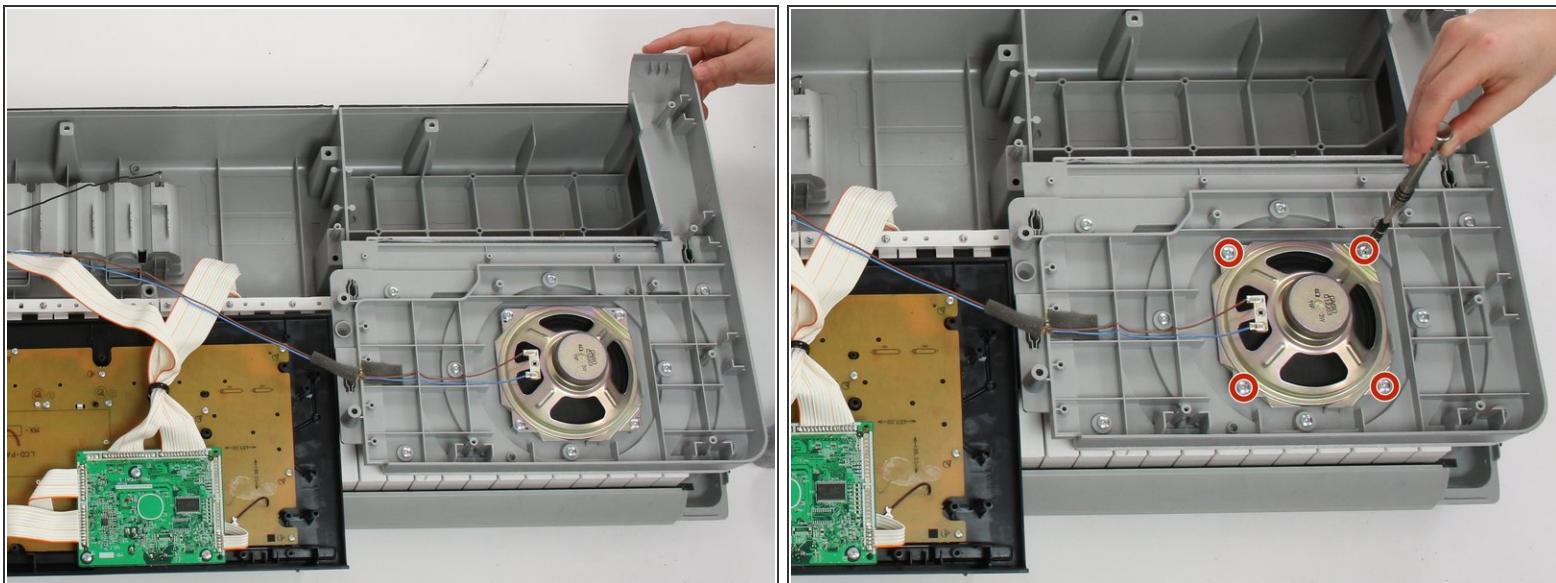

- Turn the speaker around and place on the keyboard keys.
- Remove four 16 mm screws with a Phillips #2 screwdriver.

Step 5

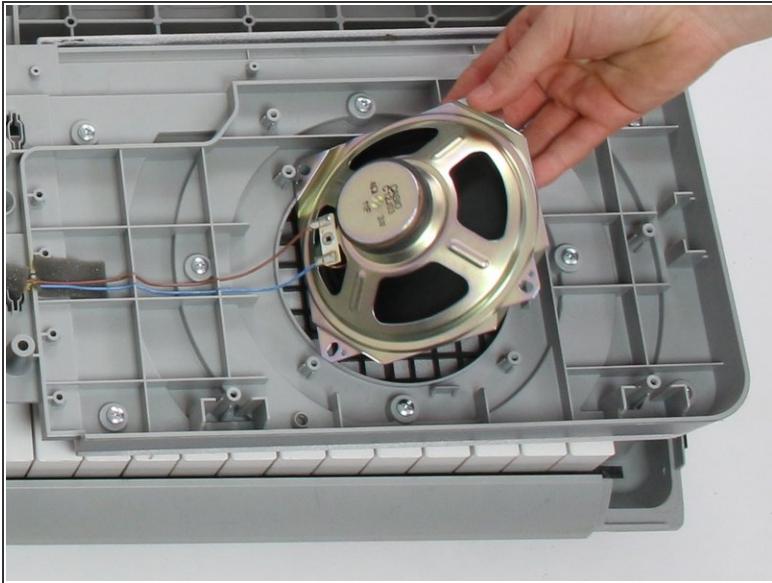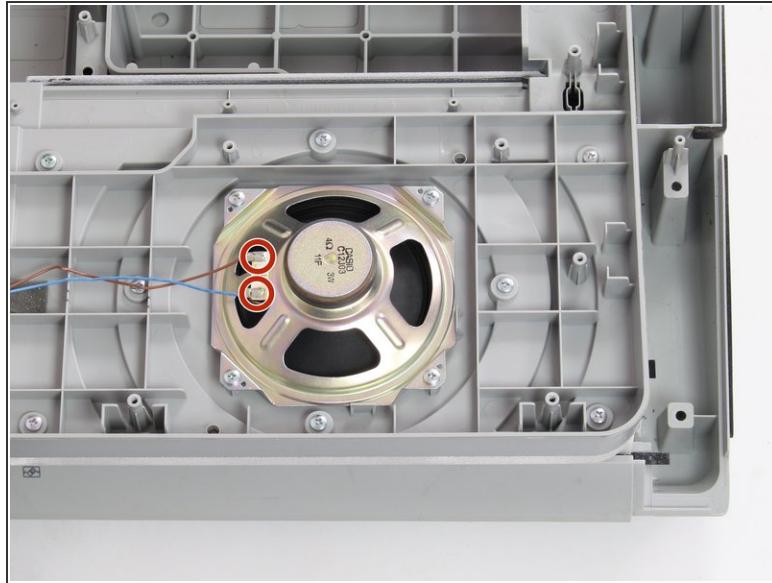

- De-solder speaker wires at indicated points.
- Follow the [How to Solder and Desolder Connections](#) guide for soldering help.
- Remove the speaker.

To reassemble your device, follow these instructions in reverse order.