



Chromebook 15 CB3-531-C4A5 Screen Replacement

This guide will elaborate on how to replace a screen in a Chromebook 15 CB3-531-C4A5

Written By: Savannah Vining




INTRODUCTION

The screen will need to be replaced if there are pixels on the screen, a blue screen, or no display. There are no hazards accompanied with this task.

TOOLS:

- Spudger (1)
- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)
- 64 Bit Driver Kit (1)

Step 1 — Screen

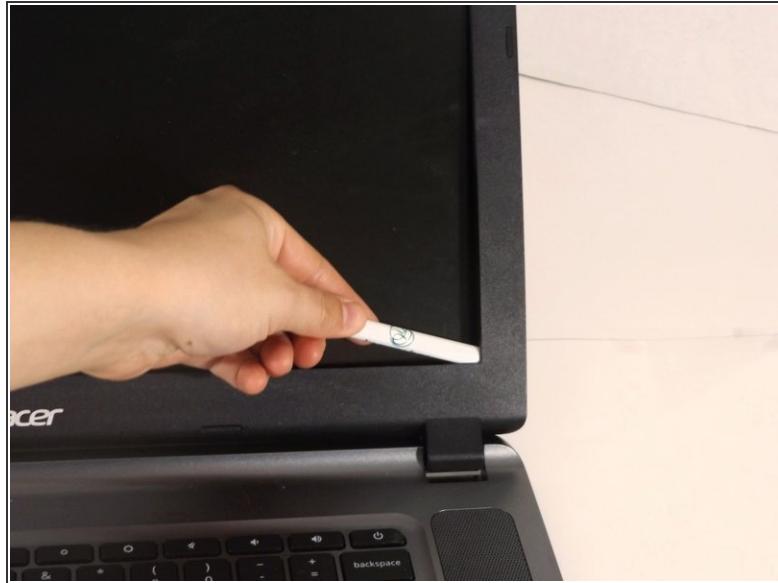


- Remove the bezel with a plastic spudger.

Step 2




- Remove four screws - one in each corner along the screen.

Step 3

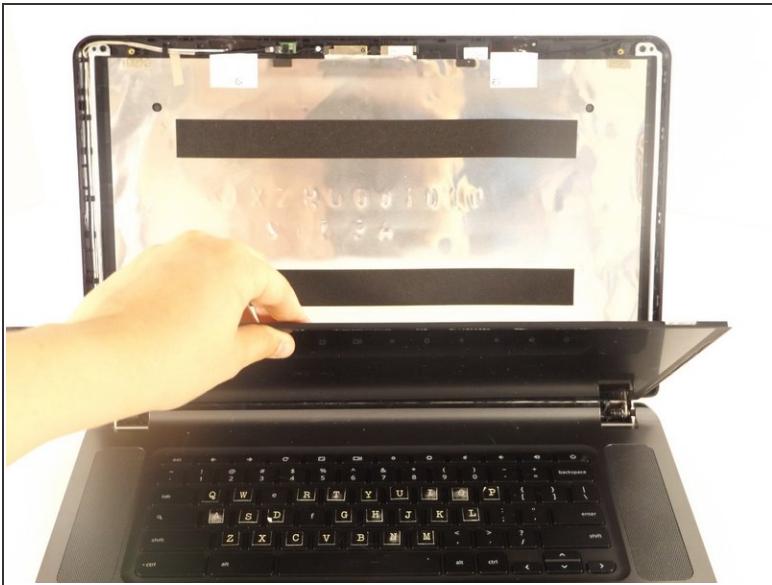

- Remove Screen by gently pulling it out and then lifting it up.

Step 4

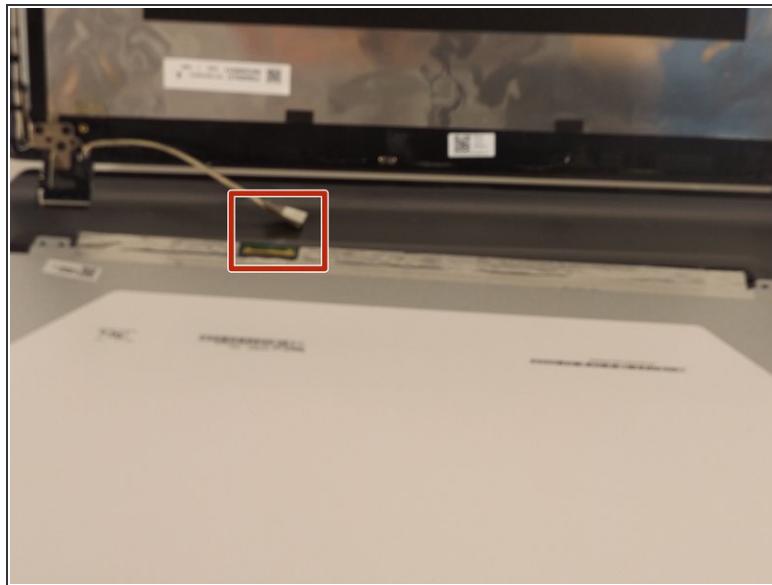

- Remove the LCD data cable which will allow the screen to be removed completely.

To reassemble your device, follow these instructions in reverse order.