


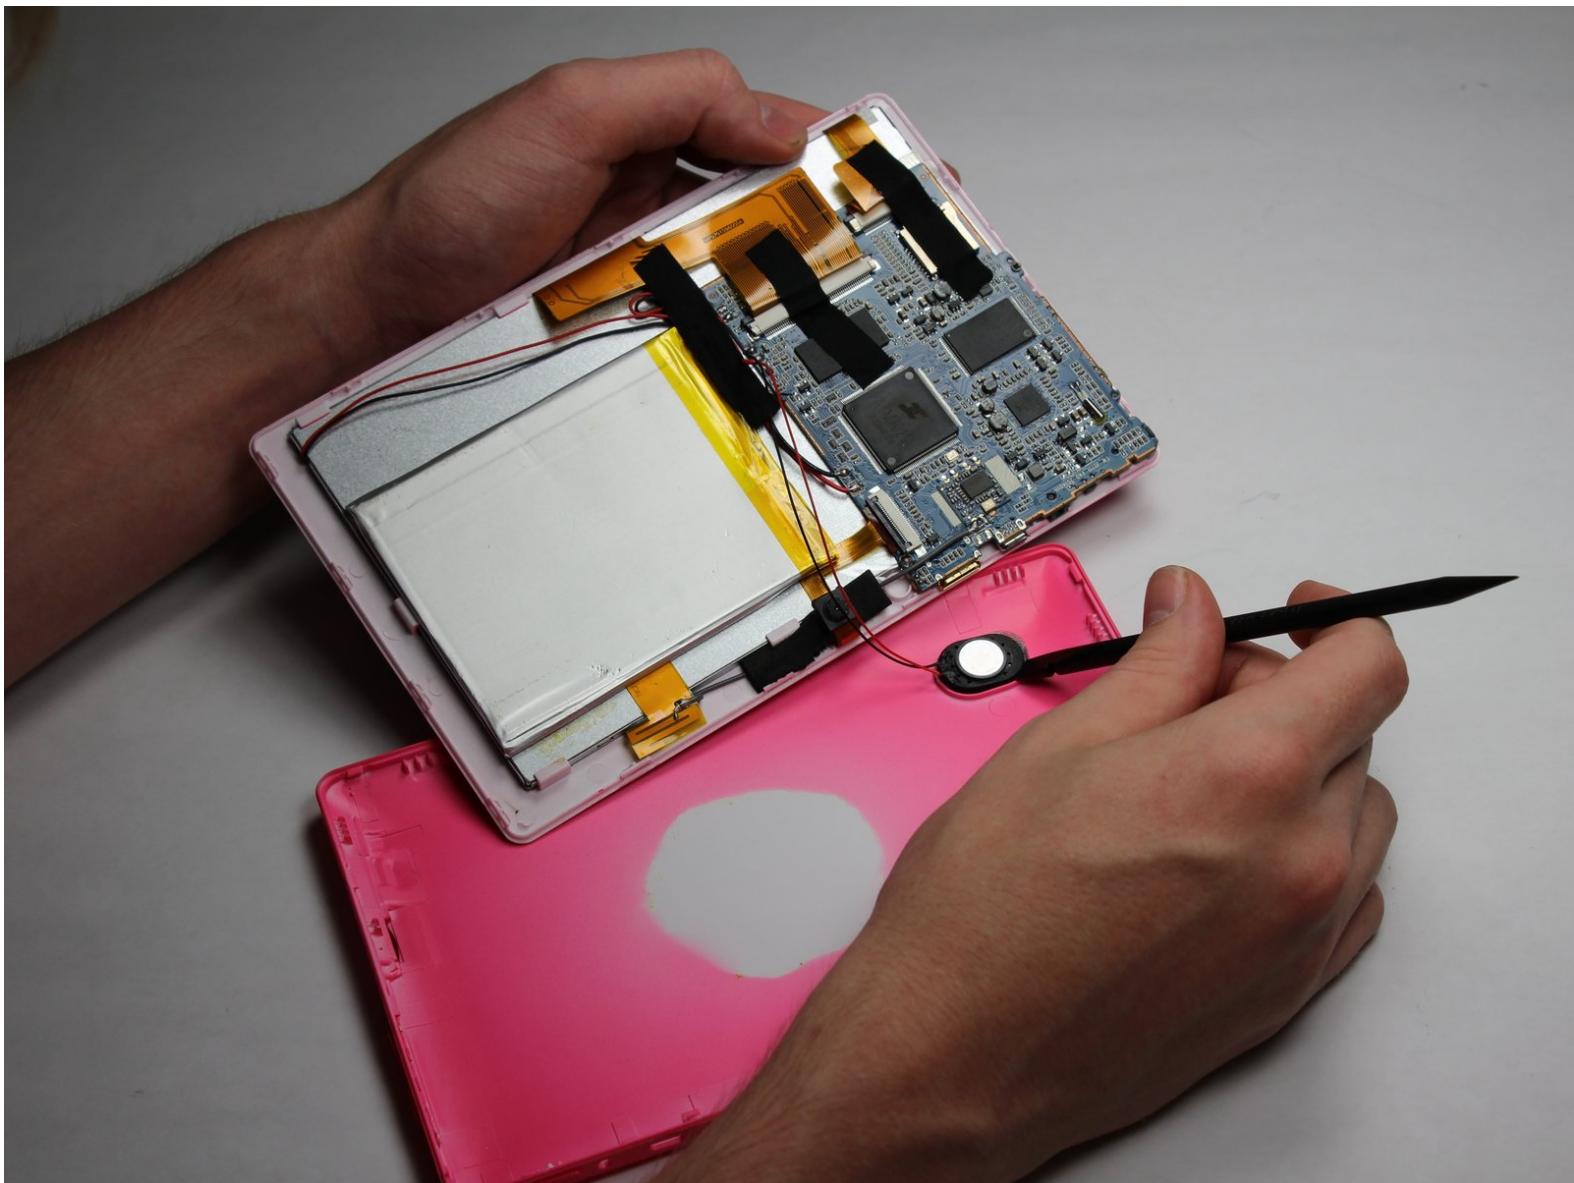

# Chromo Noria Speaker Replacement

This guide will help you remove or replace the speaker on your Chromo Noria.

Written By: Ryan Rho



## INTRODUCTION

This guide will help you get your speaker working again if it has stopped working. All you need is the necessary tools and some time and your device's speaker will work again!

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Heavy-Duty Spudger](#) (1)
- [Soldering Iron](#) (1)

## Step 1 — Back Panel




- Insert your Plastic Opening Tool into the crease between the front panel and back panel.
- Slide the Opening Tool around the entire device. As you progress, you should see the device open.

## Step 2

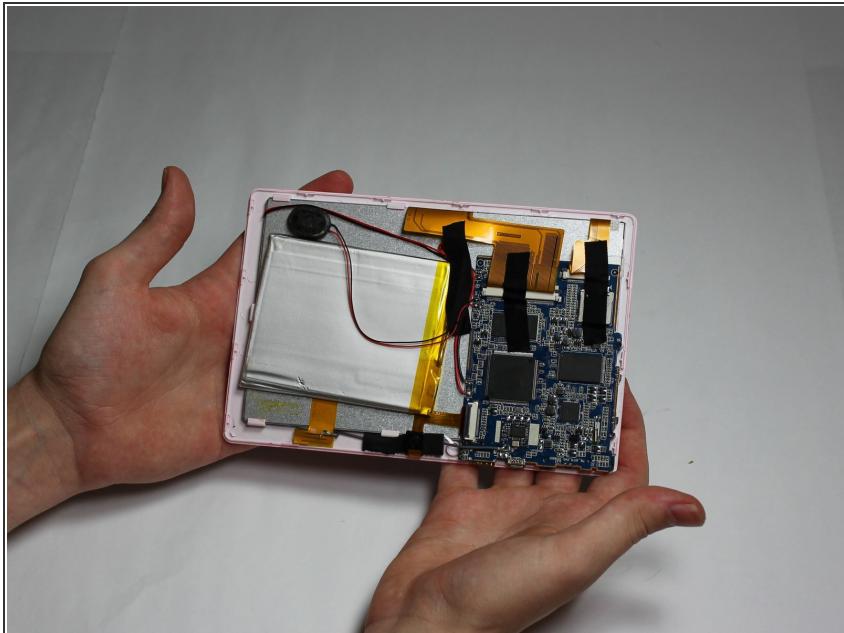



- Carefully turn the device over.
- Lay the back panel aside so you can see the device's parts.

## Step 3 — Speaker

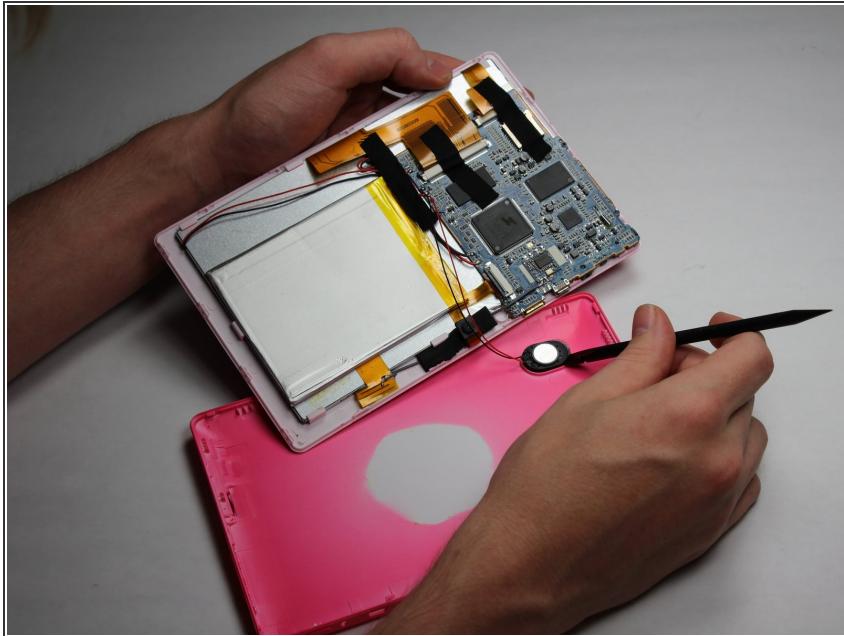


- Using your spudger tool, remove speaker from the backboard.

## Step 4

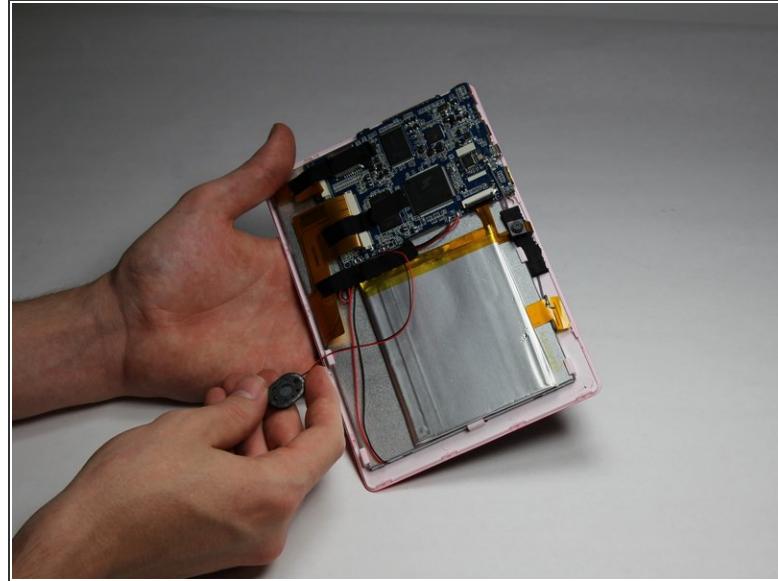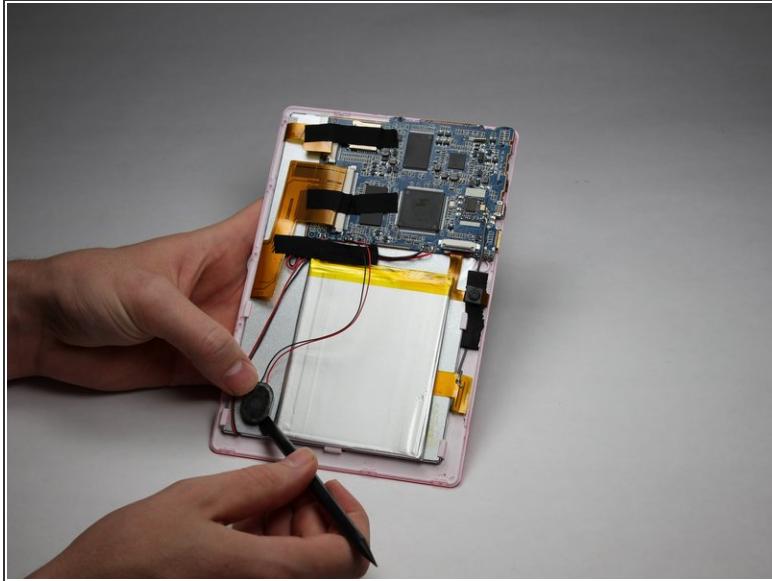

- Using the spudger tool, detach the speaker from the back of the screen.

## Step 5

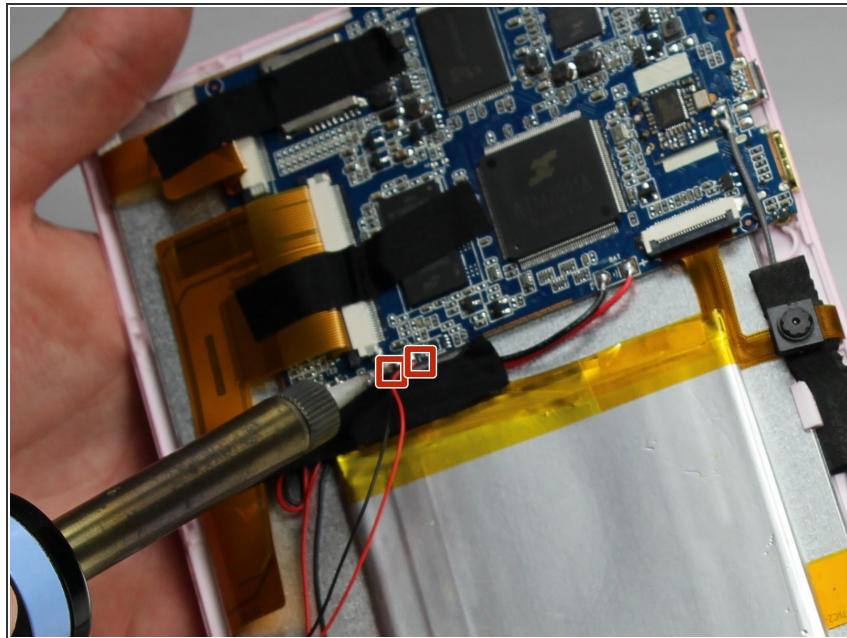

⚠ Soldering irons get very hot! Be careful when handling one. If you'd like a tutorial on how to use one, click [here](#).

- Using a Soldering Iron, desolder both wires from the motherboard.

To reassemble your device, follow these instructions in reverse order.