



Cisco Aironet 1242 Dissassembly

Cisco Aironet 1242ag Access Point

Written By: Eneider Colina




INTRODUCTION

Disassembly guide for Cisco Aironet 1242ag Access Point

TOOLS:


- [New Item \(1\)](#)
- [Spludger tweezers \(1\)](#)

Step 1 — Remove the screws

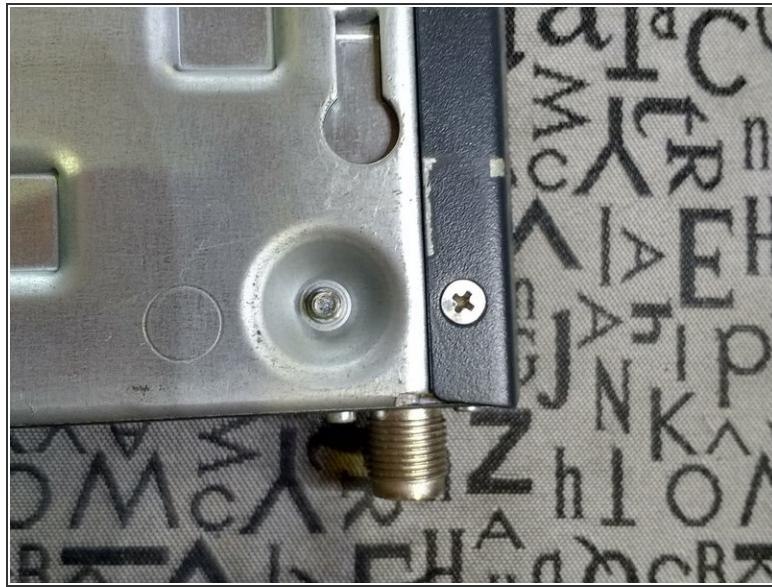

- (i) The equipment cover is held by 4 screws.

Step 2 — Removing the cover

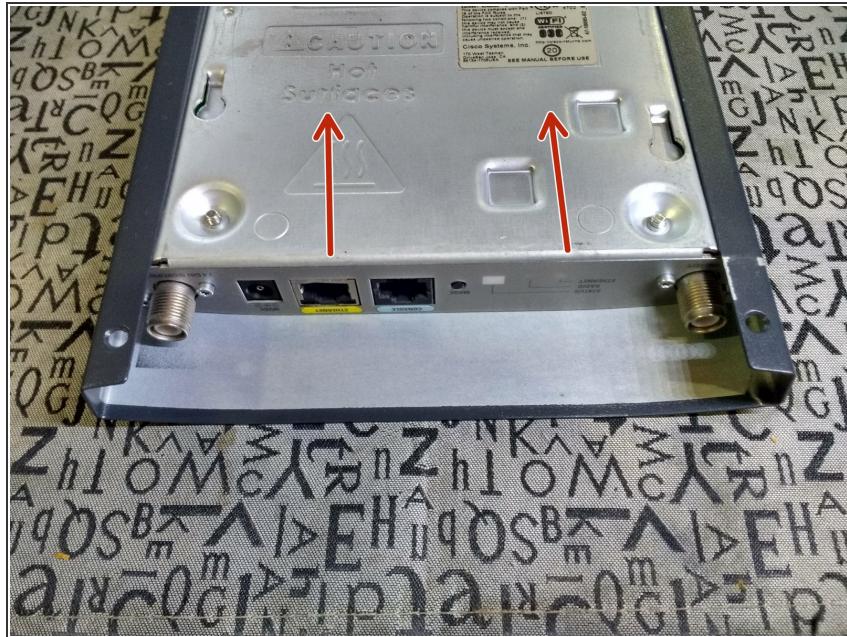

- Once the 4 screws are removed, push to the side to remove the cover.

Step 3 — Disassembling the main board



- The card is attached to the bottom plate by 4 screws

⚠ Before removing the logic board, disconnect the antenna cables in both parts of the device.

- **i** There is a total of 4 cables. Use a tweezer or a spudger to disconnect them.

Step 4 — Device disassembled



- Write the wisdom here.

To reassemble your device, follow these instructions in reverse order.