



Clarke Floor Sander 07014A 2012 Dust Bag Replacement

Prereq guide only! Remove and replace the dust bag for the Clarke Floor Sander 07014A.


Written By: Arthur Shi



INTRODUCTION

Prerequisite guide only! This guide shows how to remove and replace the dust bag for the Clarke Floor Sander 07014A.

Step 1 — Dust Bag

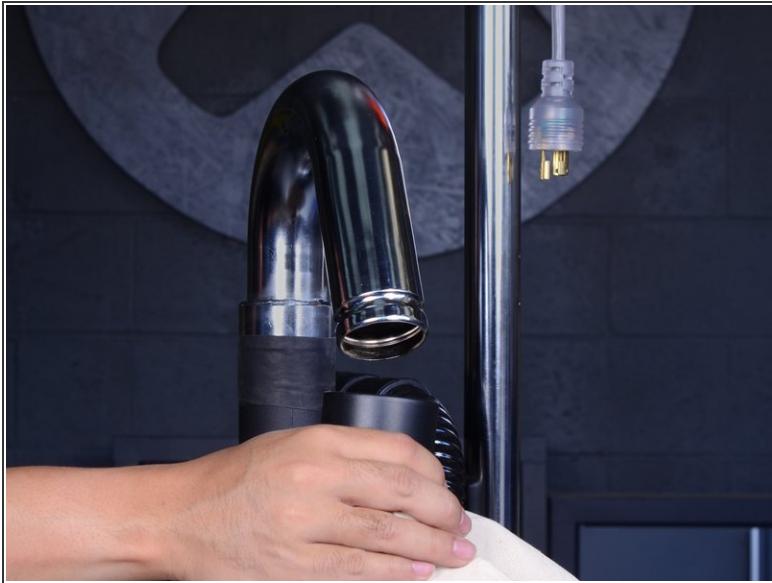

(i) Before you begin, be sure that the sander is unplugged and powered off.

- Twist and pull the dust bag collar to disconnect it from the elbow pipe.
- Remove the dust bag.

To reassemble your device, follow these instructions in reverse order.