



# Cobra 29 LTD Classic Microphone Replacement

How to remove the speaker from the Cobra 29 LTD Classic.

Written By: Chase



## INTRODUCTION

The speaker is connected to the front of the device. The speaker allows the user to communicate via the radio.

## Step 1 — Microphone



- Unscrew the cap counterclockwise on the microphone plug to disconnect the cable.

## Step 2



- Gently unplug the microphone plug.

To reassemble your device, follow these instructions in reverse order.