




Coby DVD-R11000 3-Pin Power Cable Replacement

The 3-Pin Power Cable supplies power to the device from an exterior power source such as an electrical socket.

Written By: Andrew

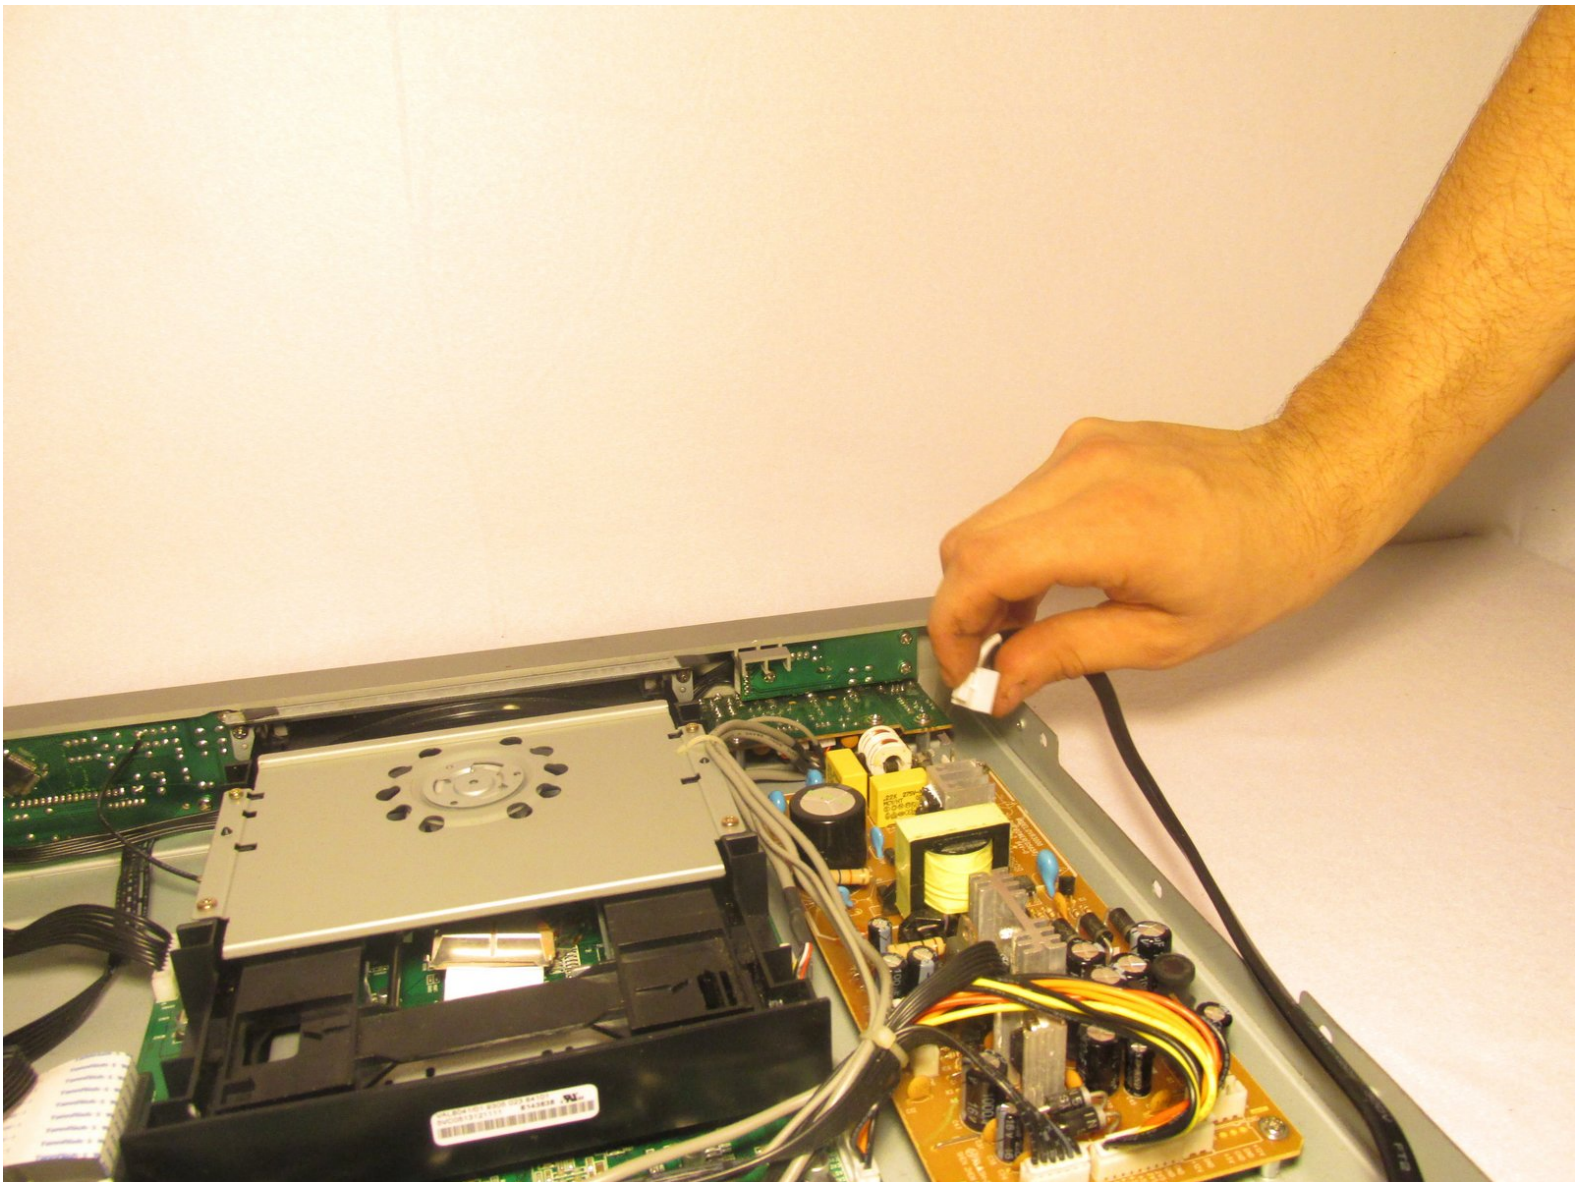


This document was generated on 2019-09-23 09:11:46 AM (MST).



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Outer Casing

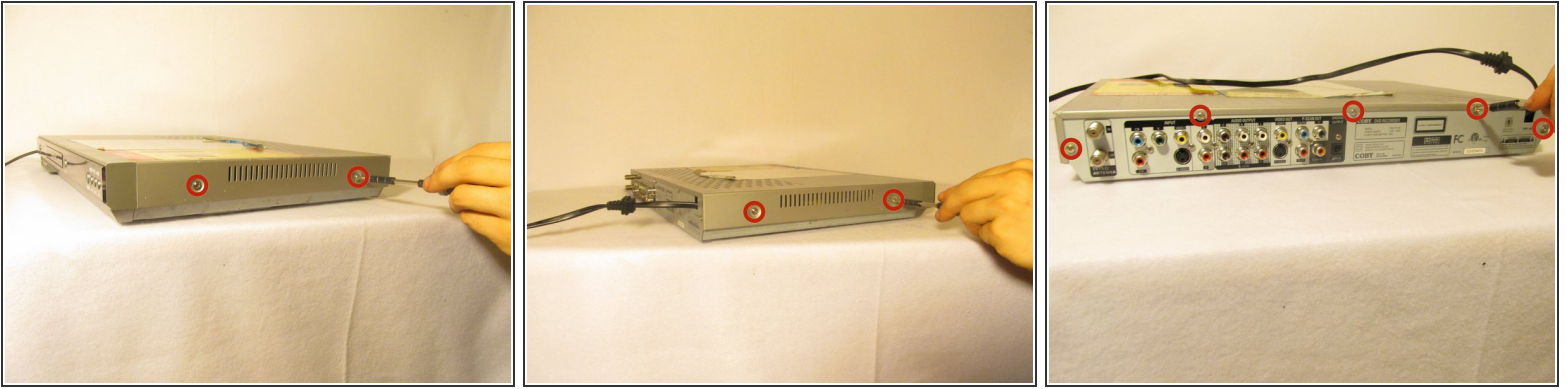



- Remove the four 1cm screws, two on each side, of the DVD player with the Phillips #1 screwdriver.
- Remove the five 1cm screws on the back of the DVD player with the Phillips #1 screwdriver.
- ⓘ It is not required to remove the other seven screws in the middle between the I/O ports.

Step 2

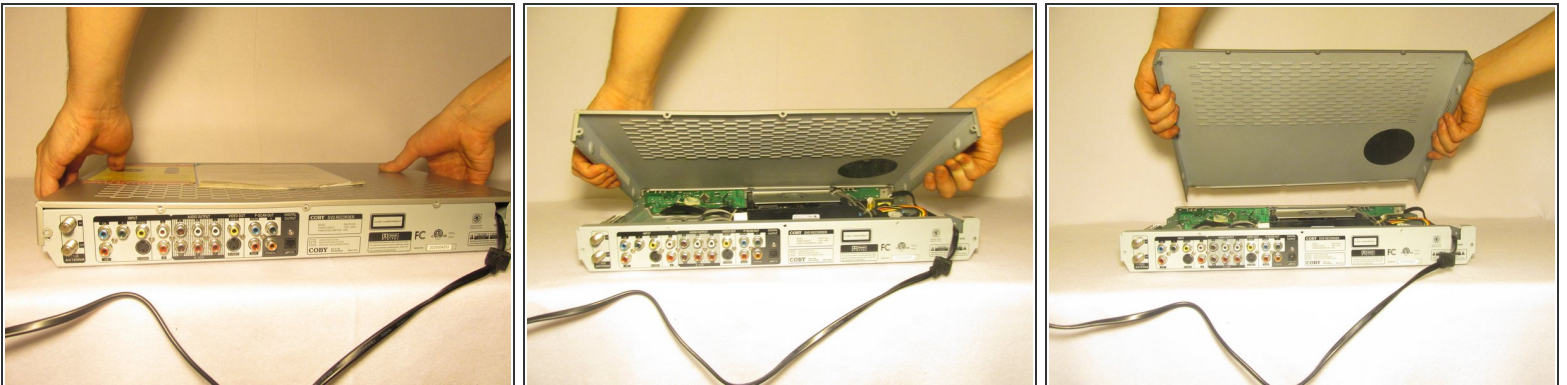

- Position the DVD player so that the back is facing you
- Grab underneath the sides of the DVD player and lift the front of it upwards.
- Carefully pull the top of the casing off

Step 3 — 3-Pin Power Cable

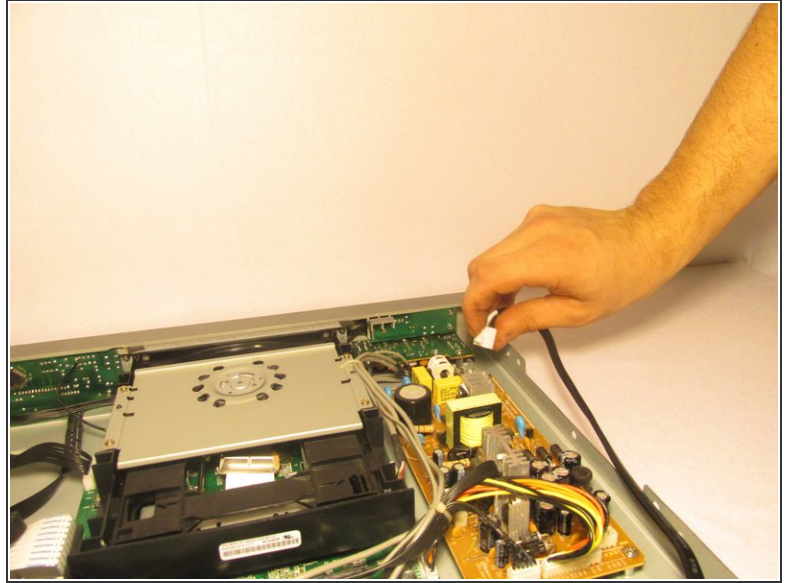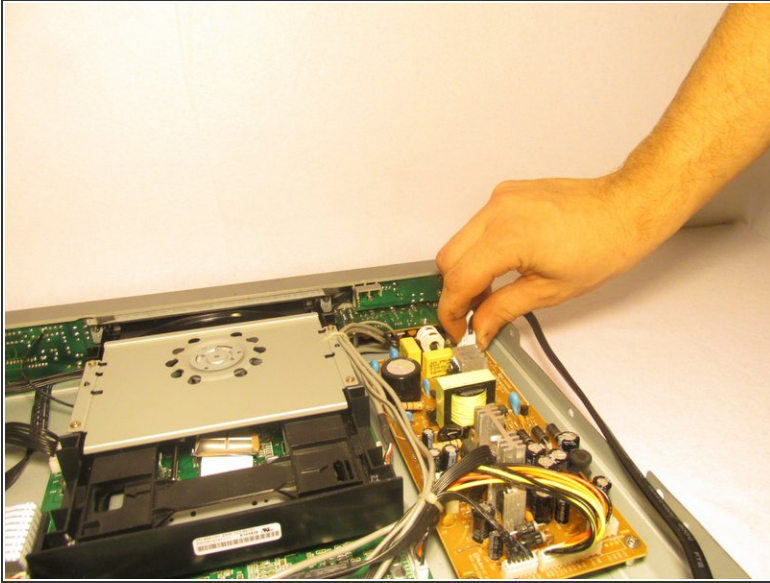

- Gently pinch the 3-pin white adapter of the wire connecting the power cord to the circuit board.
- Remove the wire from the circuit board.

To reassemble your device, follow these instructions in reverse order.