



Coby DVD209 Circuit Board for Buttons Replacement

This guide will show you how to install a new Circuit board for the play/rewind/fastforward/power buttons.

Written By: Yufay Chow



This document was generated on 2019-10-10 05:28:02 AM (MST).

 **TOOLS:**

- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

 **PARTS:**

- Circuit Board for Buttons (1)

Step 1 — The bottom portion of the DVD player



- Press the eject button to view the laser inside.
- Using the blue plastic tool and the tweezers, remove the ribbon cable.

Step 2



- Remove the six 1cm screws on the bottom of the device with the Phillips #1 screwdriver.
- ! Do not lift the top of the DVD player too quickly because there are wires attached on the inside.
- Pry the top of the device open from the right side where the buttons are located.


Step 3



⚠ When pulling the ribbon cables out, make sure not to pull by the wires, as this can cause damage to them.


- Pinch the plastic adapter with two fingers to remove the wires circled in red from the circuit board.

Step 4 — Circuit Board for Buttons

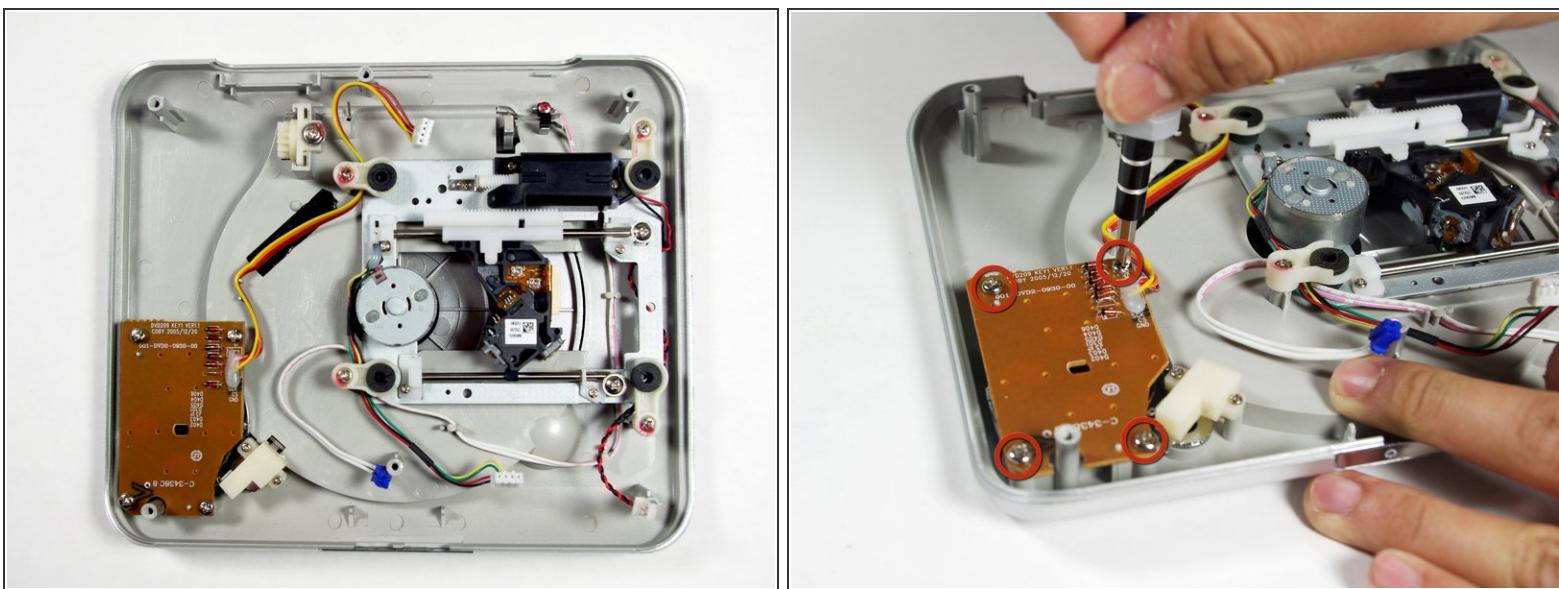

- Take the top portion of the DVD player and orient the device as shown in the first picture.
- Remove the four 0.2" screws circled in red.

Step 5

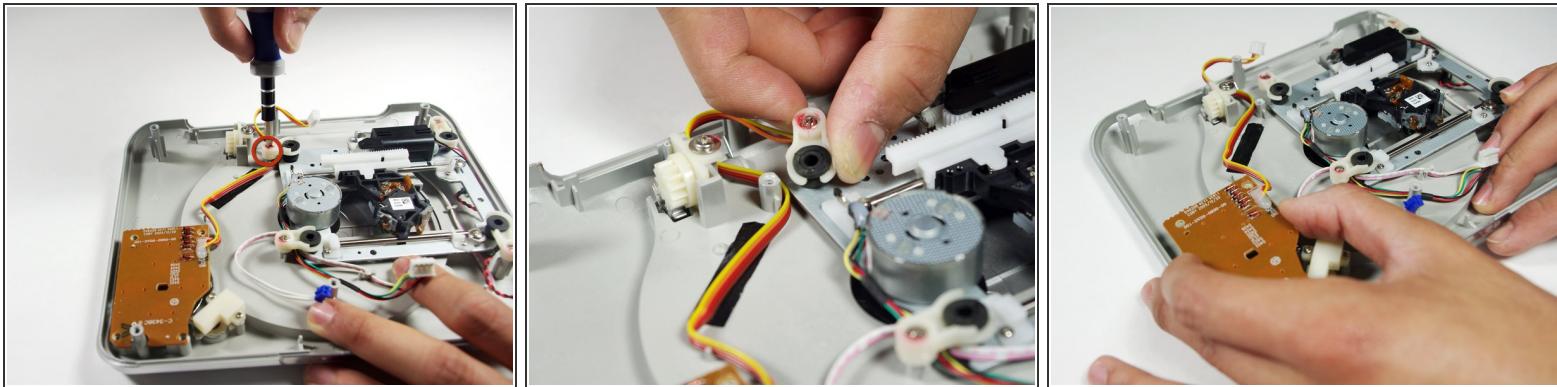

- Losen the screw circled in red.
- The screw will not come out of the plastic knob.
- Turn the plastic knob 90 degrees to the right so that the cable comes out freely.

To reassemble your device, follow these instructions in reverse order.