



Coby DVD209 The bottom portion of the DVD player Replacement

This guide will show you how to remove the bottom portion of the DVD player in order to access the internal components.

Written By: Kyle VanAllen



This document was generated on 2019-09-26 08:38:53 PM (MST).

 **TOOLS:**

- [Tweezers \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — The bottom portion of the DVD player




- Press the eject button to view the laser inside.
- Using the blue plastic tool and the tweezers, remove the ribbon cable.

Step 2



- Remove the six 1cm screws on the bottom of the device with the Phillips #1 screwdriver.
- ! Do not lift the top of the DVD player too quickly because there are wires attached on the inside.
- Pry the top of the device open from the right side where the buttons are located.

Step 3

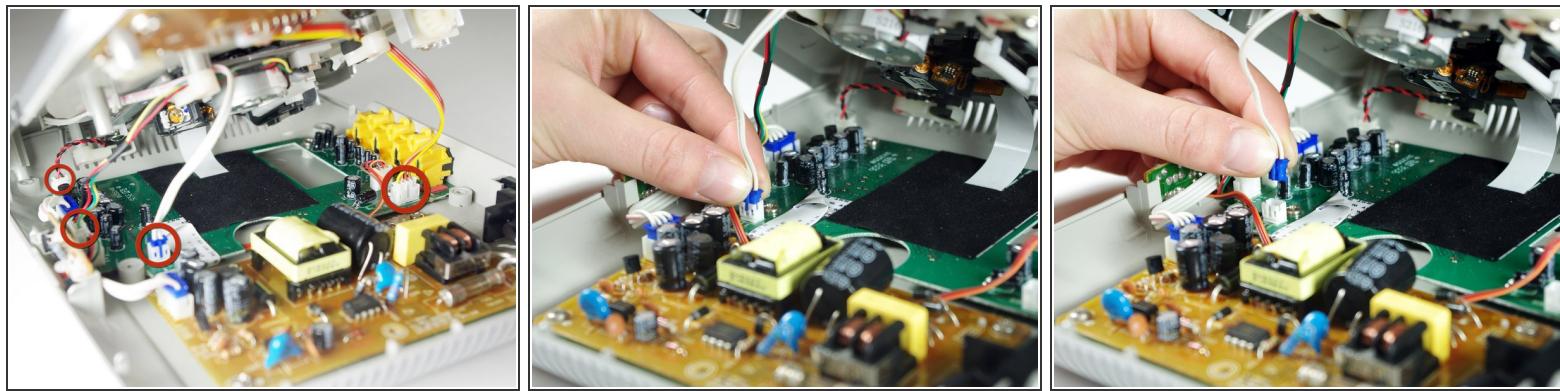

⚠ When pulling the ribbon cables out, make sure not to pull by the wires, as this can cause damage to them.

- Pinch the plastic adapter with two fingers to remove the wires circled in red from the circuit board.

To reassemble your device, follow these instructions in reverse order.