




# Coby Kyros MID9042 Speakers Replacement

This guide will walk you through the steps to replace the inner speakers in your Coby Kyros MID9042 tablet.

Written By: Samantha Rollings

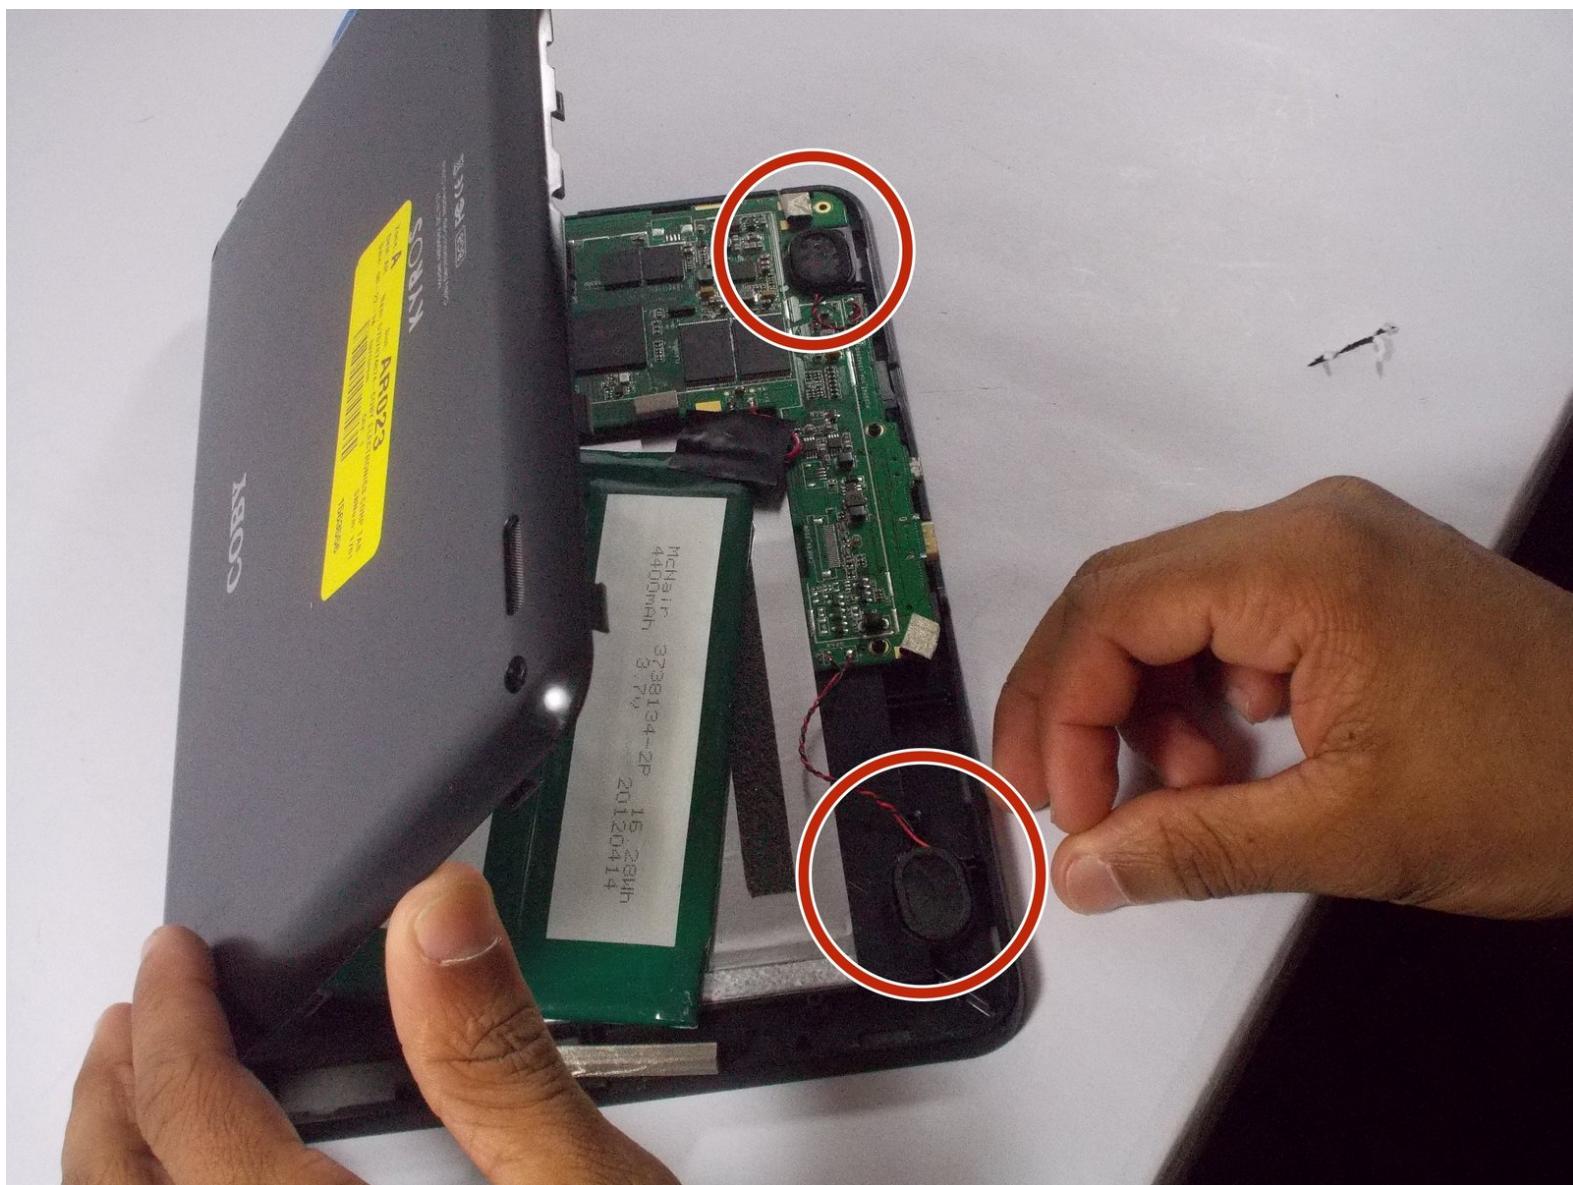

 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)


## Step 1 — Speakers



ⓘ Before taking apart the tablet, power off the device.

- Remove anti-slip pads from all 4 corners of the back of the device.
- Use Phillips #0 Precision screwdriver to remove the 4 screws from the back cover. (screws are about 1/8")


## Step 2

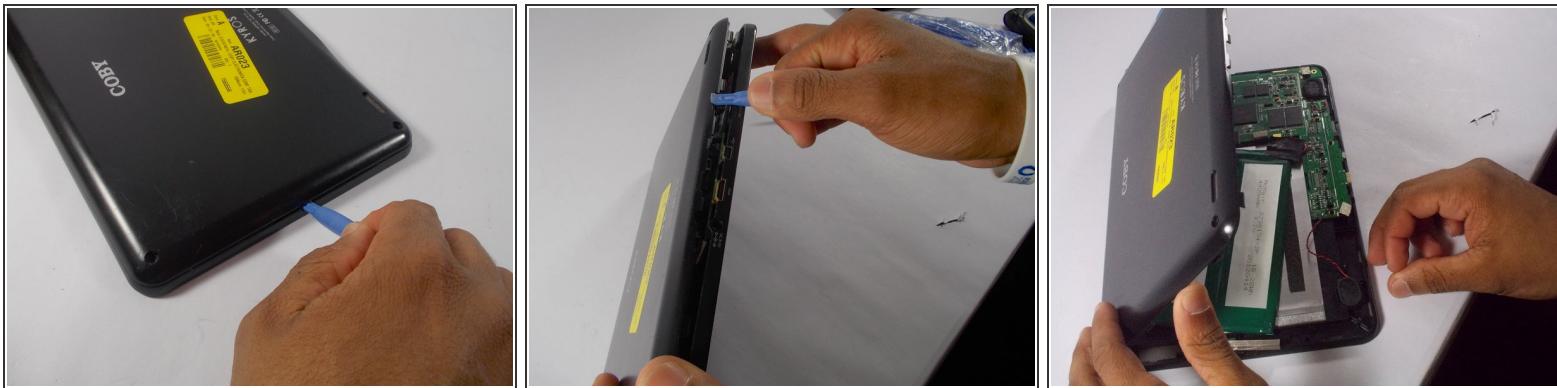

⚠ Be careful not to break the inner plastic tabs while pulling the back cover off.

- Use the blue plastic opening tool to wedge the back cover apart from the front.
- Once the edges are wedged apart, use hands to lift up the back of the tablet.

## Step 3

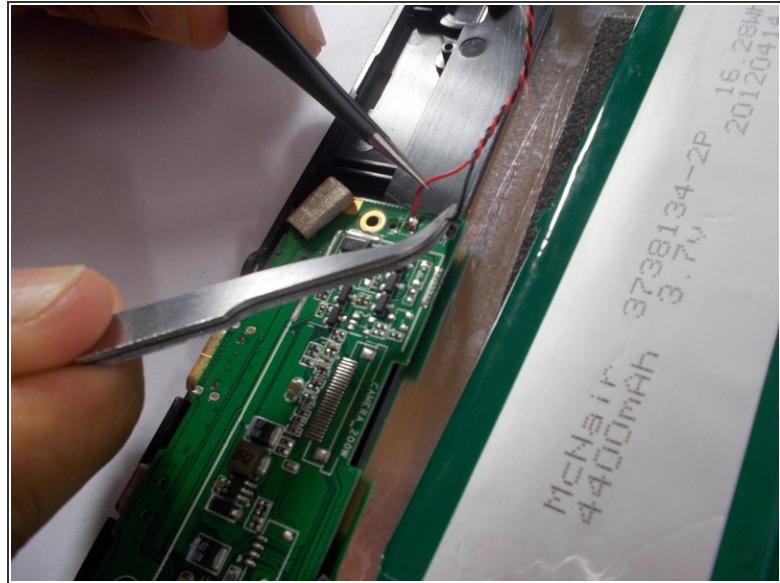

- Desolder the red and black speaker wires from the circuit board.
- Pull the speakers out of the tablet.

 Red wire connects to positive, black wire connects to negative.

To reassemble your device, follow these instructions in reverse order.