




# ComNet Ericsson Panther 600P Display Replacement

This guide will show you how to replace a non responsive or damaged screen.

Written By: Daniel

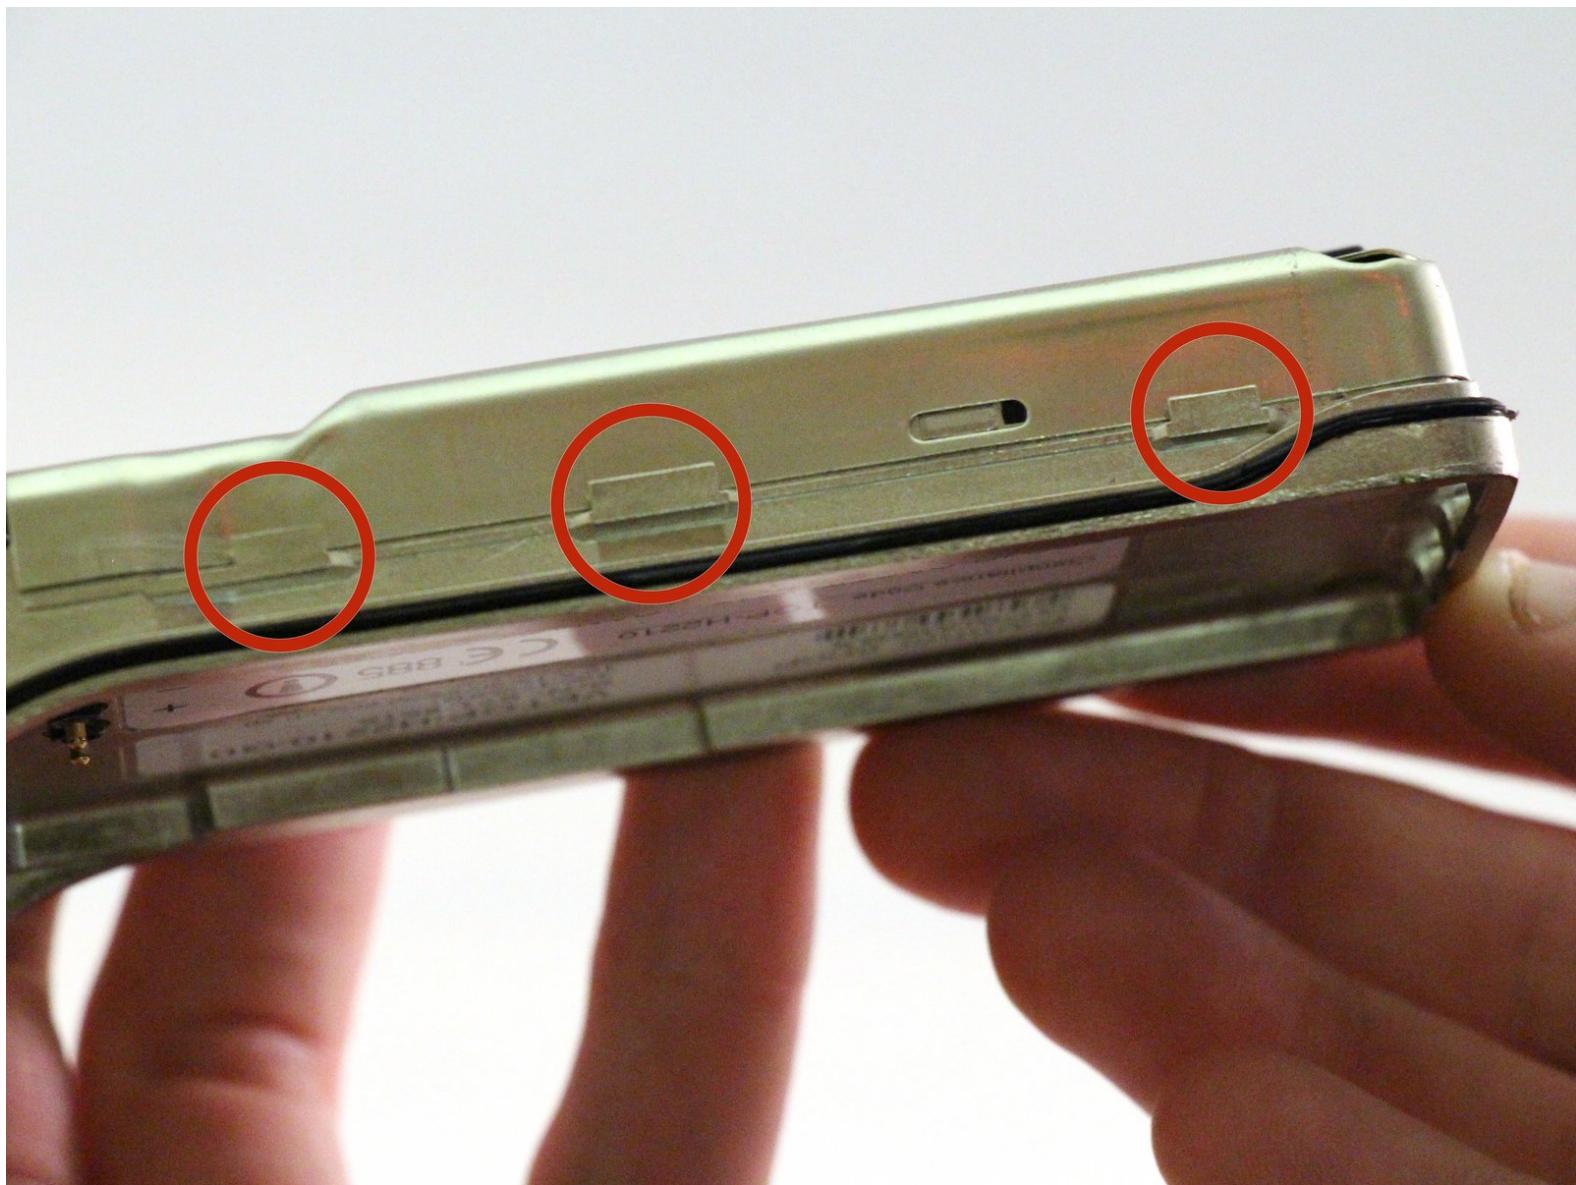

## INTRODUCTION

With a few tools, a little bit of time, and a moderate degree of commitment, you can replace a damaged display on ComNet Ericsson Panther 600P.

### TOOLS:

- [T15 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Locate the release button.



- Look for the release button on the back of the radio.
- Press the button and pull down on the battery at the same time. The battery will come free.

## Step 2 — Antenna



- Twist the antenna counter-clockwise to unscrew it from the antenna jack.

## Step 3 — Dials




- Pull up on the dials to remove them from the underlying pegs.

## Step 4 — Exterior Case




- Using a T15 Torx screwdriver, unscrew the two screws.
- Using a plastic opening tool, pry the internal case from the external case.

## Step 5 — Front Case - Internal

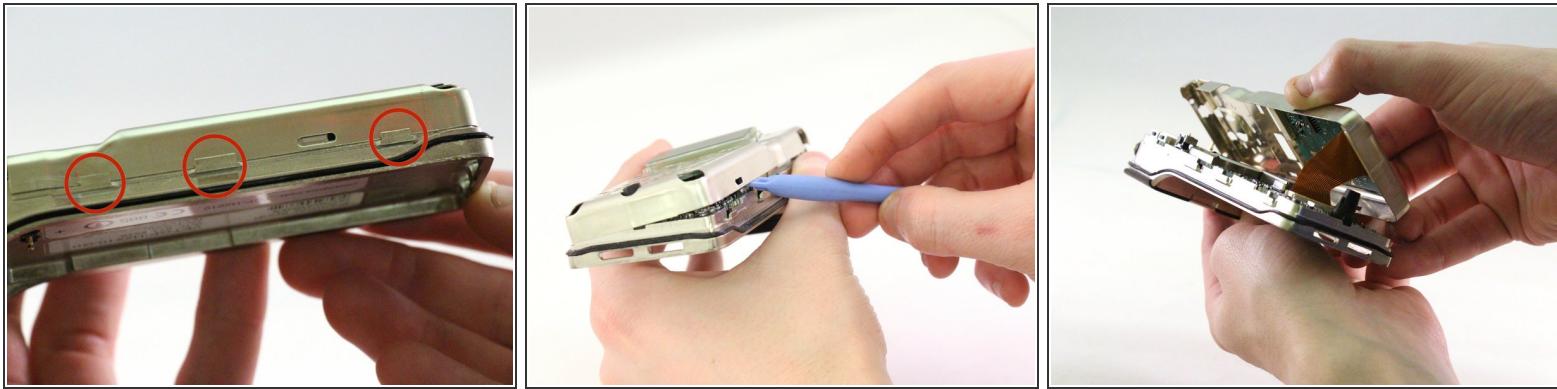

- Using the plastic opening tool, pry the case apart.

## Step 6 — Ribbon

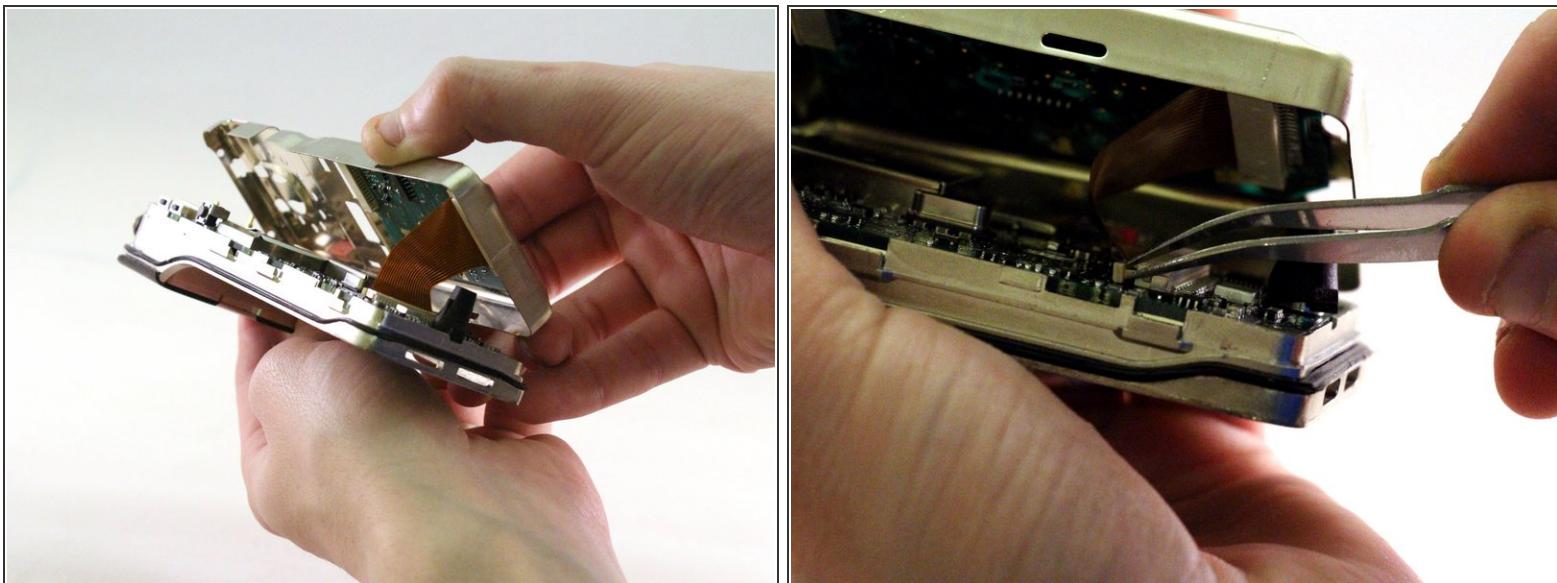

*(i)* The keypad chip is attached to the motherboard by a ribbon.

- Pull ribbon with tweezers to detach from back panel.

## Step 7 — Screen



- ⓘ Screen will be attached by a ribbon.
- Pull screen up and away from motherboard to detach.

To reassemble your device, follow these instructions in reverse order.