



ComNet Ericsson Panther 600P Speaker Replacement

This guide will show you how to remove the speaker from the ComNet Ericsson Panther 600P.

Written By: Kellan Sells



INTRODUCTION

Speakers will sometimes rupture from extended periods of high volume. Speakers may also malfunction due to old age. Without a speaker, many devices can not be used. This guide helps you replace the speakers for the ComNet Ericsson Panther 600P.

TOOLS:

- [T15 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Locate the release button.



- Look for the release button on the back of the radio.
- Press the button and pull down on the battery at the same time. The battery will come free.

Step 2 — Antenna



- Twist the antenna counter-clockwise to unscrew it from the antenna jack.

Step 3 — Dials



- Pull up on the dials to remove them from the underlying pegs.

Step 4 — Exterior Case



- Using a T15 Torx screwdriver, unscrew the two screws.
- Using a plastic opening tool, pry the internal case from the external case.

Step 5 — Speaker



- Locate the device's speaker inside the front panel of the exterior case.
- Locate the display and speaker stabilizer.
- Lift the stabilizer up from the bottom and pull the stabilizer out of case.

Step 6



- Locate the two 3.75mm screws holding the speaker to the exterior case.
- Using a T15 Torx screwdriver, unscrew the 3.75mm screws.

Step 7



- Lift up on the bottom of the speaker to detach the speaker.
- Pull the speaker out of the case.

To reassemble your device, follow these instructions in reverse order.