



Compaq Mini 110 RAM Replacement

Remove or replace RAM in the Compaq Mini 110.

Written By: alea



INTRODUCTION

Use this guide to access and replace your RAM. Disconnect all power sources and remove the battery pack before beginning this repair.



TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

PARTS:


- [PC2-5300 1 GB RAM Chip \(1\)](#)
- [PC2-5300 2 GB RAM Chip \(1\)](#)

Step 1 — RAM

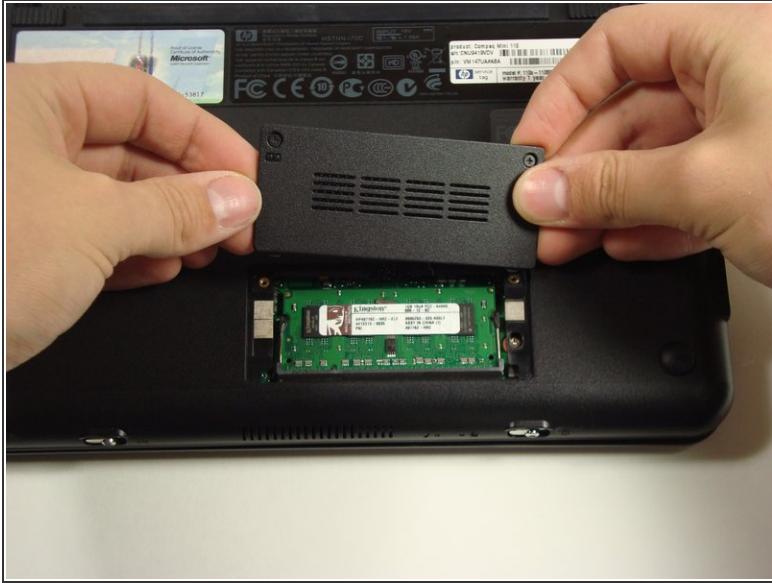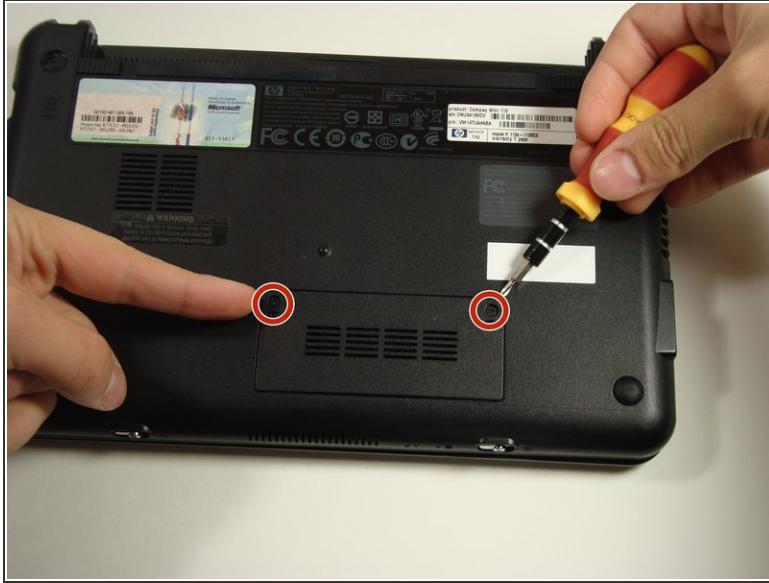

- Unscrew the two screws on the bottom of the laptop covering the memory compartment.
- *i* The screws are attached to the panel.

Step 2

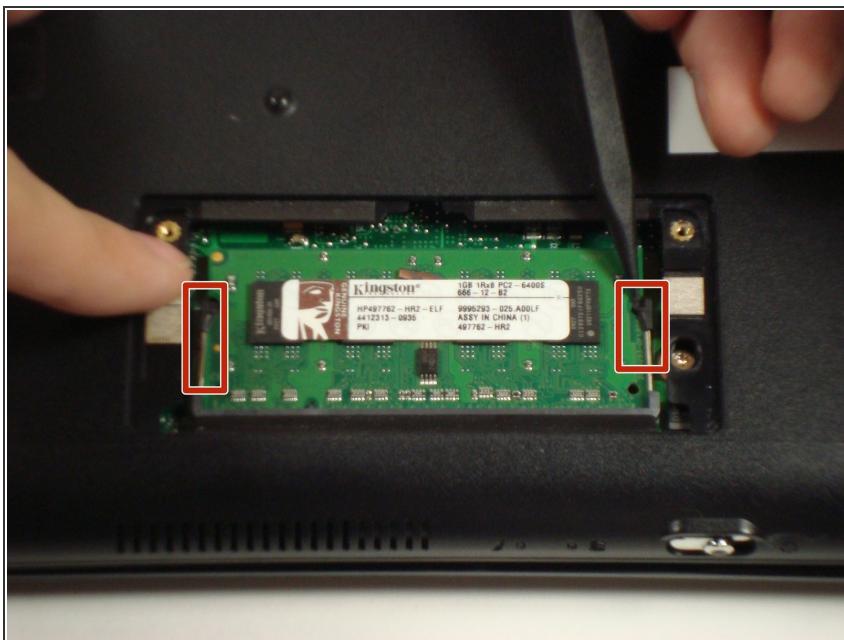

- Push out side tabs.

To reassemble your device(possibly install a new RAM), follow these instructions in reverse order.