



Compaq Presario V2414NR RAM Replacement

Prerequisite

Prerequisite Only: In this prerequisite guide, you'll remove the RAM cover, in order to access the components underneath: the RAM and WiFi card.

Written By: Ryan Schmidt



This document was generated on 2019-10-30 03:11:28 PM (MST).

INTRODUCTION

Removing this panel allows access to the internal components of the computer. Under it, you will find the RAM, as well as the screw holding down the WiFi card cover.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery



- Shutdown the computer.
- Remove all external devices.
- Unplug the power, and any other cords, from the laptop.
- Turn the laptop upside down, with the front towards you.

Step 2



- Slide the battery release latch to the left until the battery pops up.
- Lift the front edge of the battery pack and swing it back to remove it.

★ When reassembling, first align the back of the battery with the chassis, then press the front downwards until it latches.

This document was generated on 2019-10-30 03:11:28 PM (MST).

Step 3 — RAM Cover



- Loosen the two 5mm Phillips #1 screws that secure the memory module compartment cover to the computer.
(i) These screws are captured to the cover panel.
- Lift the front edge of the memory module compartment cover and swing it back to remove it.

To reassemble your device, follow these instructions in reverse order.